WINNERS ONLY® Assembly Instructions

DF53247W / DF53247F / DP53247 / DB53247

Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment.

COMPONENT LIST:

HARDWARE LIST:

PART NO	FIGURE	DESCRIPTION	QTY	PART NO	FIGURE	DESCRIPTION	QTY
DF53247W-01/ DF53247F-01 DP53247-01 DB53247-01	002	Hardware Bag	1 pce	1	O	Hex Bolt	8 pcs
DF53247W-13/ DF53247F-13		Table Top	1 pce	2	©	Lock Washer	8 pcs
DP53247-13 DB53247-13				3	0	Flat Washer	8 pcs
DF53247W-07/ DF53247F-07 DP53247-07	EM D	Legs	4 pcs	4		Wrench	
DB53247-07							1 pce


This product will take 15-20 minutes to assemble.

Reminders

- 1.Use only the hardware supplied.
- 2.Once the product is assemble, level and tighten all the bolts.
- 3.Do not over-tighten bolts.
- 4. This item may require periodic tightening

NOTE:

- 1.Two or two people are needed for assembly
- 2 please keep all hardware parts out of the reach of children.

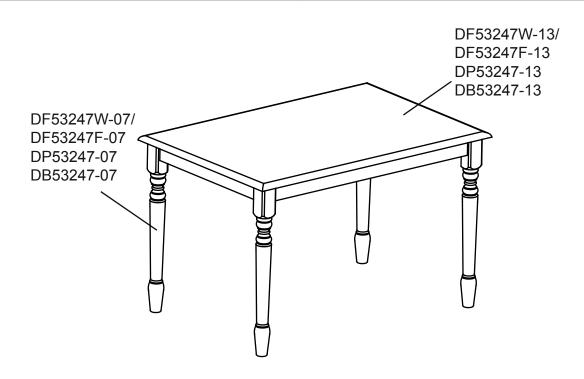


WINNERS ONLY® Assembly Instructions

DF53247W / DF53247F / DP53247 / DB53247

ASSEMBLY:


STEP 1

- 1.1-Turn the Table Top upside down on a soft protective surface such as carpet or other soft material.
- 1.2- Attach the Table leg to the corner of the apron using the provided hardware as shown in Fig 1.
- 1.3- Repeat Step1.2 for the 3 remaining Table legs.

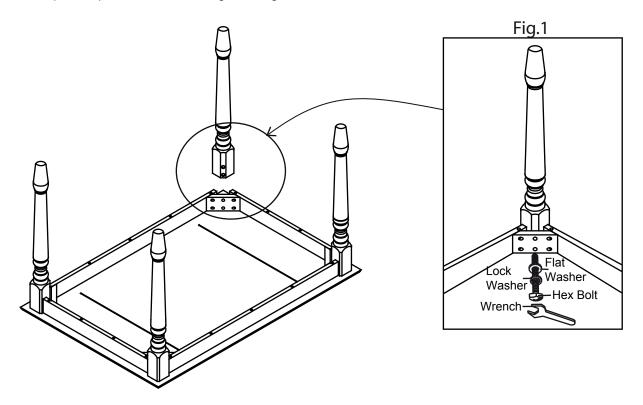

STEP 2

- **2.1** Turn table to uprigtht position.
- 2.2- Once table is fully balance fully tighten all bolts.

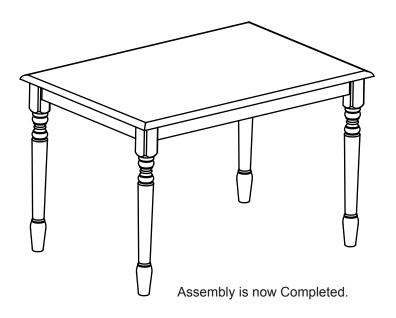

CARE INSTRUCTION

- ~ Be sure to use the same type of polish consistenly. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.
- ~ Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.