

homestyles®


5675-90C Ottoman

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

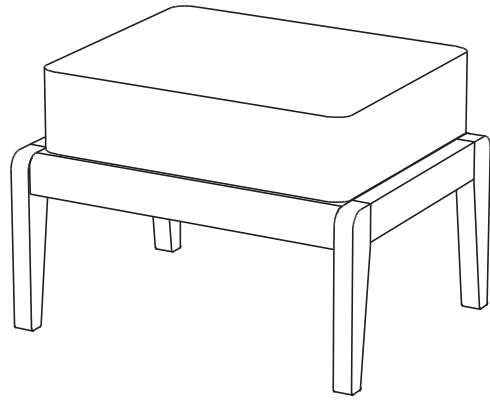

Part List

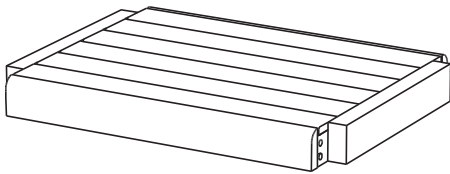


A.
Seat
1 pc.



B.
Leg
2 pcs.




C.
Leg
2 pcs.

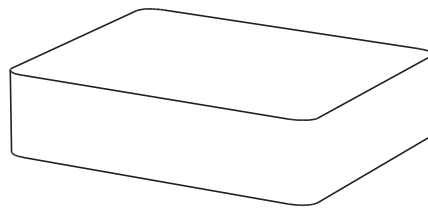

D.
Cushion
1 pc.


Hardware List

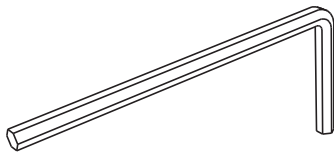

Hex Wrench
1 pc.



Small
Hex Wrench
1 pc.



M6x45
Head Cap Bolt
8 pcs. (+1 extra)



Spring Washer
8 pcs. (+1 extra)




Flat Washer
8 pcs. (+1 extra)

Assembly Instructions 2/3

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

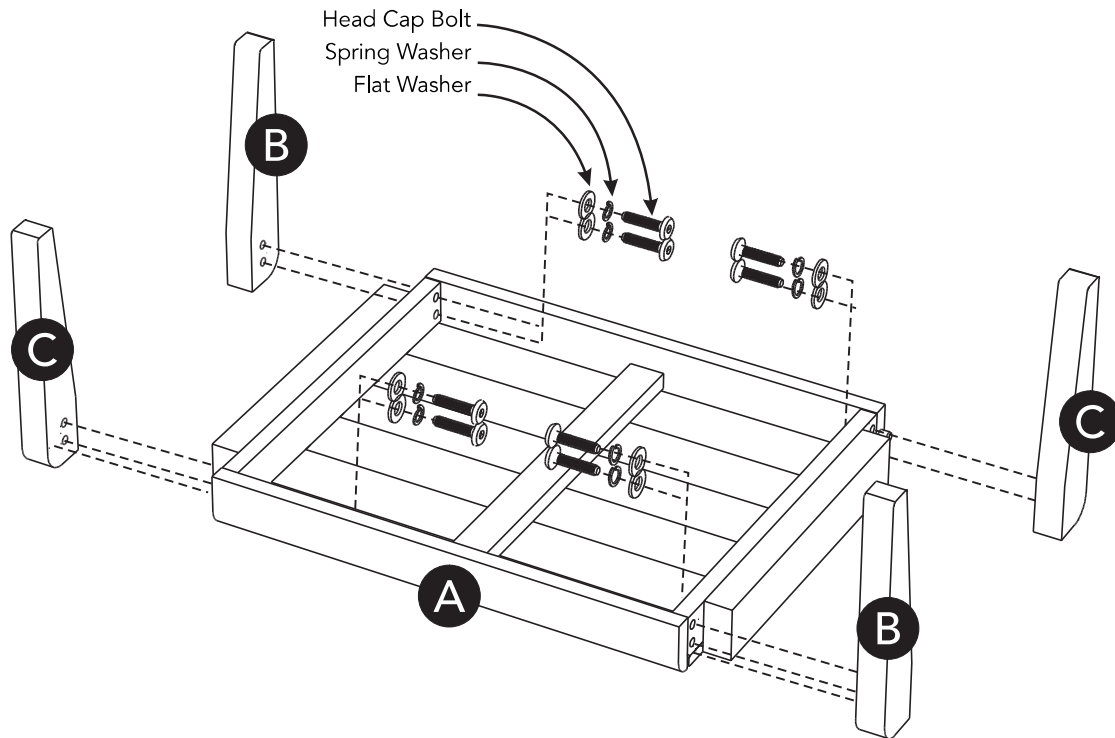

STEP 1

Attach Legs (B) and (C) to Seat (A) with Head Cap Bolts, Spring Washers and Flat Washers, tightening bolts only halfway.

Tighten all bolts use in this step.
(See Figure 1)


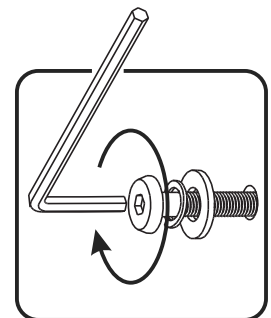



Figure 1

Assembly Instructions 3/3

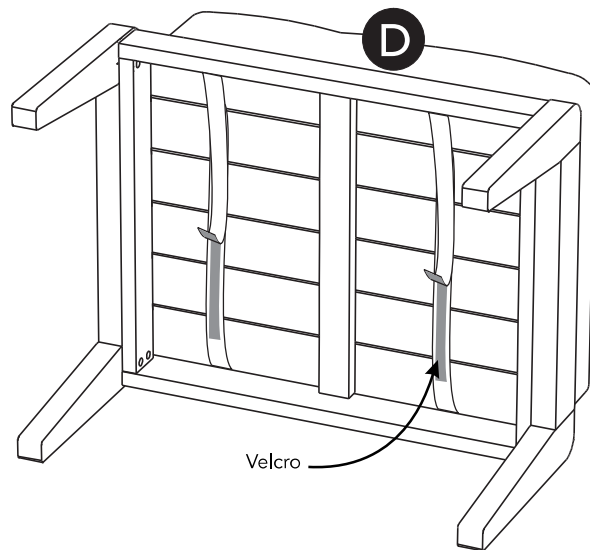

STEP 2

Use velcro on Cushion (D) to attach to unit.

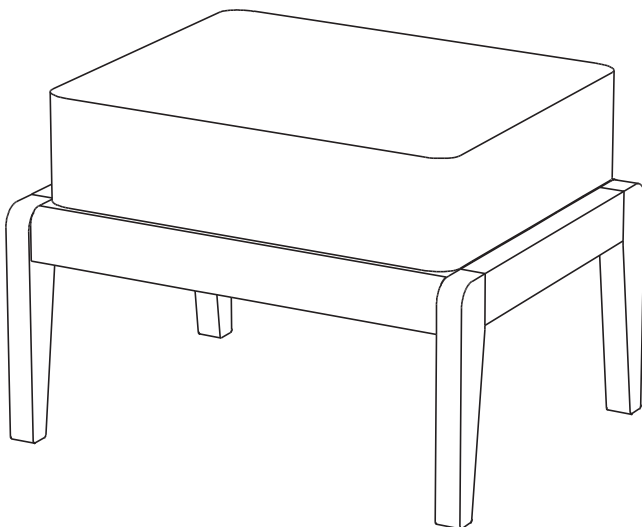

STEP 3

Turn unit to its upright position.