NOTE: IT IS VERY IMPORTANT TO **READ AND FOLLOW THE DIRECTIONS** IN THE INSTALLATION INSTRUCTIONS **BEFORE PROCEEDING WITH THIS REAR WALL TEMPLATE.**

This Rear Wall Template serves to position the bottom mounting plate and to locate the horizontal exhaust outlet.

- 1. Use a level to check that the template is positioned accurately.
- 2. Locate and mark at least one stud on the left or right side of the centerline.

NOTE: It is important to use at least one wood screw mounted firmly in a stud to support the weight of the microwave. Mark two additional, evenly spaced locations for the supplied toggle bolts. 3. Drill holes in the marked locations. Where there is

a stud, drill a 3/16" hole for wood screws. For holes that do not line up with a stud, drill 5/8" holes for toggle bolts.

NOTE: DO NOT INSTALL THE MOUNTING PLATE AT THIS TIME.

- 4. Remove the template from the rear wall.
- 5. Review the Installation Instruction book for your installation situation.

Darle vuelta a la hoja para consultar la versiónen Espa⊠oĺ.

F. CUT OUT FOR HORIZONTAL OUTSIDE EXHAUST

12"

CUT HOLE THROUGH REAR WALL FOR EXHAUST ADAPTOR

CAUTION - IF EXHAUST ADAPTOR IS POSITIONED OUTSIDE RECOMMENDED DIMENSION, GREASE-LADEN AIR WILL DISCHARGE INTO HOUSE STRUCTURE.



Locate and mark holes to align with holes in the mounting plate. **IMPORTANT:** LOCATE AT LEAST ONE STUD ON EITHER SIDE OF THE CENTERLINE. MARK THE LOCATION FOR 2 ADDITIONAL, EVENLY SPACED TOGGLE BOLTS IN THE MOUNTING PLATE AREA.

 \bigcirc

 \bigcirc

 \bigcirc

 \bigcirc

Trim the rear wall template along the dotted line.


Trim the rear wall template along the dotted line.


REAR WALL TEMPLATE

Locate and mark holes to align with holes in the mounting plate.

IMPORTANT: LOCATE AT LEAST ONE STUD ON EITHER SIDE OF THE CENTERLINE.

MARK THE LOCATION FOR 2 ADDITIONAL, EVENLY SPACED TOGGLE BOLTS IN THE MOUNTING PLATE AREA.

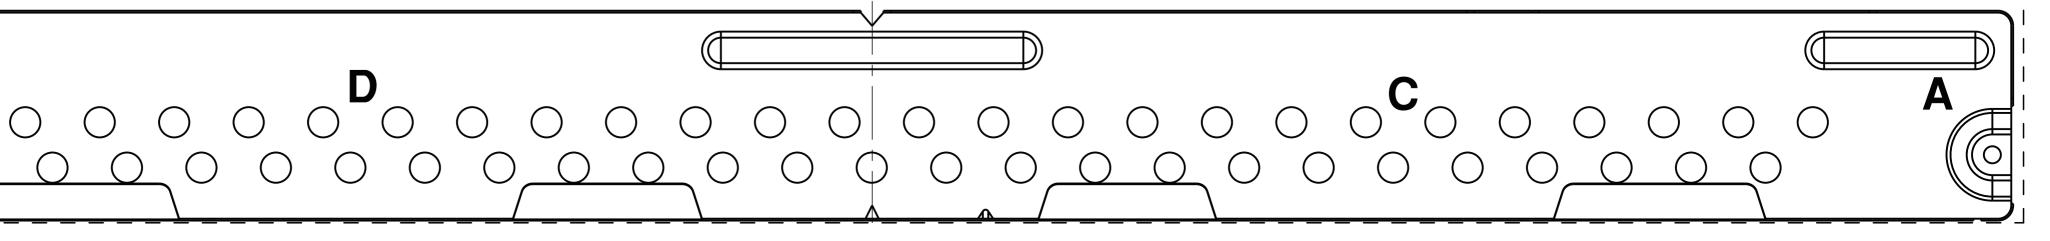

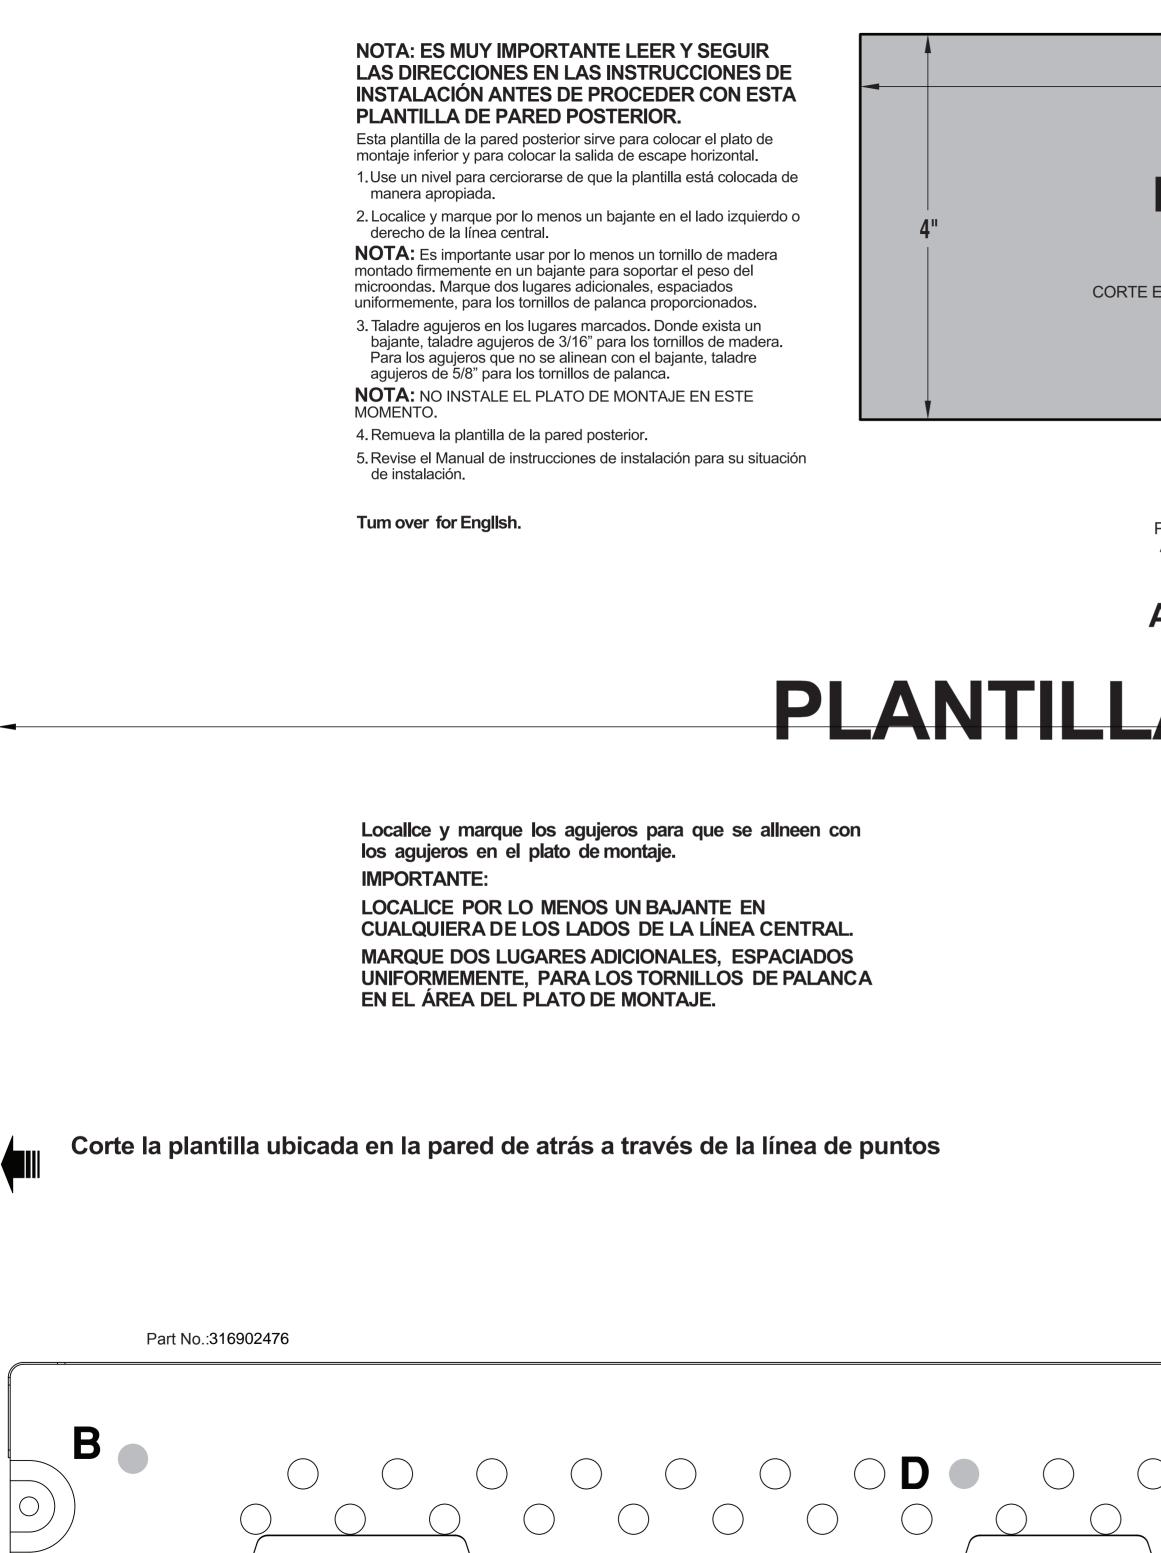

- 12"

Corte la plantilla ubicada en la pared de atrás a través de la línea de puntos

F. CORTE PARA EL ESCAPE HORIZONTAL EXTERNO

CORTE EL AGUJERO A TRAVÉS DE LA PARED POSTERIOR PARA EL ADAPTADOR DE ESCAPE

PRECAUCIÓN - SI EL ADAPTADOR DE ESCAPE ESTÁ COLOCADO MÁS ALLÁ DE LAS DIMENSIONES RECOMENDADAS, AIRE CARGADO CON GRASA SE DESCARGARÁ HACIA LA ESTRUCTURA DE LA CASA.

ANCHO MÍNIMO DE 30" REQUERIDO

PLANTILLA DE PARED POSTERIOR

Localice y marque los agujeros para que se alineen con los agujeros en el plato de montaje. IMPORTANTE:

С

LOCALICE POR LO MENOS UN BAJANTE EN CUALQUIERA DE LOS LADOS DE LA LÍNEA CENTRAL. MARQUE DOS LUGARES ADICIONALES, ESPACIADOS UNIFORMEMENTE, PARA LOS TORNILLOS DE PALANCA EN EL ÁREA DEL PLATO DE MONTAJE.



:261800308463

