











# ASSEMBLY INSTRUCTIONS

## CROWN MARK MODEL : B1660 QUEEN BED




(BOX 1)  
BOX OF HEADBOARD

NO	ITEM	QTY
A	Headboard 	1PC
B	K/D Legs (L&R) 	2PCS
C	Stretcher 	1PC


(BOX 1)  
HARDWARE LIST


NO	ITEM	QTY
1	Ø5/16"-18 x 2" L 	10 SET
2	4mm 	1 PC
3	Ø5/16"X3-1/2" 	8 PCS
4	Ø5/16" 	8 PCS
5	Ø5/16" 	8 PCS
6	12mm 	1 PC
7	1-3/16" 	8 PCS

(BOX 2)  
BOX OF FOOTBOARD

NO	ITEM	QTY
D	Footboard 	1PC
E	Slats 	4PCS
F	Support legs 	4PCS

(BOX 3)  
BOX OF SIDE RAIL

NO	ITEM	Q'TY
G	Side rails 	2PCS

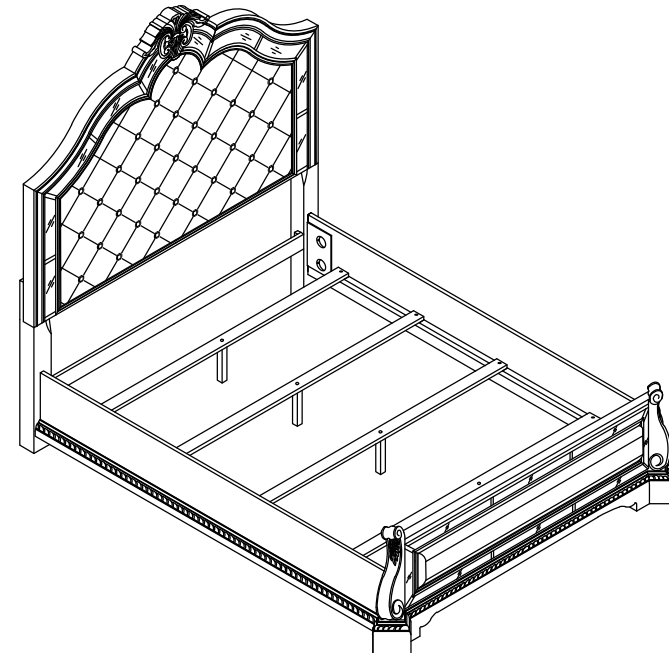


NOTE : DURING ASSEMBLY, DO NOT FULLY TIGHTEN  
ANY HARDWARE UNTIL THE COMPLETE  
UNIT HAS BEEN ASSEMBLED.


THE HARDWARE IS LOCATED IN THE PACKING ITEMS

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREWS WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.


# STEP 1

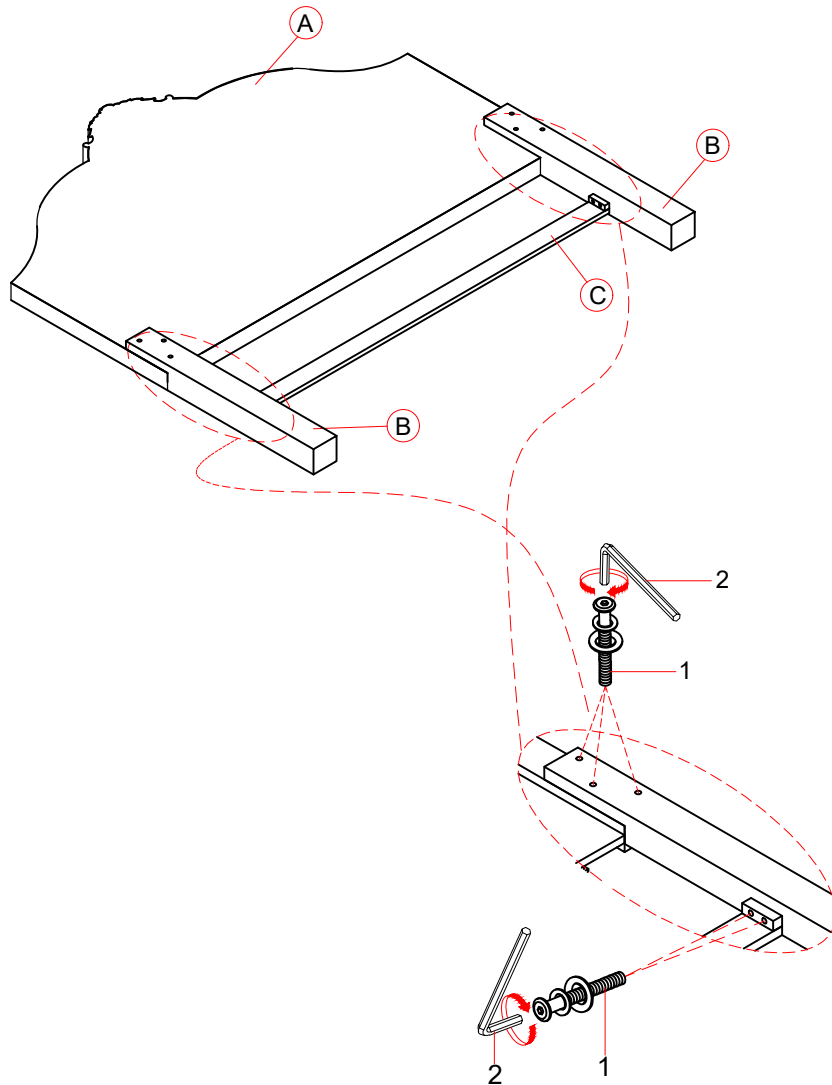

# STEP 2

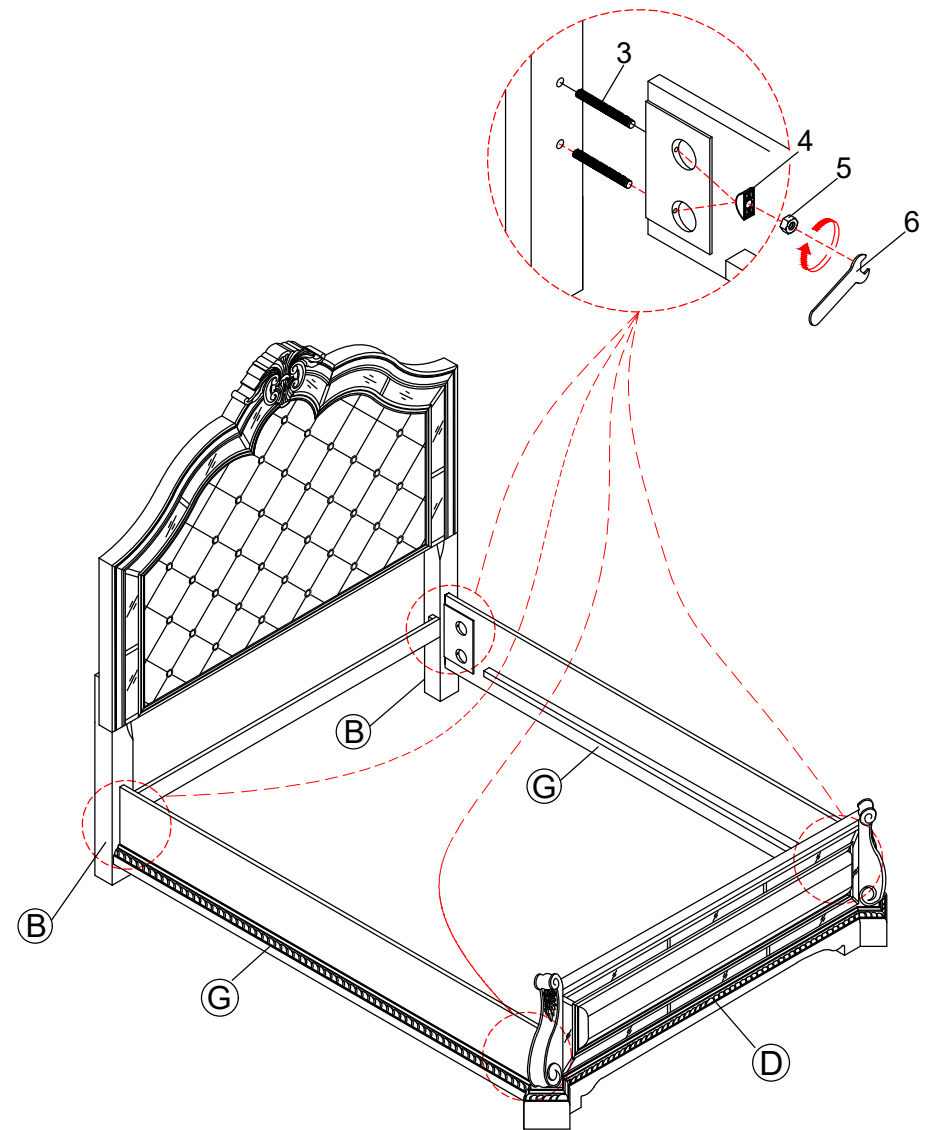

### STEP 3

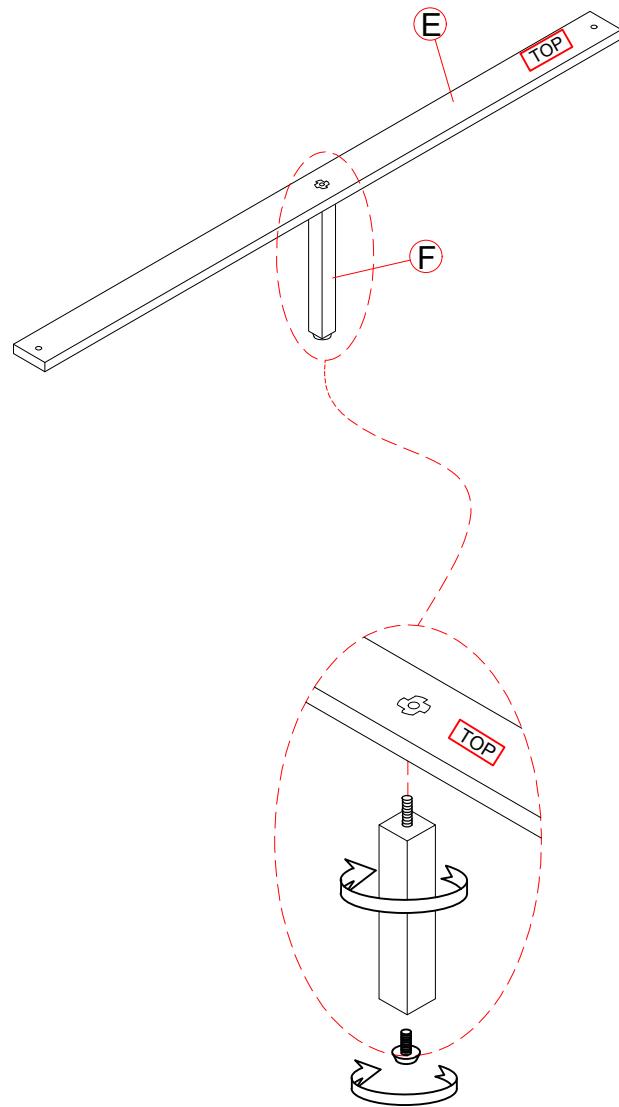

### STEP 4

