







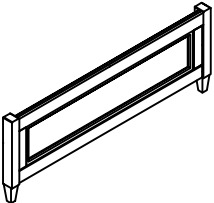
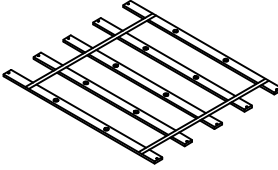




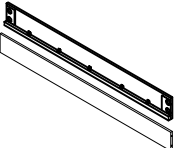


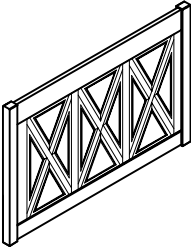



Hardware and Parts packed with the Headboard

12180 6/0-6/6 Panel Headboard  (H-A) 1 pc.	Right Headboard Post  (H-B) 1 pc.	Left Headboard Post  (H-C) 1 pc.	Headboard Stretcher  (H-D) 1 pcs.
Ø5/16" x 2" Allen Head Bolt  (H-E) 8 pcs.	Ø5/16" x Ø13mm Spring Washer  (H-F) 8 pcs.	Ø5/16" x Ø19mm Flat Washer  (H-G) 8 pcs.	M5 x 5MM Allen key  (H-H) 1 pc.

Hardware and Parts packed with the Footboard

12181 6/6 Panel Footboard  (F-A) 1 pc.	6/6 Slat Roll  (F-B) 5 pcs	Ø4 x 30mm Wood Screw  (F-C) 10 pcs	Support Leg  (F-D) 10 pcs.
--	--	---	--

Hardware and Parts packed with the Bed Rails


12172 5/0-6/6 Bed Rails  (R-A) 2 pcs	Ø5/16" x 3-1/2" All-Thread Bolt  (R-B) 8 pcs.	Arc Washer 37*17mm  (R-C) 8 pcs.	Ø5/16" x Ø13mm Spring Washer  (R-D) 8 pcs.	Ø5/16" x Ø16mm Flat Washer  (R-E) 8 pcs.	Ø5/16"-18mm Hex Nut  (R-F) 8 pcs.	13 mm Open Wrench  (R-G) 1 pc.
---	---	---	--	---	--	---

6/0-6/6 King Bed


12180 - 6/0-6/6 Panel Headboard

12181 - 6/6 Panel Footboard


12172 - 5/0-6/6 Side Rails

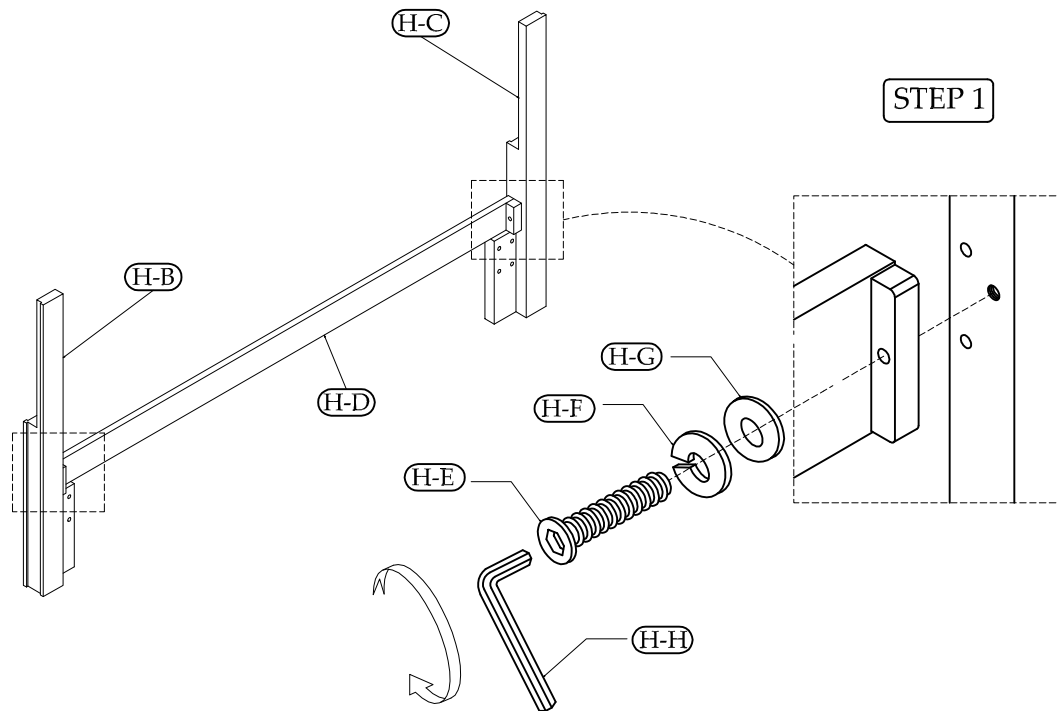


STEP 2

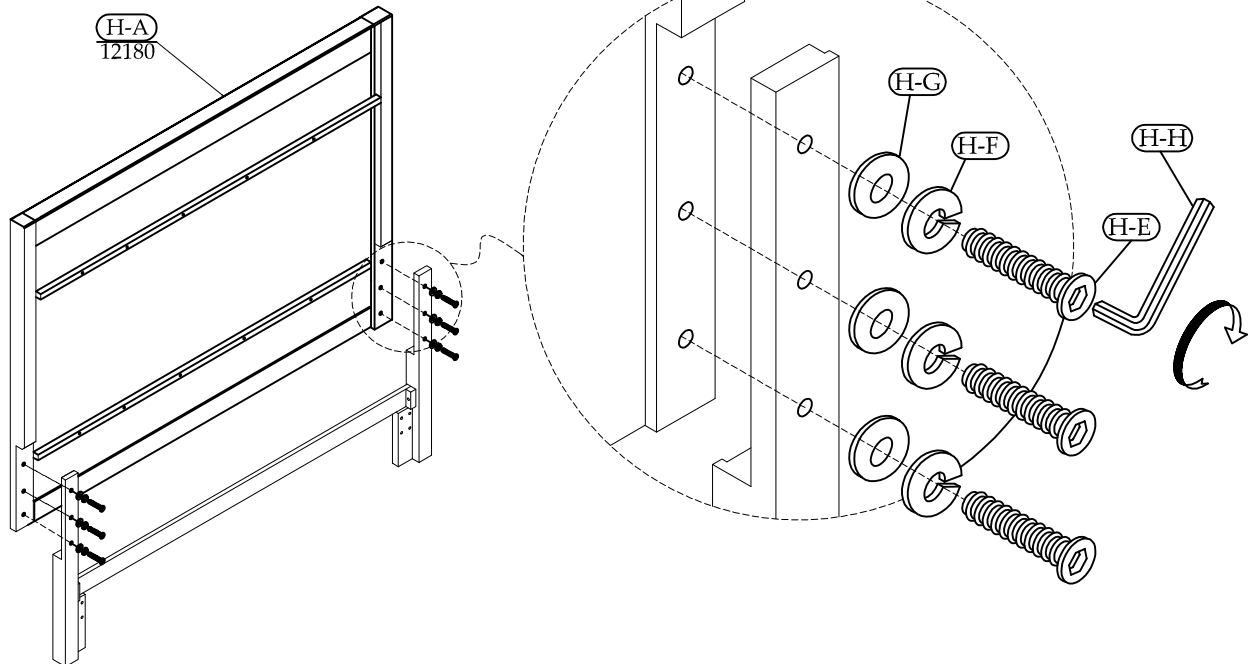


STEP 3

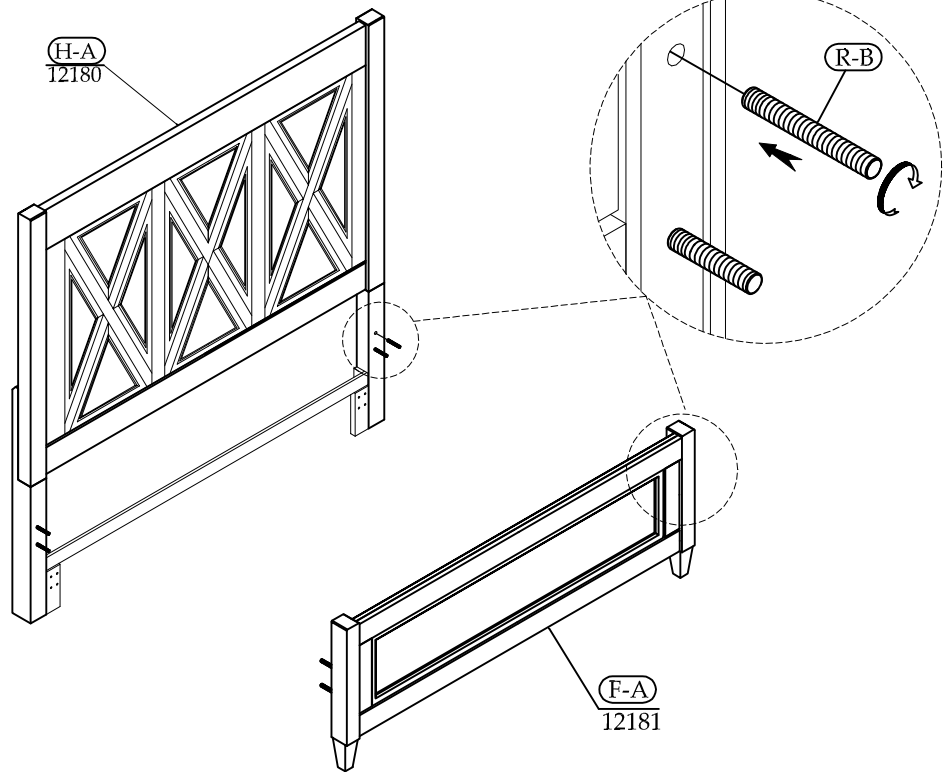


STEP 4

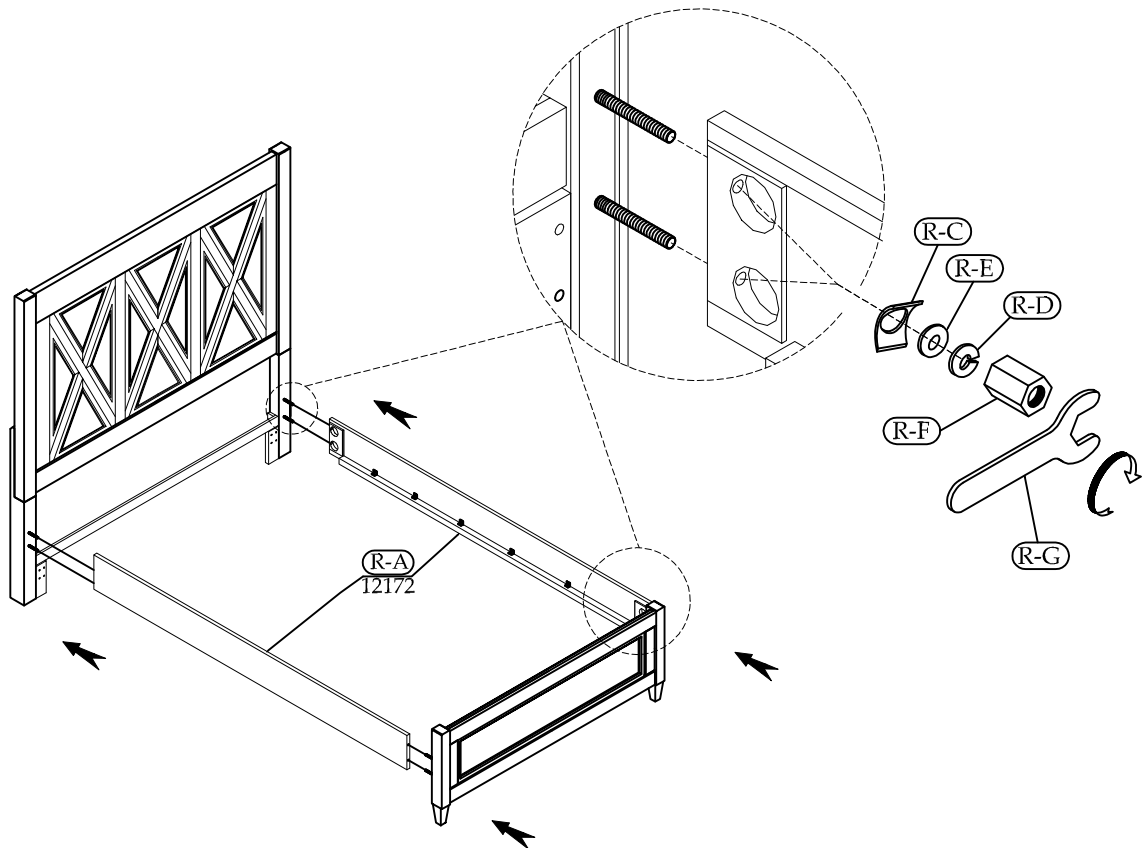

STEP 5

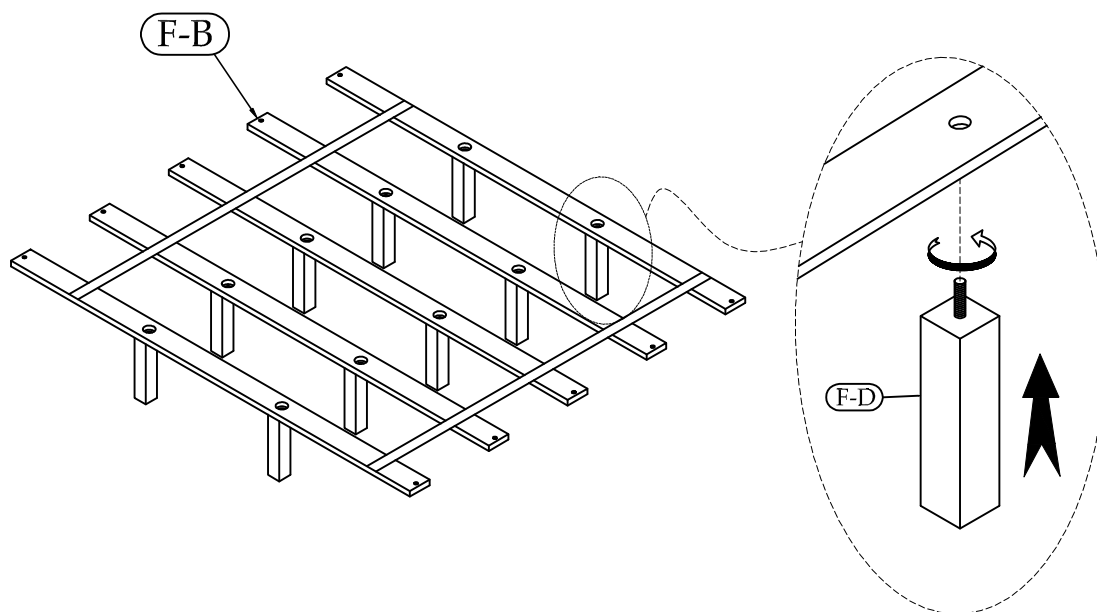


STEP 6

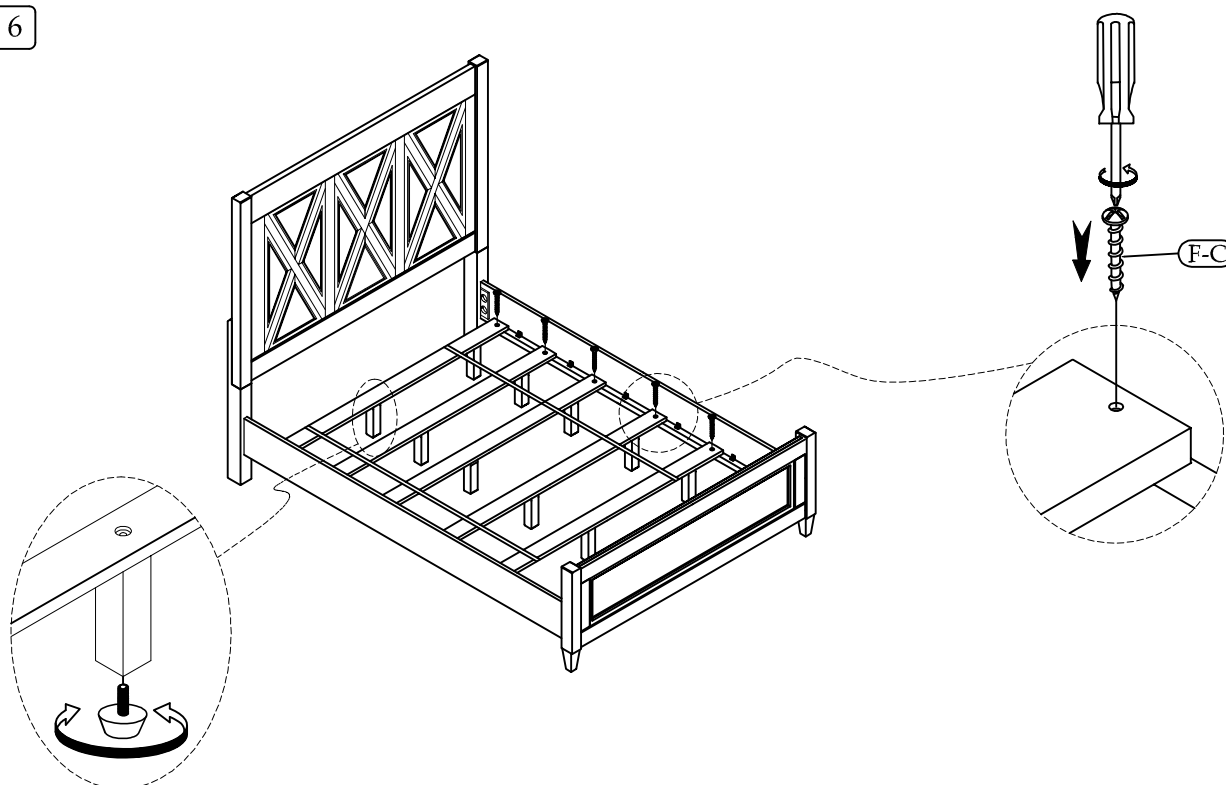

Adjustable leveler.

6/0-6/6 King Bed

12180- 6/0-6/6 Panel Headboard

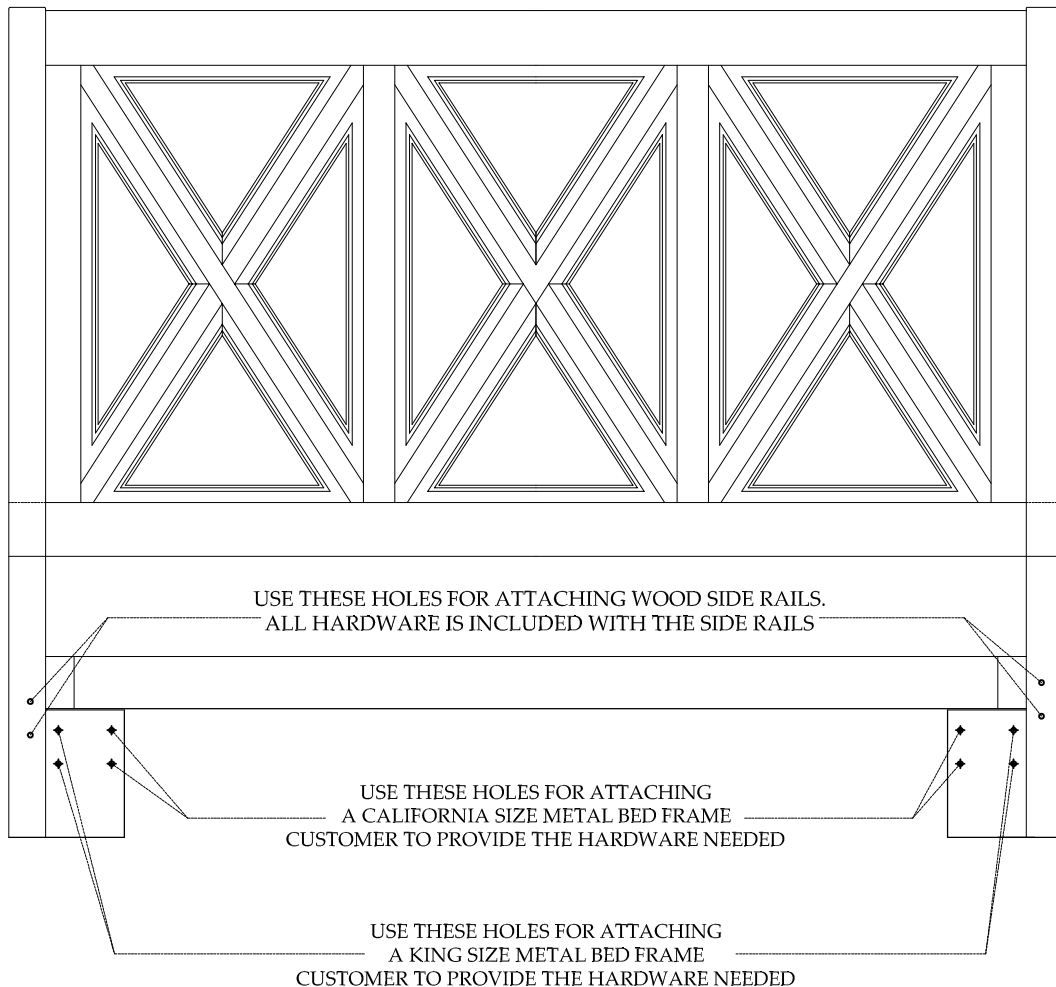

6/0 - 6/6 Bed

THE HEADBOARD MAY BE USED ALONE  
WITH A CALIFORNIA KING OR A STANDARD  
KING SIZE METAL BED FRAME.