


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

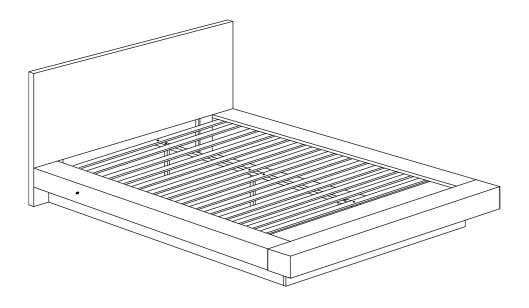

Fine Furniture for every stage of life

200711KW(B1-B3) California King Bed

REVISION 0: 05/14/2008 REVISION 1: 12/04/2012 REVISION 2: 01/21/2013 REVISION 3: 02/15/2017 REVISION 4: 08/09/2017 REVISION 5: 09/11/2018 REVISION 6: 12/02/2019

REVISION 7: 08/04/2020

PAGE 1 OF 9

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

35 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)						
A	HEADBOARD		1PC			
<u>B2</u>	B2 (BOX 2)					
В	FOOTBOARD		1PC			
С	LEFT BED RAIL		1PC			
D	RIGHT BED RAIL		1PC			
B3 (BOX 3)						
E	CONCEAL PANEL		1PC			
F	LEFT BED RAIL TOP		1PC			
G	RIGHT BED RAIL TOP		1PC			
Н	FOOTBOARD TOP		1PC			
ı	ROLL SLAT (7PCS)		2SETS			
J	CENTER RAIL		1PC			



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

K	CENTER RAIL SUPPORT WITH LEVELER	3PCS
L	BOTTOM TRESTLE BAR	3PCS
A	200711KW (B1) FROM BOX 1 HEADBOARD	1PC
В	200711KW (B2) FROM BOX 2 FOOTBOARD	1PC



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 200711KW(B1)


1	ALLEN WRENCH (M4 - BLK)		1PC
2	SHORT BOLT WITH WASHER (M6 x 30mm - BLK)	9.000p	10PCS
3	LONG BOLT WITH WASHER (M6 x 45mm - BLK)	0.000	10PCS
4	LONG BOLT (M6 x 45mm - BLK)	O TOMORDO	16PCS
5	LIGHT SET (F101-114(1.94mm) - BRN)		1SET
6	LONG FLAT HEAD SCREW (M4 x 38mm - BLK)		2PCS
7	WOOD DOWEL (M8 x 30mm)		19PCS
8	ZIG ZAG SPRING CLICK (1.5 x 20.5 x 24 - BRN)		5PCS
9	SHORT FLAT HEAD SCREW (M4 x 16mm - BLK)	Ø mas	28PCS
10	BARREL NUT (M6 x 13mm - BLK)	§ •	10PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ASSEMBLY INSTRUCTIONS STEP 1

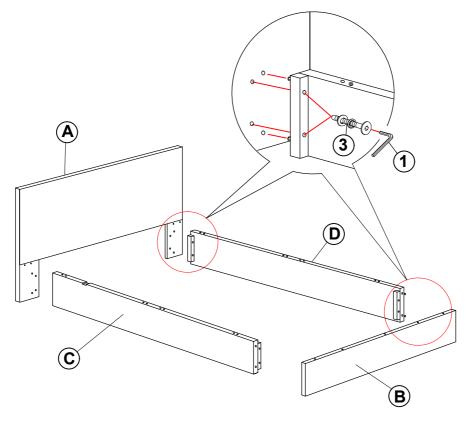

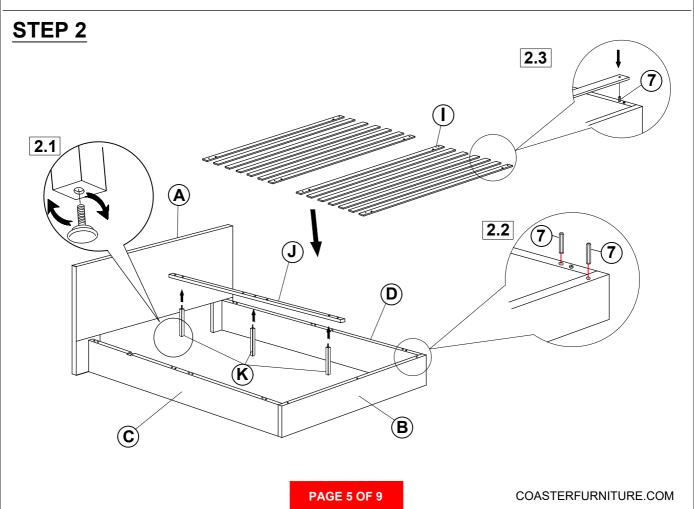




ASSEMBLY INSTRUCTIONS STEP 3

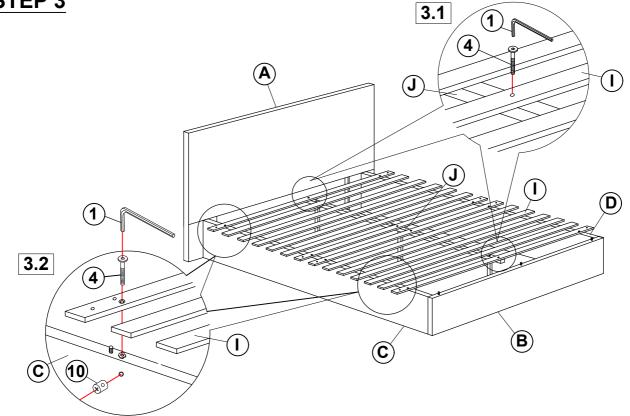



STEP 4

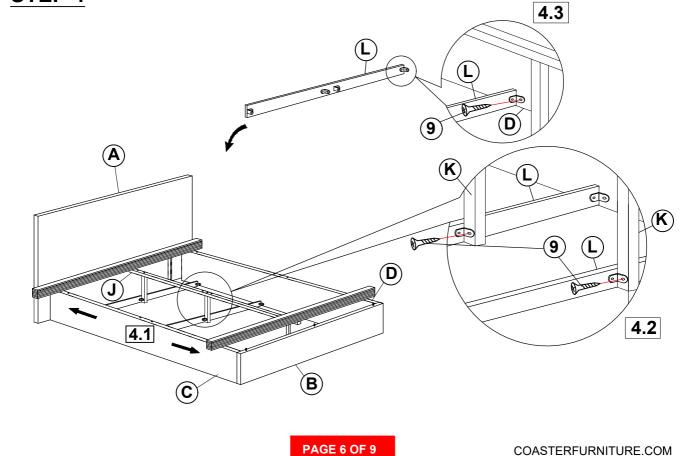


COASTER

ASSEMBLY INSTRUCTIONS STEP 5

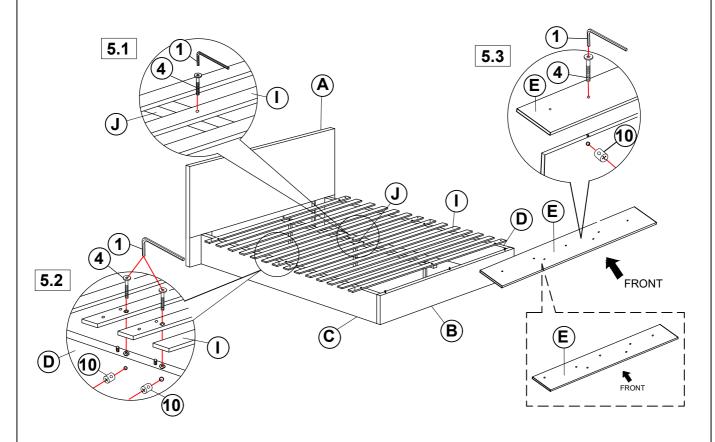

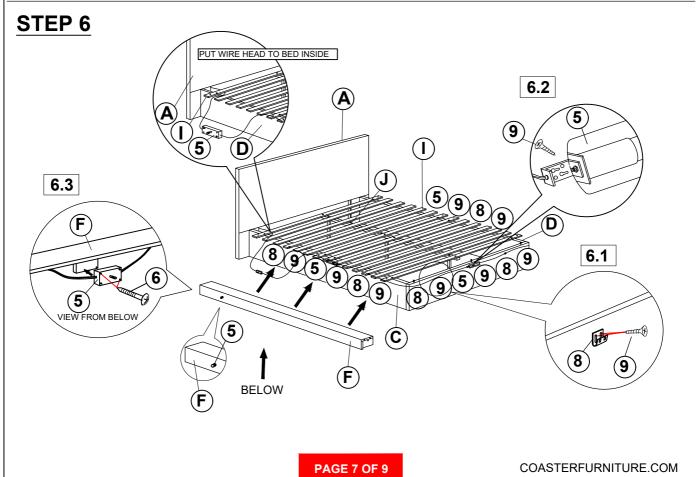

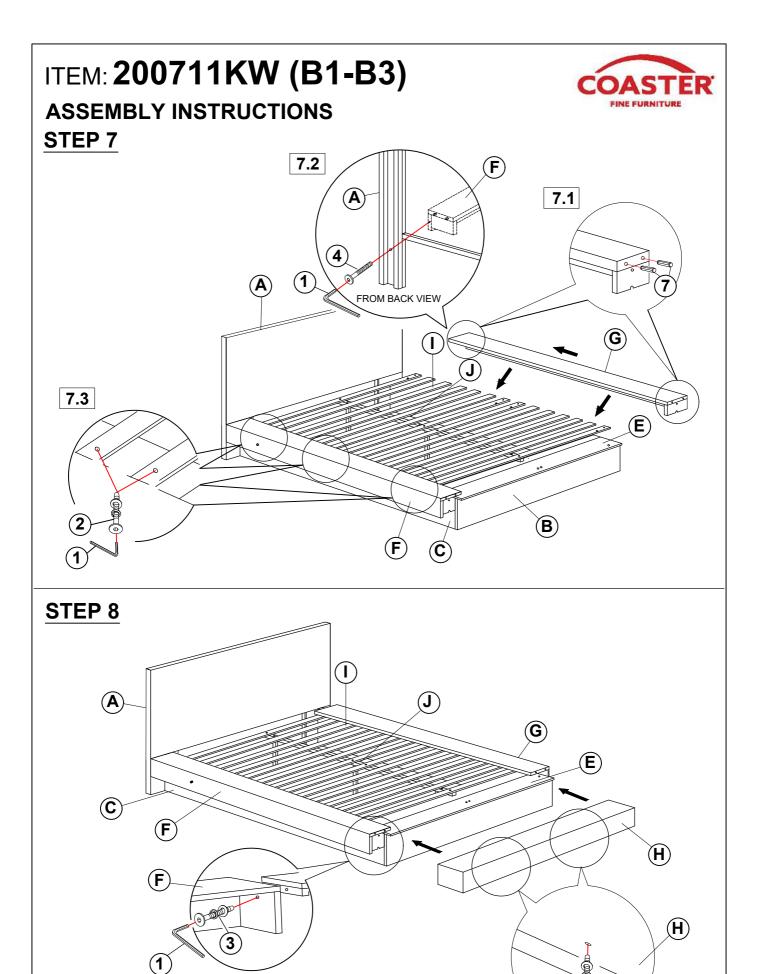

PAGE 8 OF 9

8.2

COASTERFURNITURE.COM


8.1



ASSEMBLY INSTRUCTIONS


STEP 9

COMPLETE

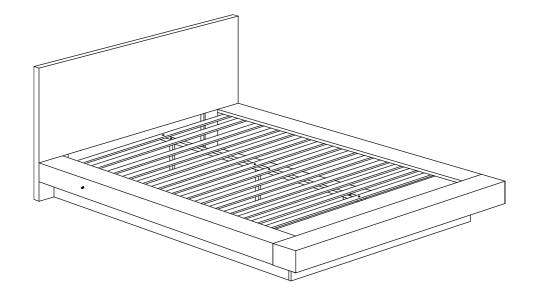





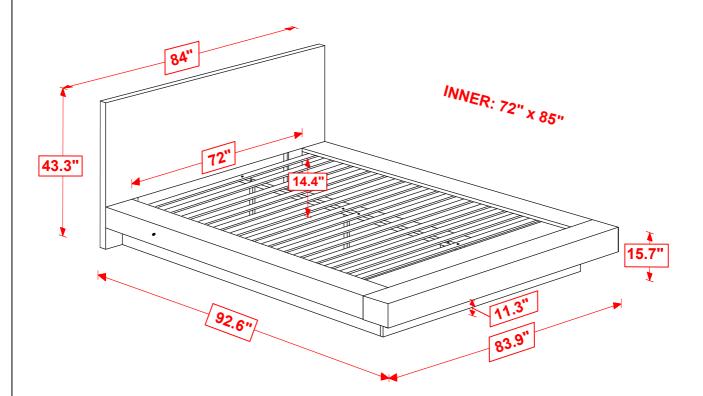

NOTE: DIMENSION TOLERANCE ± 5%

COASTERFURNITURE.COM