








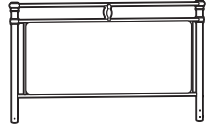


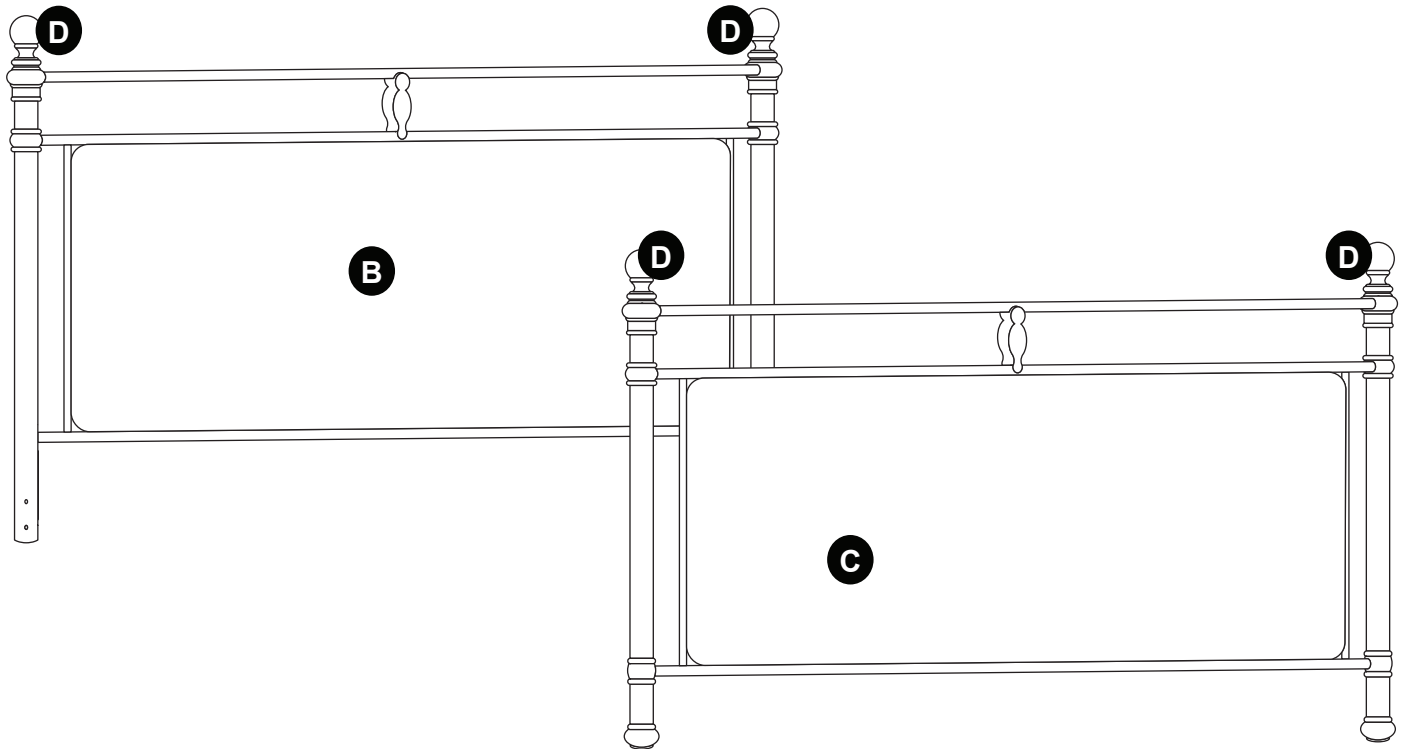


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HDFBP

CODE	QTY	HARDWARE
1	4	1/4" x 2-1/4" Sunk Bolts 
2	4	1/4" x 1" Allen Bolts 
3	4	1/4" x 3/4" Allen Bolts 
4	12	1/4" Flat Washers 
5	8	1/4" Spring Washers 
6	4	1/4" Hex Nuts 
7	1	Open Wrench 
8	1	Allen Wrench 

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	2	Leg Extensions 	B	1	Headboard 
C	1	Footboard 	D	4	Finials 



## ⚠ WARNING

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

## STEP 1 - Figure 1

Begin assembly by attach Finials (D) to Headboard (B) by screwing into place.

## STEP 2 - Figure 2

Attach Finials (D) to Footboard (C) by screwing into place.

## STEP 3 - Figure 3

Attach Leg Extensions (A) to Headboard (B) using 2 Allen Bolts (3) & 2 Flat Washers (4). Tighten all bolts using Allen Wrench (8) provided.

## STEP 2 - Figure 2

Next, attach the Bed Frame (\*Not Included) to each Leg Extension (A) using 2 Allen Bolts (1) from the outside and 2 Flat Washers (4), 2 Spring Washers (5) and 2 Hex Nuts (6) per post. Tighten all nuts and bolts using the Allen & Hex Wrenches (7 & 8) that have been provided.

## STEP 3 - Figure 3

Finally attach Bed Frame (\*Not Included) to each post on the Footboard Panel (C) using 2 Allen Bolts (2), 2 Spring Washers (5) & 2 Flat Washers (4) per post. Tighten all bolts. The assembly is now complete.

