

# BAREMORE BED SET

Model #1742-500/550/650/660

Date: 10-15-2012 Page 1 of 2

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

#### HARDWARE LIST

(4) 1/4" x 3/4" Allen Bolts

В

(14) 1/4" x 1" Allen Bolts (24) 1/4" Flat Washers (8) 1/4" Spring Washers

(6) 1/4" Hex Nuts

(1) Open Wrench

(1) Allen Wrench

## PARTS LIST

(3) Bottom Rails

(4) Finials


1) Headboard

(1) Footboard

(2) Side Rails

M (2) Leg Extensions

PART	QTY	HARDWARE	PART	QTY	HARDWARE
А	4		В	14	
С	24		D	8	
E	6		F	1	
G	1				

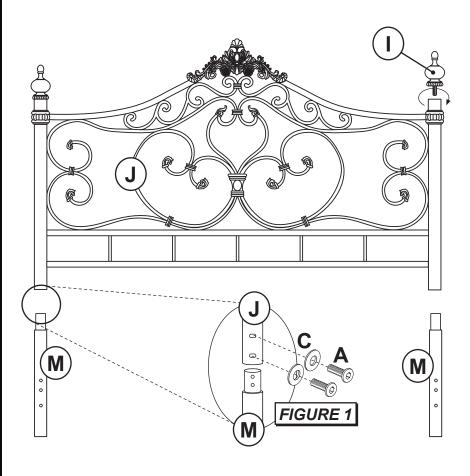

# STEP 1

Begin assembly by connecting the Leg Extensions (M) to the Headboard (J) using 2 Allen Bolts (A) and 2 Flat Washers (C). See Figure 1.

#### STEP 2

Attach the Side Rails (L) to the Headboard (J) with 2 Allen Bolts (B), 2 Spring Washers (D) and 2 Flat Washers (C). See Figure 2.

#### STEP 3

Attach the Side Rails (L) to the Footboard (K) with 2 Allen Bolts (B), 2 Spring Washers (D) and 2 Flat Washers (C). See Figure 3.

## STEP 4

Attach each Bottom Rail (H) to the Side Rails (L) with 1 Allen Bolt (B) and 1 Flat Washer (C) from the top and 1 Flat Washer (C) and 1 Hex Nut (E) from the bottom. See Figure 4. Tighten all bolts with the Allen Wrench (G) provided and the nuts with the Open Wrench (F) also provided.



# ASDALE BAREMORE BED SET Model #1742-500/550/650/660

Date: 10-15-2012 Page 2 of 2

