


ITEM NO: I349-6052-WST Extendable Counter Height Pedestal Table

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

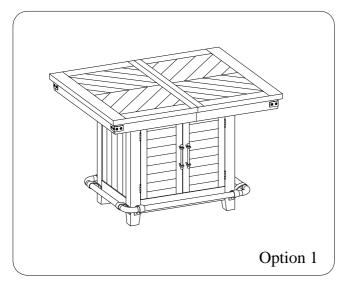




TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

FUNCTIONALITY INSTRUCTION

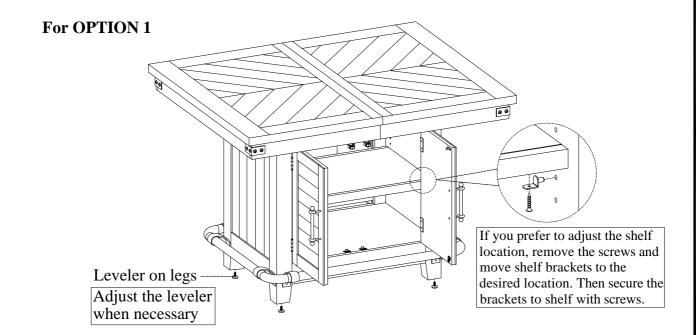

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.


FOR INDOOR USE ONLY



ITEM NO: I349-6052-WST Extendable Counter Height Pedestal Table


For OPTION 2:


<u>STEP 1:</u> Unbuckle the table locks under the table top to the OFF position as shown below and pull the table top completely apart from each end.

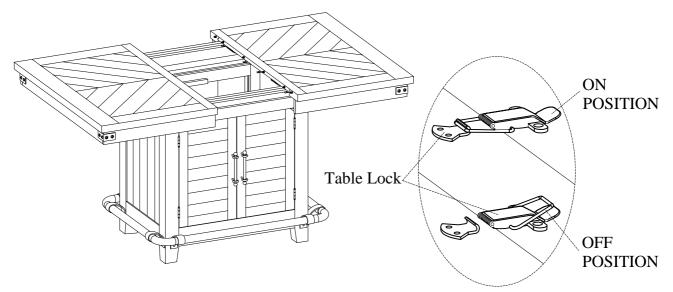

STEP 2: Unfold the butterfly leaf as shown to the right, being careful not to damage the hinges and wood surfaces of the leaf.

Caution: Be careful to not pinch your hands or fingers when opening or closing the leaf or aprons. Flip open the aprons prior to fully extending the leaf to prevent damage to the aprons' surfaces.

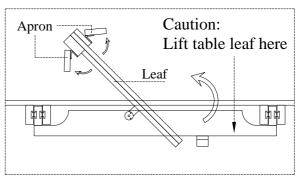


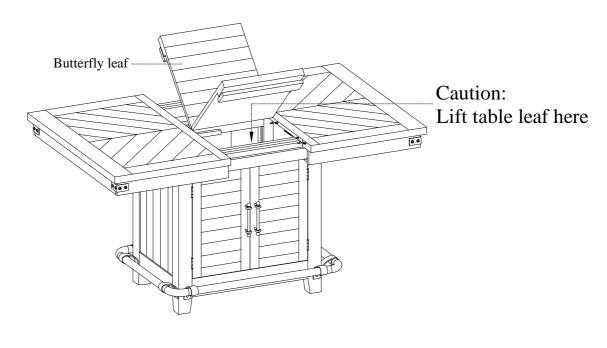




ITEM NO: I349-6052-WST Extendable Counter Height Pedestal Table

<u>STEP 3:</u> When the butterfly leaf is completely unfolded and flush with the tabletop, push together the table from each end to close the gaps. Buckle the table locks to the ON position.

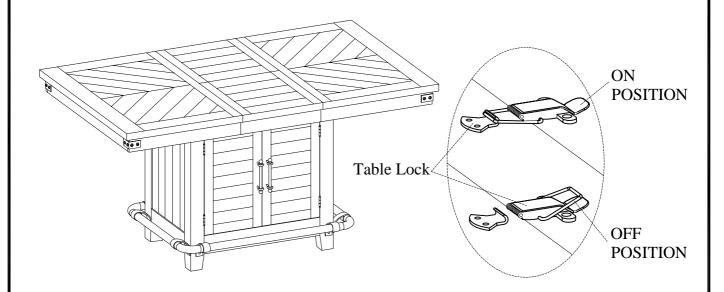

FUNCTIONALITY INSTRUCTION

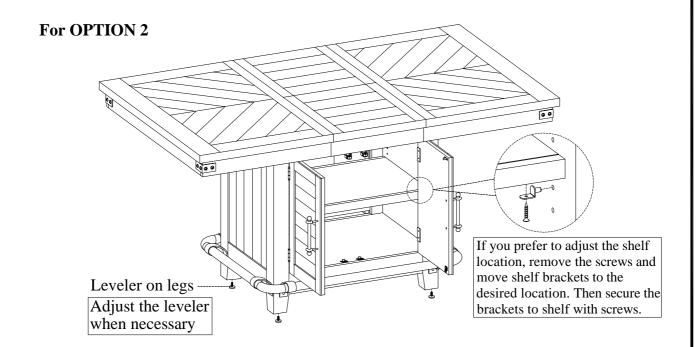


Notes: When reassemble to option 1, please replace steps 3 & 2 and then step 1 above.



ITEM NO: I349-6641S-WST Counter Height Side Chair w/ Uph Seat (2/Ctn)

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

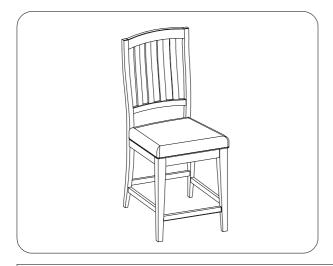


TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

HARDWARE LIST:				
No.	Description	Sketch	Quantity	
A	Hex Nut Ø5/16"	@	4 PCS	
В	Bolt Ø5/16" x 3-1/2"(18)		4 PCS	
С	Bolt Ø5/16" x 1-1/2"(18)		3 PCS	
D	Lock Washer Ø5/16"		11 PCS	
Е	Flat Washer Ø5/16" x 3/4"	0	11 PCS	
F	Allen Wrench 4mm		1 PC	
G	Hex Wrench 12mm		1 PC	
Н	Wood Screw #4 x 1-1/2"	&mmm.	6 PCS	

COMPONENTS LIST:				
No.	Description	Sketch	Quantity	
1	Chair Back		1 PC	
2	Chair Seat		1 PC	
3	Left Front Leg		1 PC	
4	Right Front Leg		1 PC	
5	Front Stretcher		1 PC	
6	Left Side Stretcher		1 PC	
7	Right Side Stretcher		1 PC	

FUNCTIONALITY INSTRUCTION

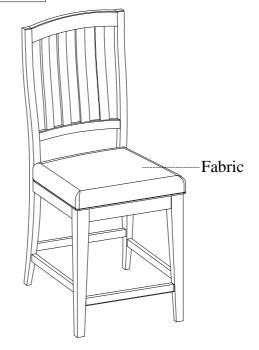

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY

Distributed by Furniture Values International, LLC ITEM NO: I349-6641S-WST Counter Height Side Chair w/ Uph Seat (2/Ctn) STEP 1: Assemble the right front leg and the Right Front Leg left front leg with front stretcher by screws(H). Making sure the drill holes on each front leg and the chamfers on all legs are aligned as shown right. Front Stretcher Left Front Leg STEP 2: Attach the assembled chair front to chair seat by using 4 flat washers(E), lock washers(D), and hex nuts(A) with a hex Chair Front wrench(G), Do not tighten bolts until STEP 4. Chair Seat STEP 3: Attach the chair seat to chair back by using 4 bolts(B), 3 bolt(C), 7 lock washers(D), 7 flat washers(E) with an allen wrench(F), Do not completely tighten bolts. Chair Seat Right Side Stretcher Chair Back STEP 4: Attach the left side stretcher and right side stretcher to the front legs and chair back with wood screws(H). Completely tighten all Left Side Stretcher wood screws and bolts. Turn the assembled chair to the upright position.