
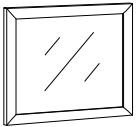
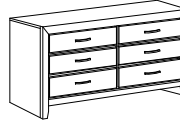





ASSEMBLY INSTRUCTIONS

CROWN MARK : 0061A DRESSER & MIRROR		
NO	PART LIST	QTY
A	MIRROR FRAME 	1 PC
B	DRESSER 	1 PC
C	MIRROR SUPPORT RAIL 	2 PCS
NO	HARDWARE LIST	QTY
D	CSK SCREW M4 X 32MM 	10 PCS



STEP 1 : Cut of the Raffia String from the back of DRESSER (B).

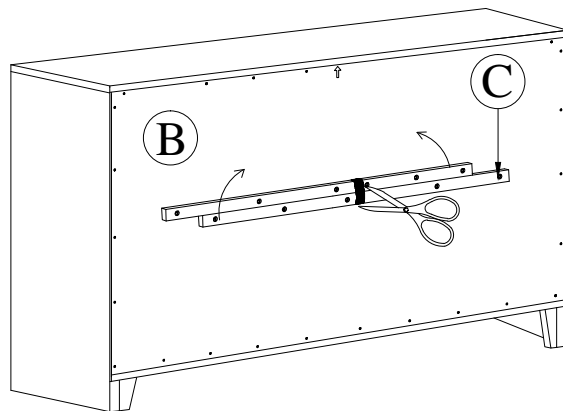

STEP 2 : Turn the MIRROR SUPPORT RAIL (C) upward at the back of DRESSER (B), Place the MIRROR FRAME (A) on the top of DRESSER (B). Tighten with CSK Screw (D).

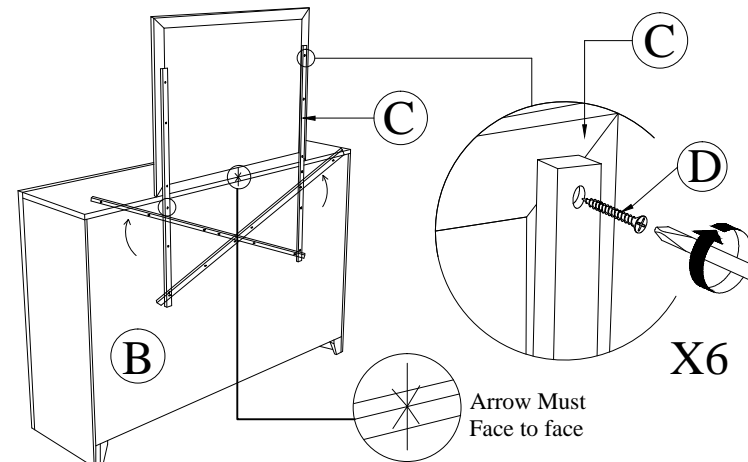

STEP 3 : Tighten the CSK Screw (D) as shown.

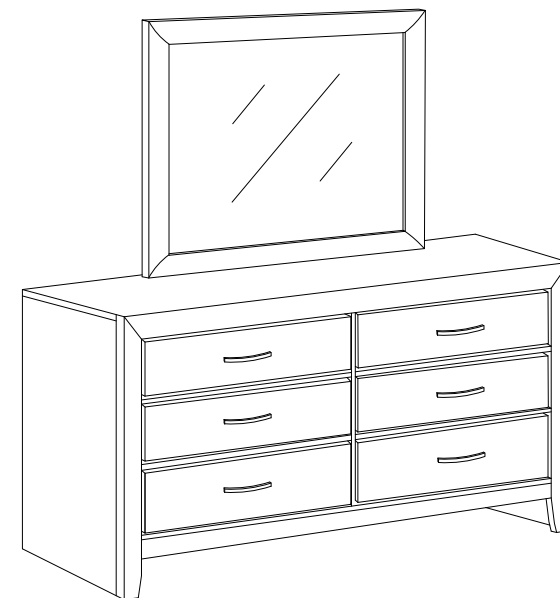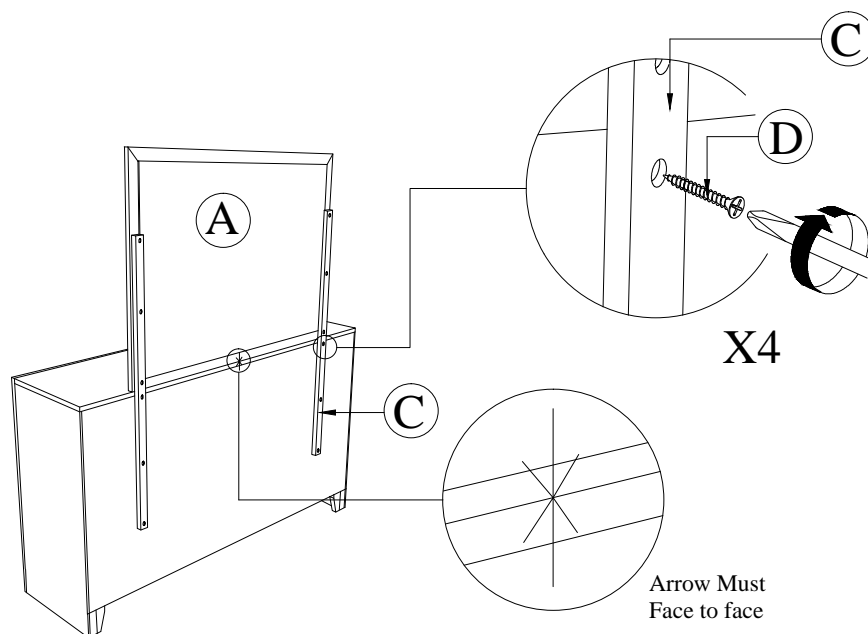

**COMPLETED
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.