

ASSEMBLY INSTRUCTION

PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 4808



PARTS IDENTIFICATION





ITEM#:4808

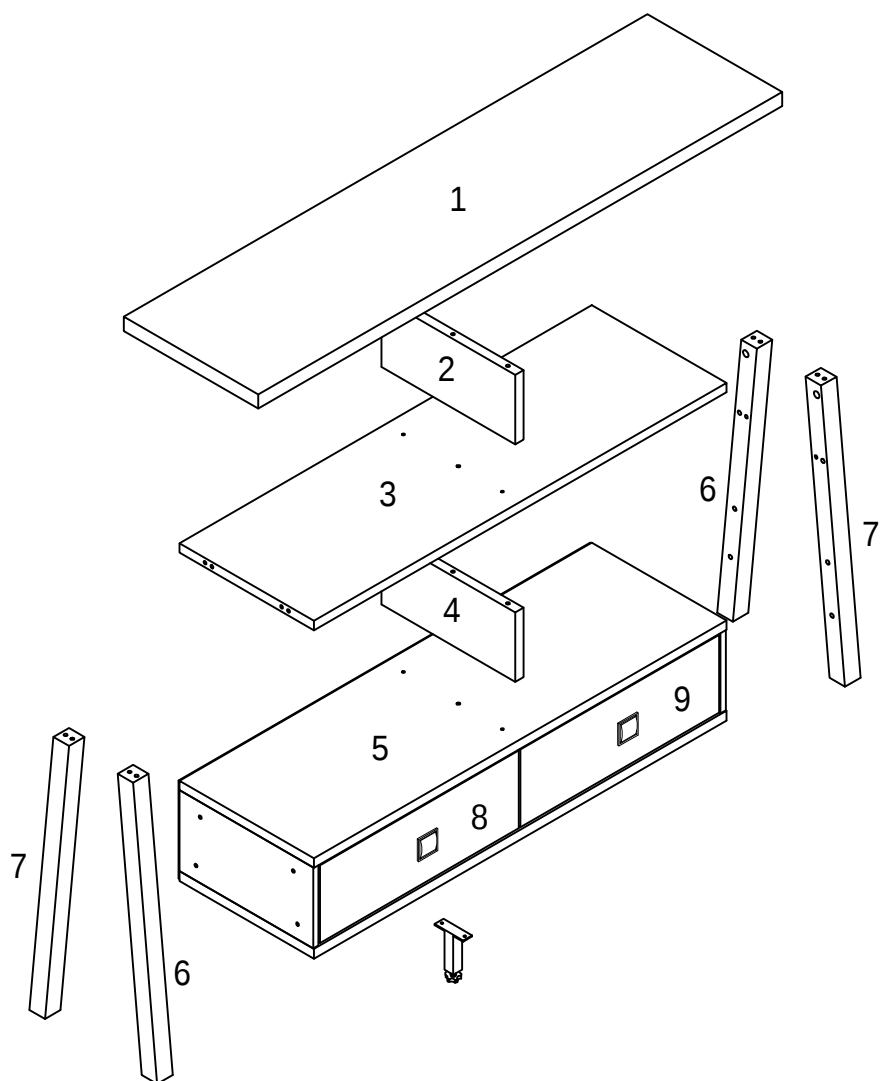

(1)	1pc	(6)	2pcs
(2)	2pc	(7)	2pcs
(3)	1pc	(8)	1pc
(4)	1pc	(9)	1pc
(5)	1pc		






HARDWARE IDENTIFICATION

ITEM#: 4808


A		L29	14pcs
B		ø15	14pcs
C		ø8 × 25	12pcs
D		M6 x 12	2pcs
E		ø4 x 45	2pcs
F		M6 x 25	8pcs
G		ø22	14pcs
H		Glue: For securing please apply to wood dowel first before inserting into panel	1pc
I			1pc
J		197x5x1	1pc
K		ø8x40	1pc
L		12x12x1	2pcs
M		ø5x40	1pc
N		ø4x25	1pc

ASSEMBLY INSTRUCTION

ITEM#:4808

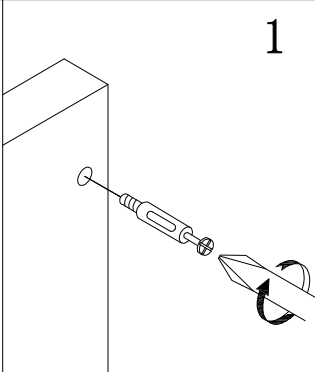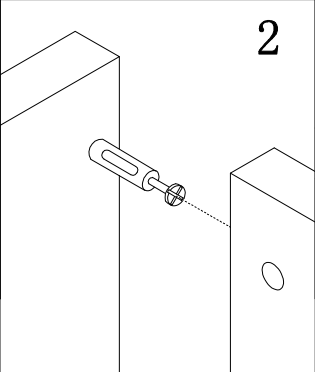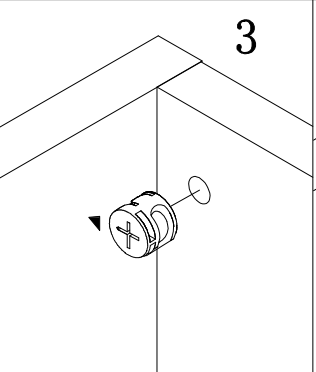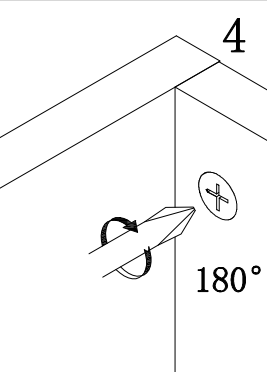
HOW TO	1	2	3	4
				
 Cam Bolt  Cam Lock	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

STEP1

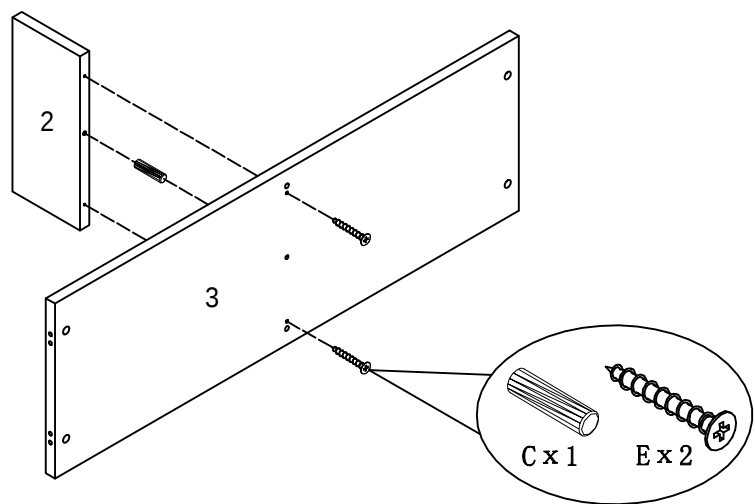


ASSEMBLY INSTRUCTION

ITEM#: 4808

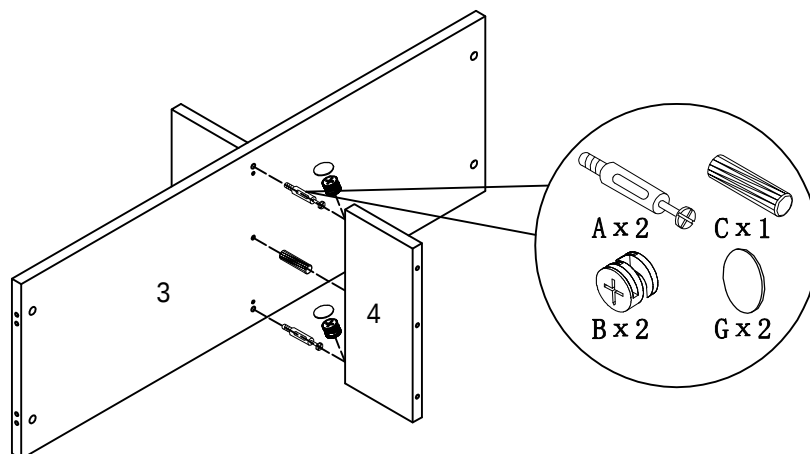


STEP2

STEP3

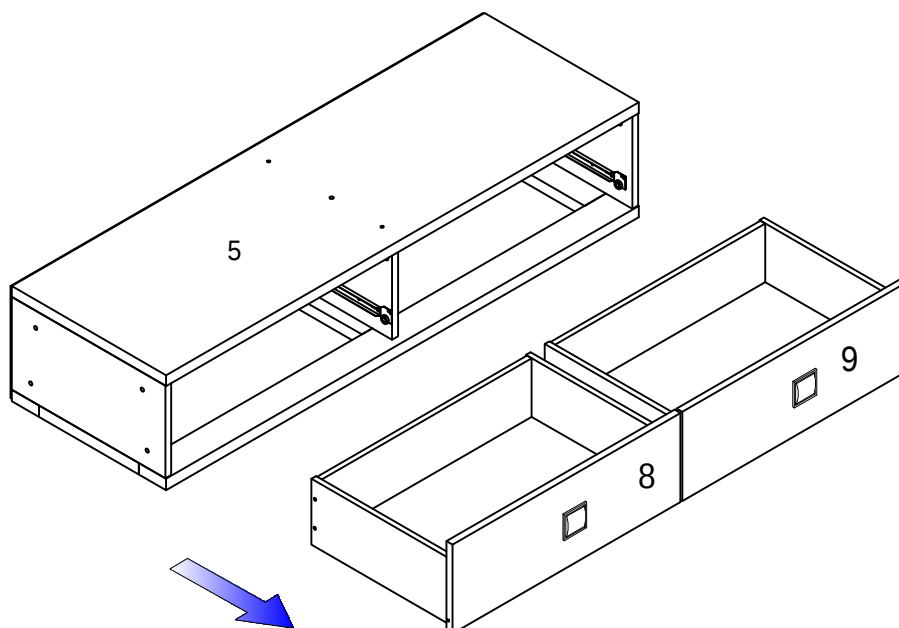


ASSEMBLY INSTRUCTION

ITEM#: 4808

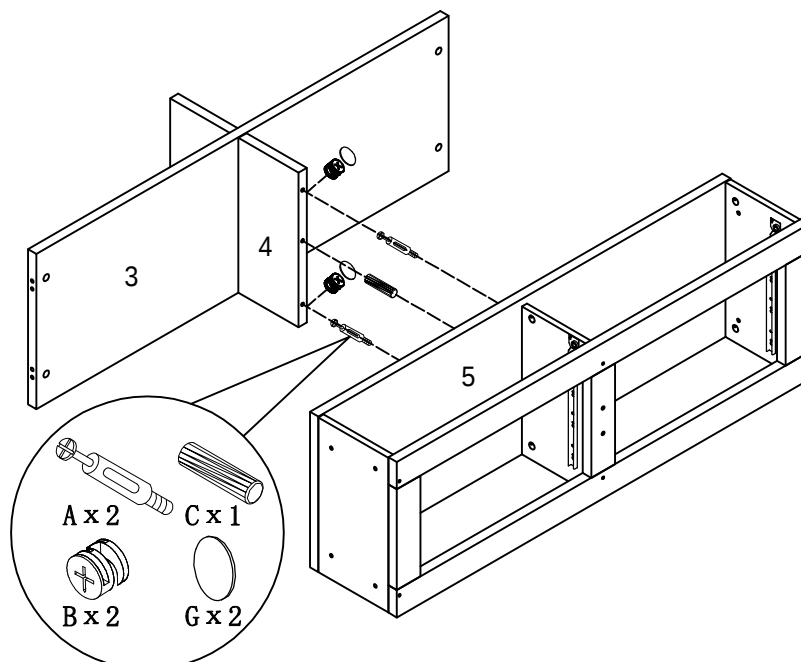


STEP4

STEP5

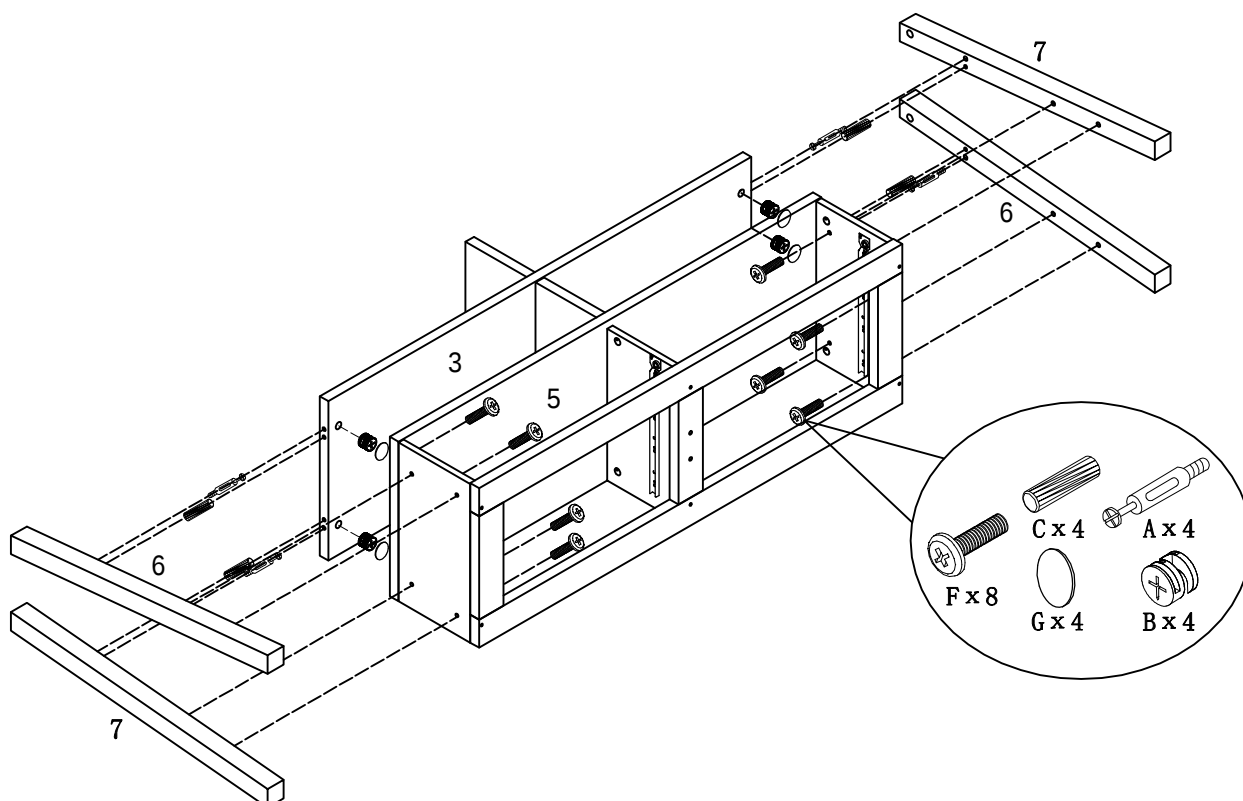


ASSEMBLY INSTRUCTION

ITEM#: 4808

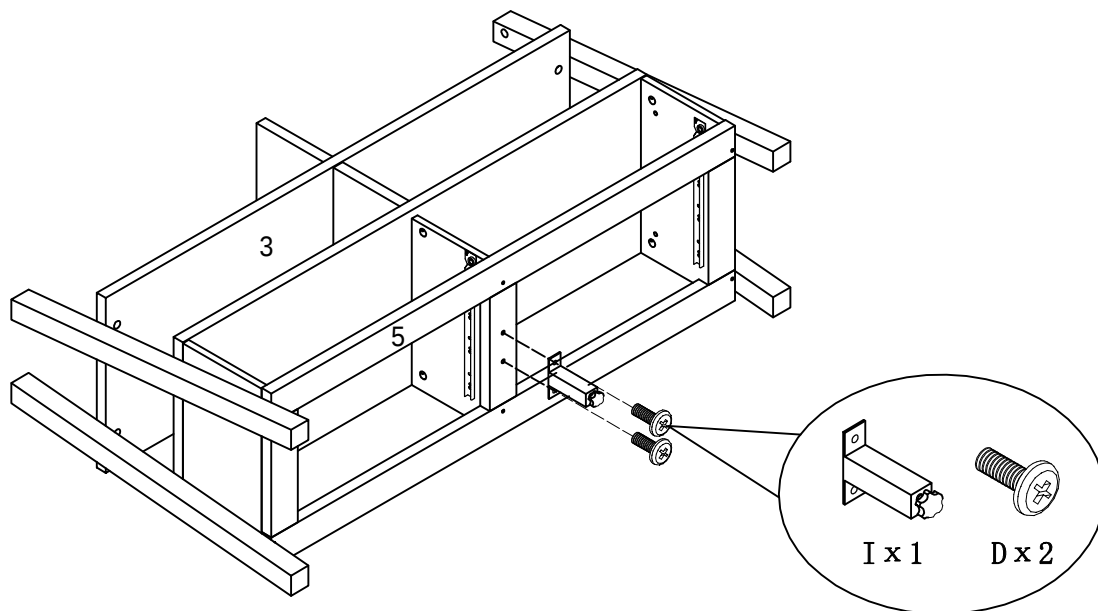



STEP6

STEP7

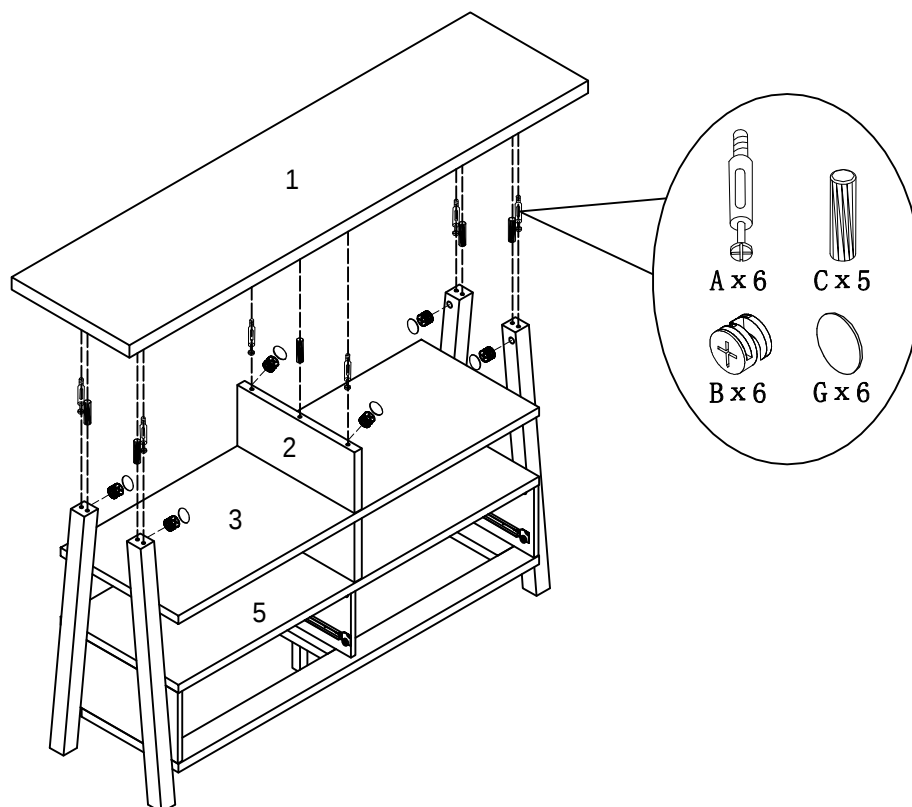

ASSEMBLY INSTRUCTION

ITEM#: 4808

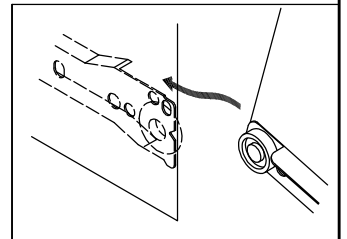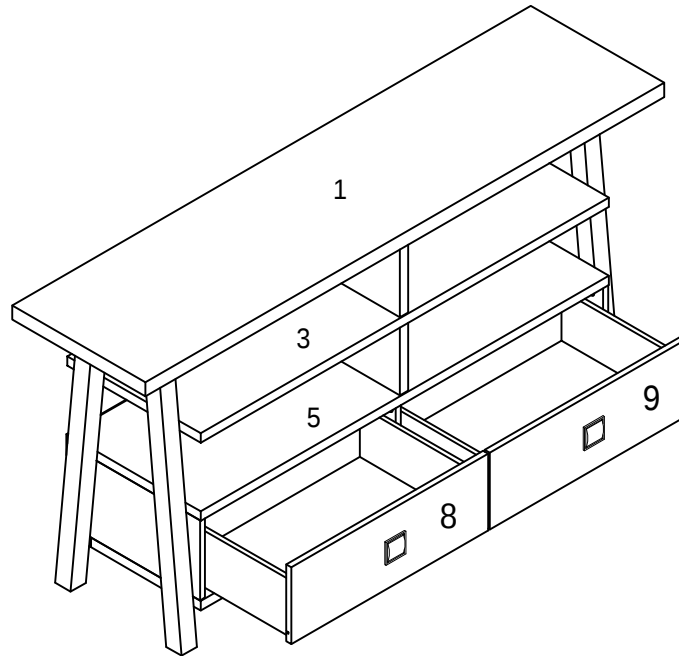

STEP8


STEP9




ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

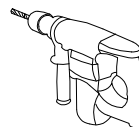


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

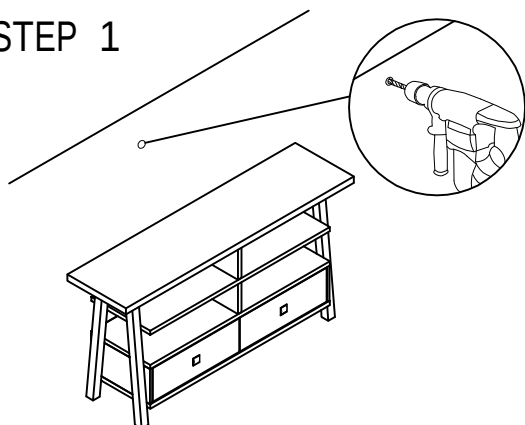


To drill a hole (about 1") on the wall.

STEP 2

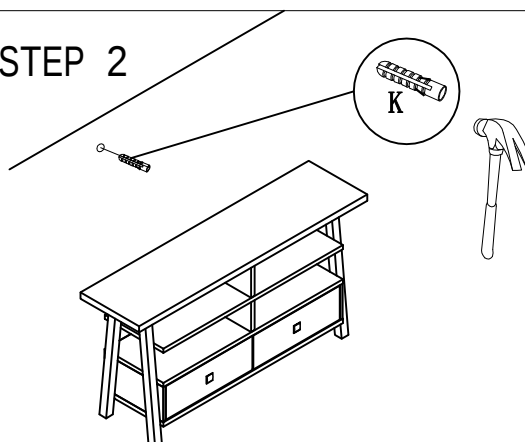


To tap drywall anchor into the hole.

STEP 3

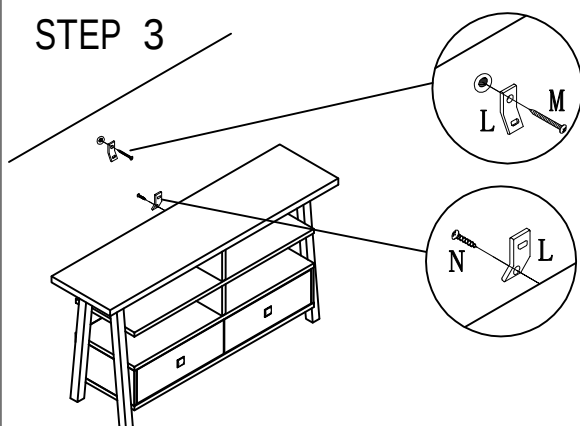

To insert the screw into each bracket and hang one on drywall anchor.

STEP 4

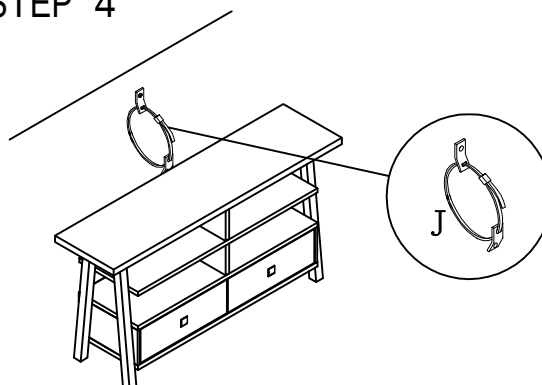

To tie the strap through bracket and pull it lightly till it steady.