

# ASSEMBLY INSTRUCTION

---


## PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 4906

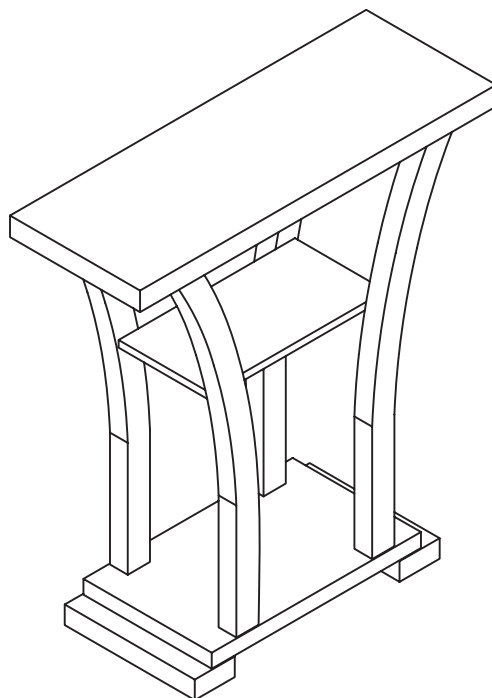

# PARTS IDENTIFICATION





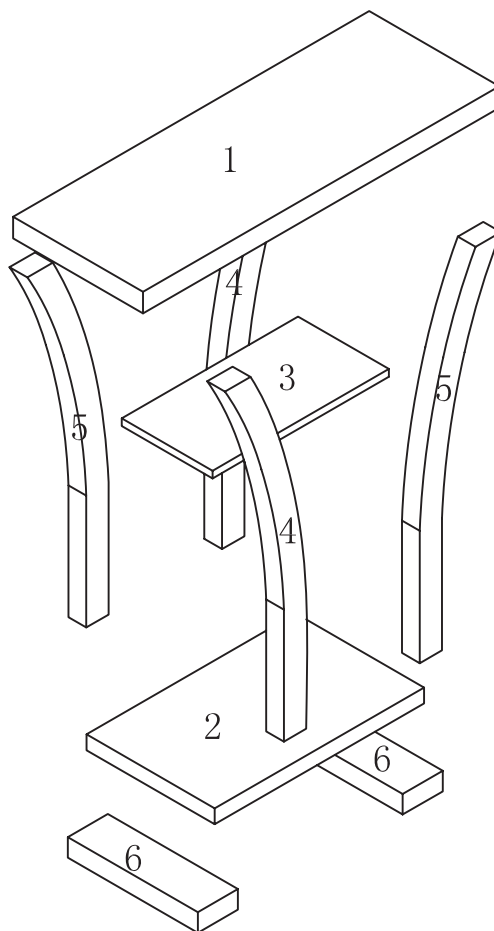














ITEM#:4906



- |     |      |
|-----|------|
| (1) | 1pc  |
| (2) | 1pc  |
| (3) | 1pc  |
| (4) | 2pcs |
| (5) | 2pcs |
| (6) | 2pcs |

# HARDWARE IDENTIFICATION


ITEM#: 4906

A		Φ 8x25	10pcs
B		Φ 8	4pcs
C		M8x55	4pcs
D		Φ 6x65	4pcs
E		Φ 10x15	4pcs
F		M4	1pc
G		Φ 14	1pc
H		M6x45	4pc
I		Φ 45	4pcs
J		Φ 13	4pcs
K		197×5×1	1pc
S		12×12×1	2pcs
L		Φ 4×25	1pc
M		Φ 5×40	1pc
N		Φ 8×40	1pc
O		ET15	4pcs
P		L29	4pcs
Q		Φ 20	4pcs
R		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTION

ITEM#: 4906


Begin assembly upside down. Use parts P to attach the legs to the shelf. Push part O with the opening over part P into the shelf, then use a screwdriver to turn each one 90 degrees to lock in place. Cover with sticker Q.

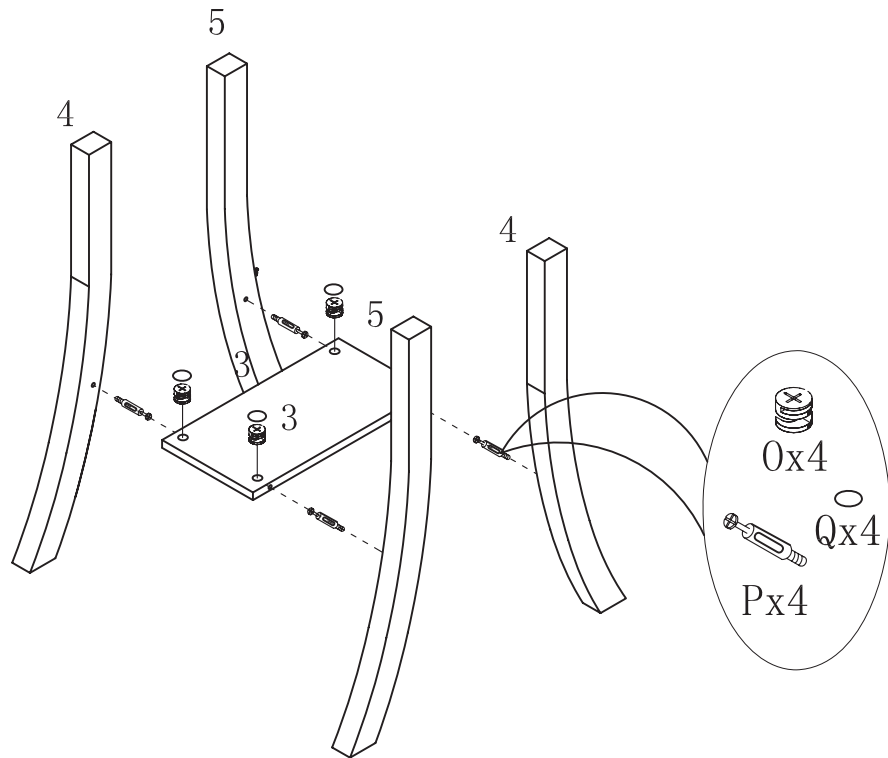

## STEP1

## STEP2


Use parts A and C to connect the legs to the table top (C will be visible through the hole). Insert part B into the leg with the curve facing the table top, threading over part C along with the washer and nut. Tighten the nut with part G. Cover the holes with stickers I.

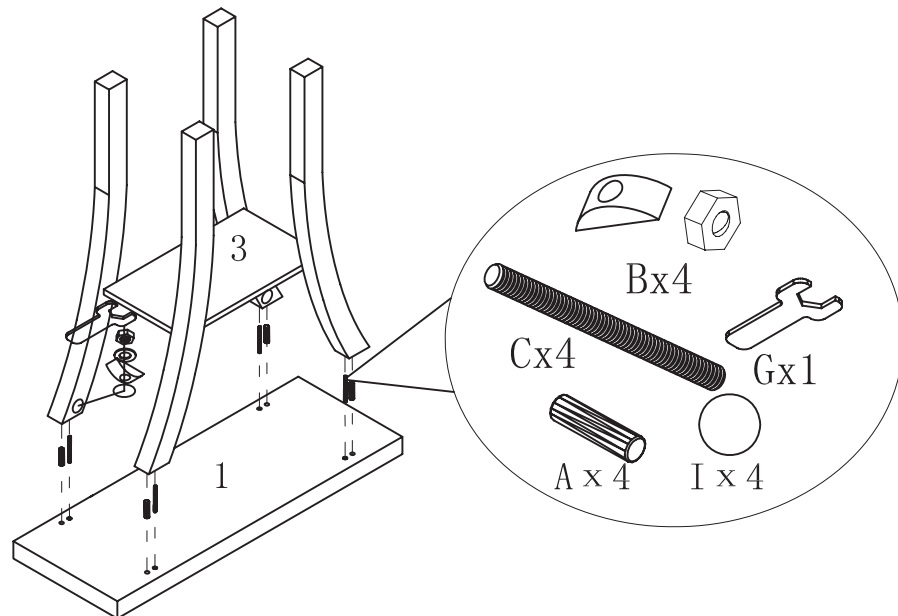

# ASSEMBLY INSTRUCTION

ITEM#: 4906


Insert part E into the leg with the hole facing the table base. Attach base to legs with A dowels, then use F to screw D through the base into E which is in the leg. Cover the holes with J stickers.

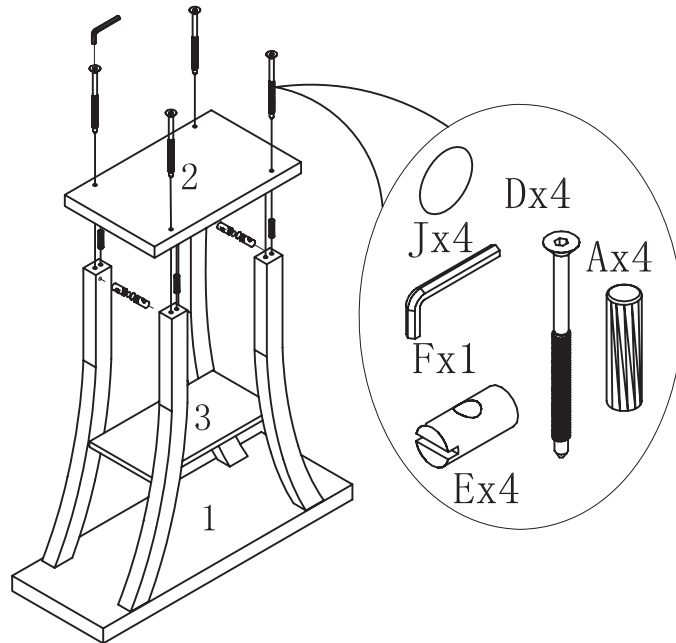

STEP3


STEP4

Align the feet to the base using A (wide edge out). Use a screwdriver to secure with H bolts.

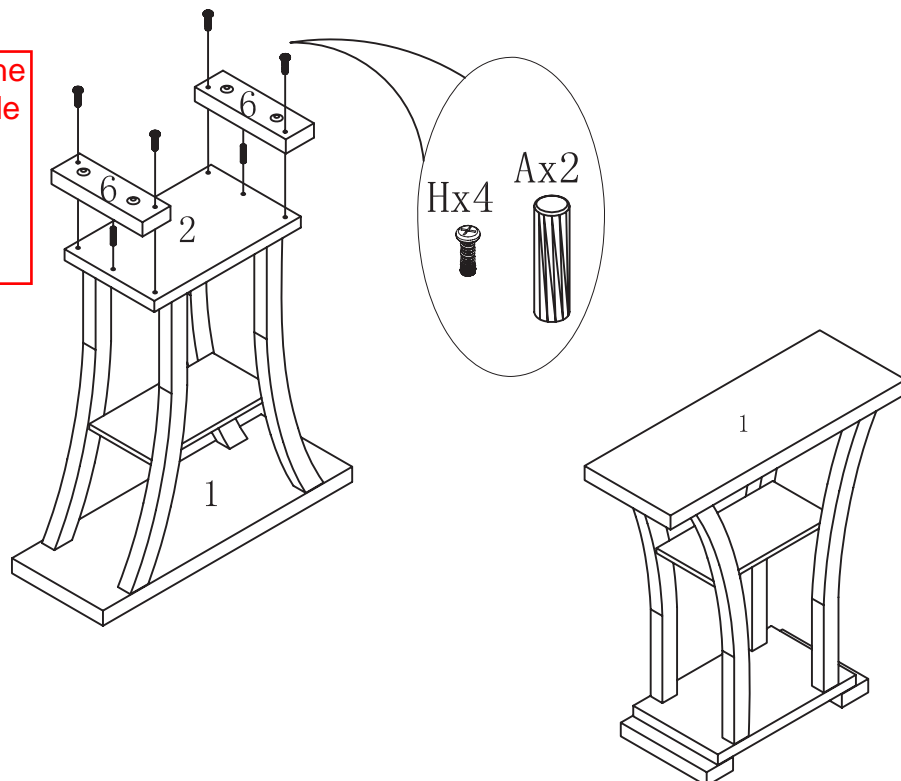


# ANTI-TIPPING STRAP INSTRUCTION


## HARDWARE (INCLUDED) :

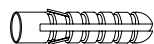

DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC




STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED

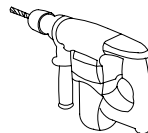


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

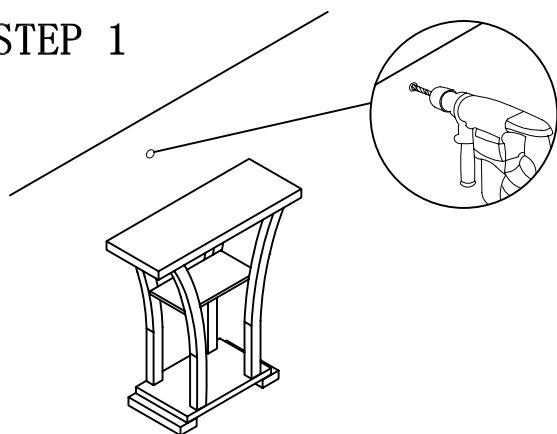


To drill a hole (about 1") on the wall.

### STEP 2

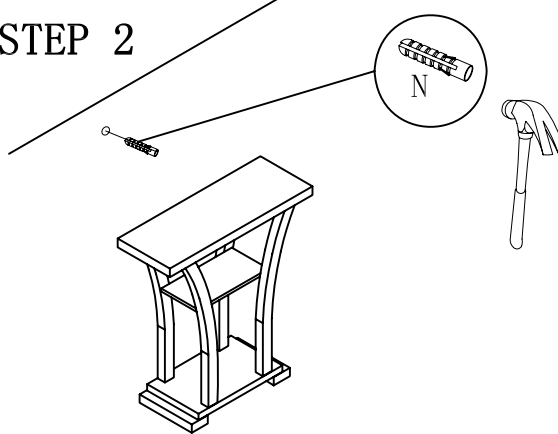


To tap drywall anchor into the hole.

### STEP 3

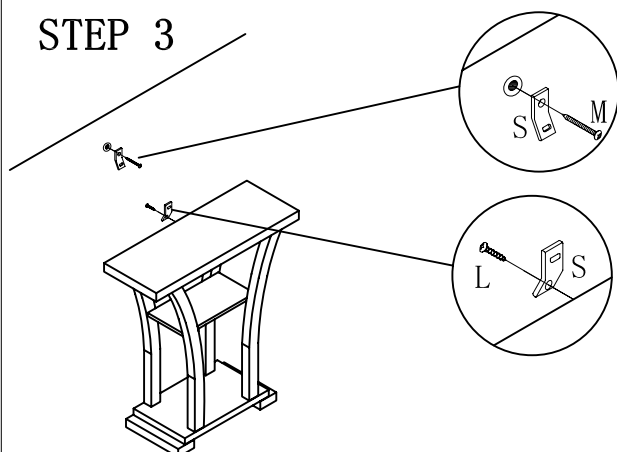

To insert the screw into each bracket and hang one on drywall anchor.

### STEP 4

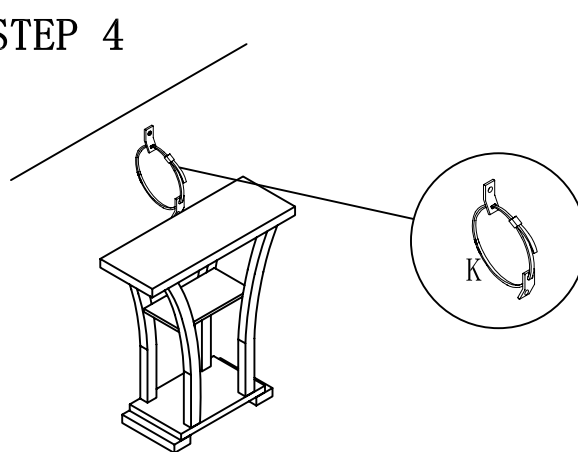

To tie the strap through bracket and pull it lightly till it steady.