






# ASSEMBLY INSTRUCTION

## CROWNMARK MODEL : B1600 KING BED





### (BOX 1) BOX OF HEADBOARD

NO	ITEM	QTY
A	Headboard 	1 PC
B	Finial 	1 PC
C	Stretcher 	1 PC







### (BOX 4) BOX OF HEADBOARD LEG

NO	ITEM	QTY
D	Headboard KD Leg ( L/R) 	2 PCS
E	Bun foot 	2 PCS


### (BOX 2) BOX OF FOOTBOARD


NO	ITEM	QTY
F	Footboard 	1 PC
G	bed slat 	4 PCS
H	Support leg 	8 PCS
I	Bun foot 	2 PCS

### (BOX 1) HARDWARE LIST

NO	ITEM	QTY
1	Ø5/16" x 18 x 1-3/4" L 	10 PCS
2	Ø5/16" x 18 x 1-1/2" L 	2 PCS
3	Ø5/16" 	12 PCS
4	Ø5/16" 	12 PCS
5	Ø5/16" 	1 PC
6	1-3/16" 	8 PCS

### (BOX 3) BOX OF SIDE RAIL

NO	ITEM	QTY
K	Side Rail (L/R) 	2 PCS

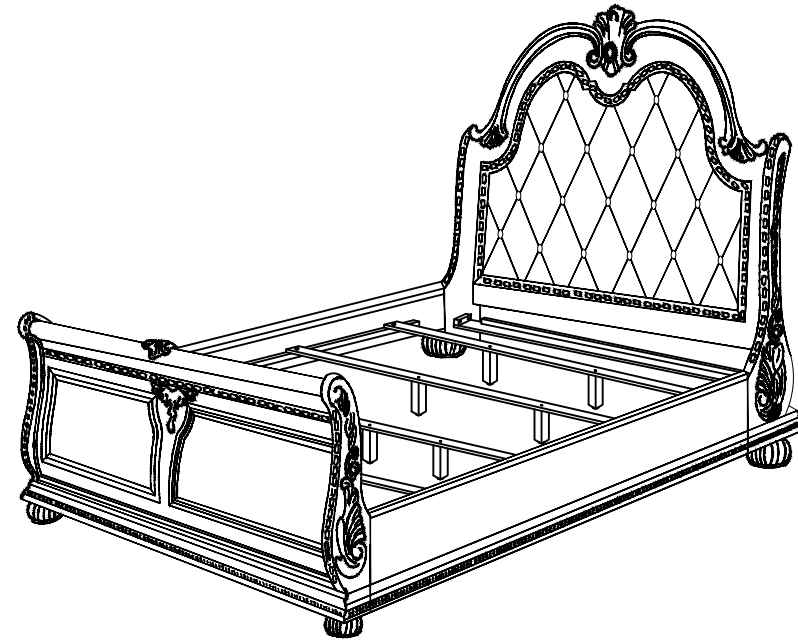


NOTE : DURING ASSEMBLY, DO NOT FULLY TIGHTEN  
ANY HARDWARE UNTIL THE COMPLETE  
UNIT HAS BEEN ASSEMBLED.


"THE HARDWARE IS LOCATED IN THE PACKING ITEMS"

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREWS WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.


## STEP 1

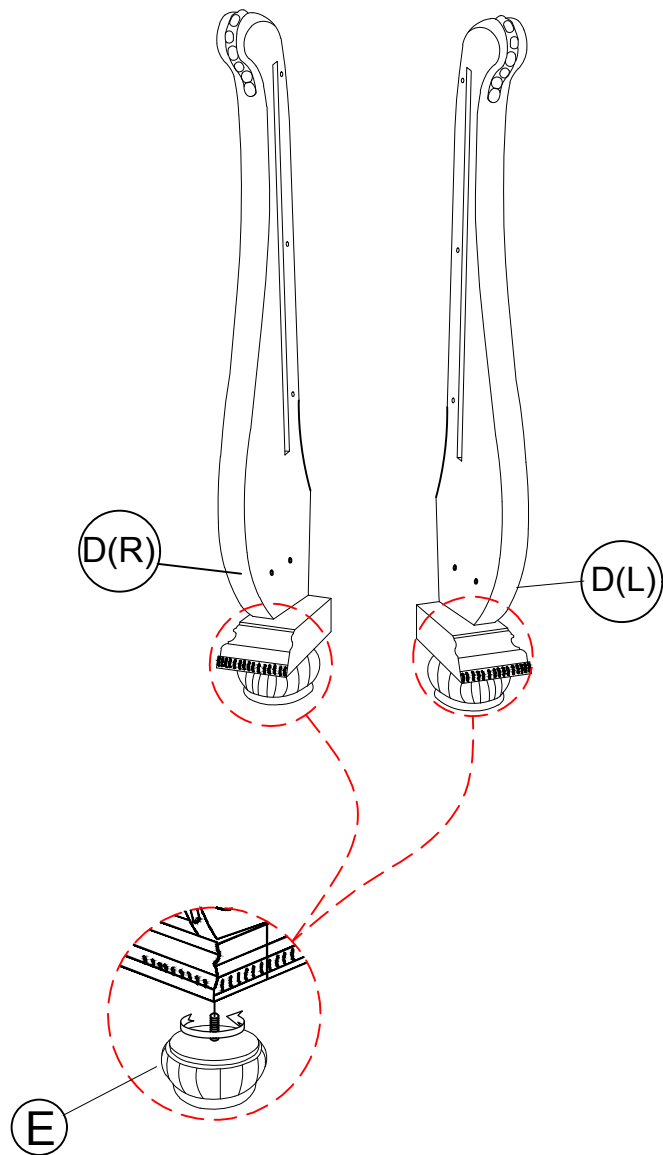


## STEP 2

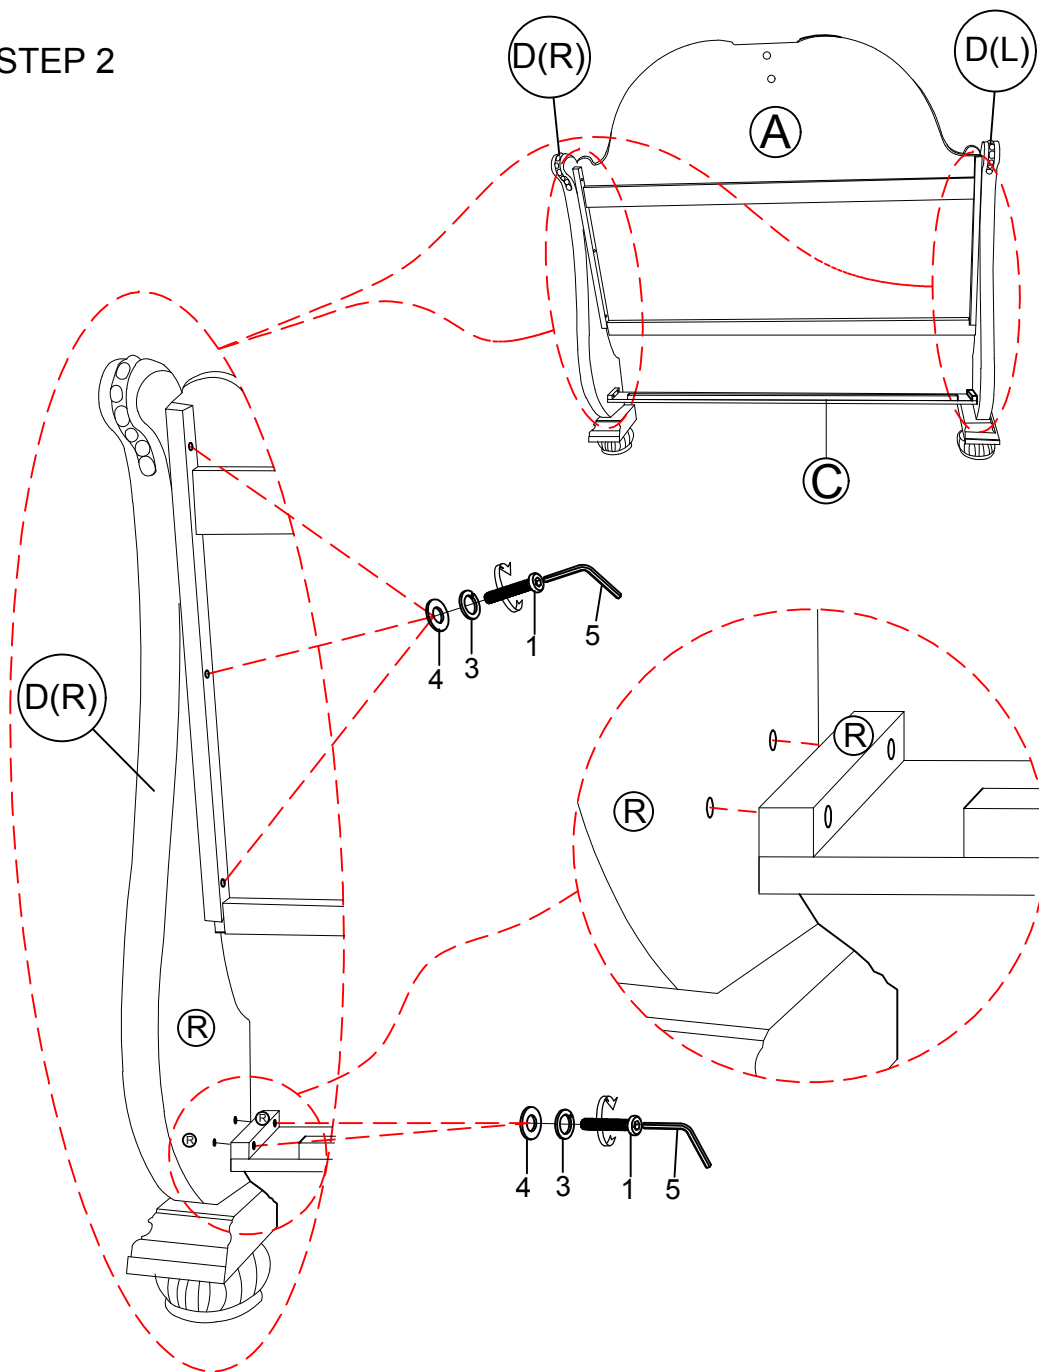


### STEP 3

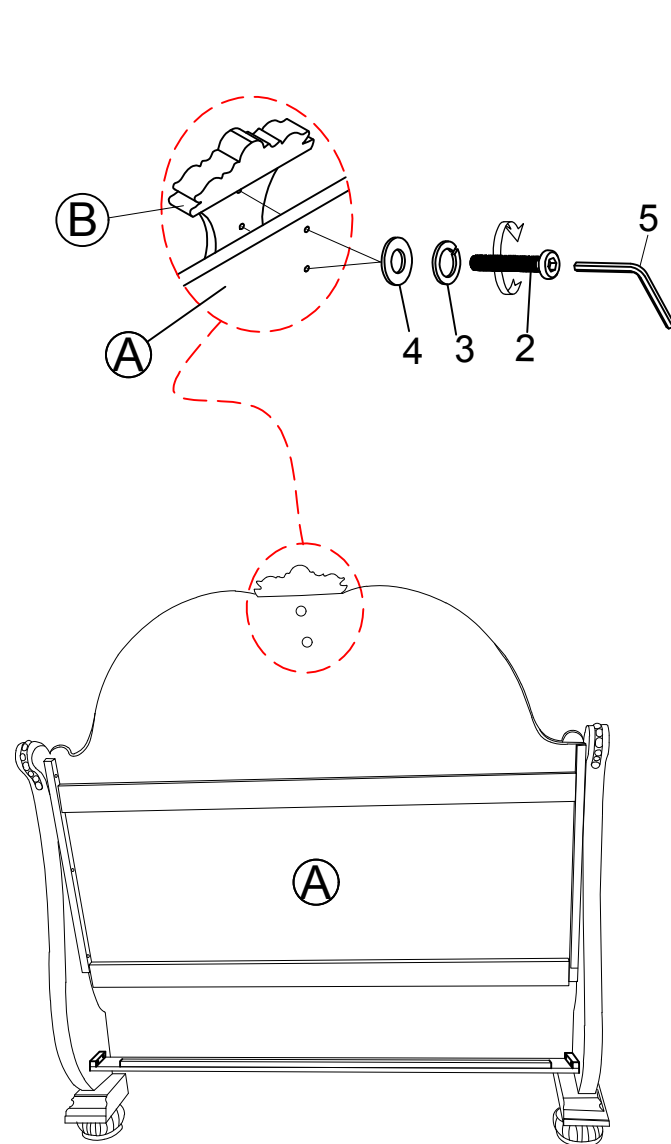

### STEP 4

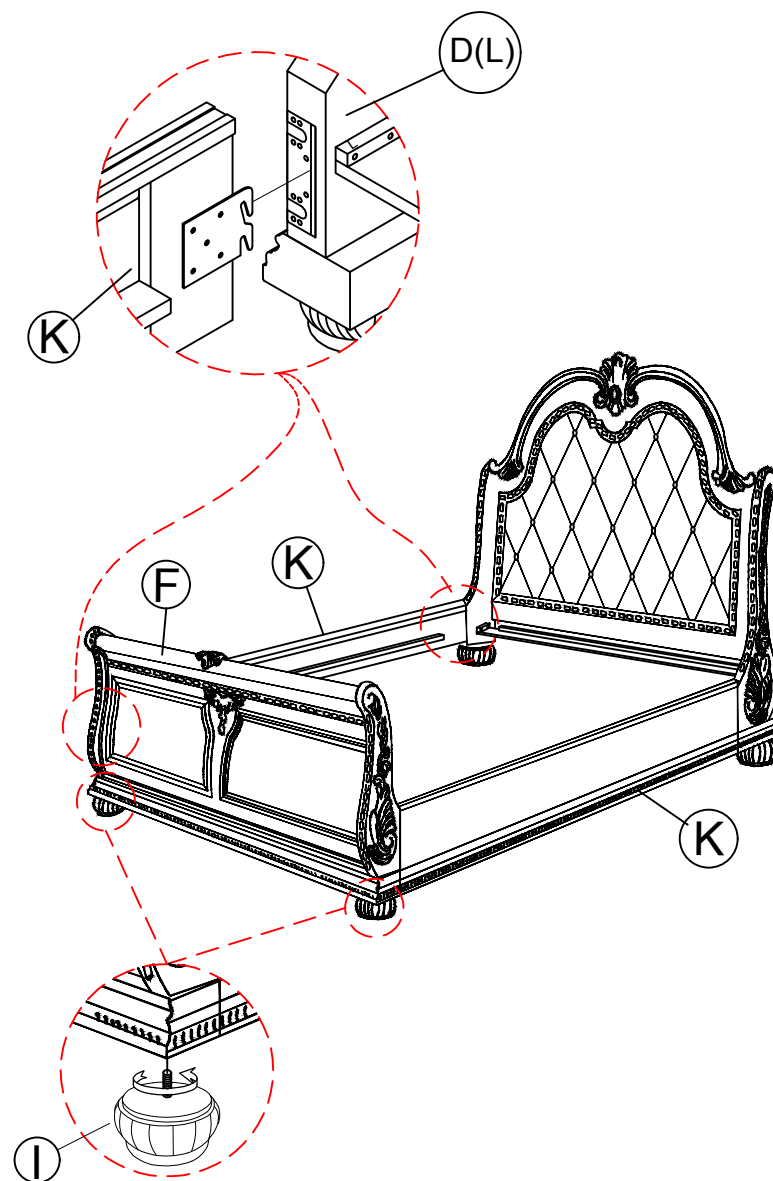

## STEP 5

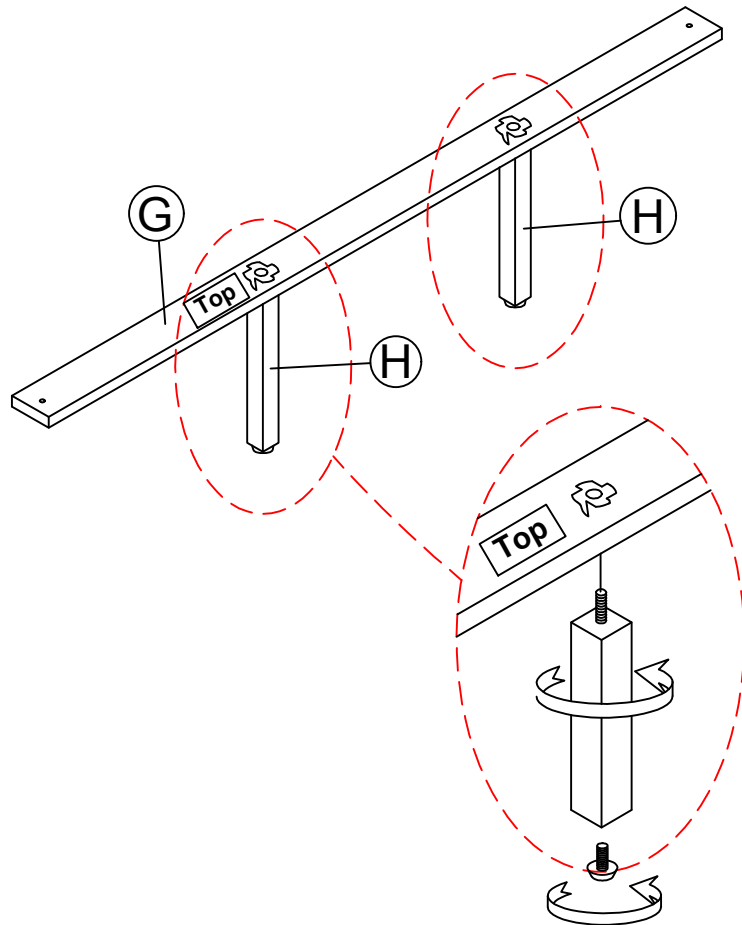

## STEP 6 COMPLETED

