## ASSEMBLY INSTRUCTIONS


## U3299-04-05 RECLINER MADE IN CHINA

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

**Before you start assembly**: Please read <u>all instructions</u> carefully before beginning the assembly process. It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION: For your safety, this product requires two people to lift.

| PARTS LIST |             | - X |
|------------|-------------|-----|
| PICTURE    | DESCRIPTION | QTY |
|            | SEAT        | 1   |
|            | BACK        | 1   |

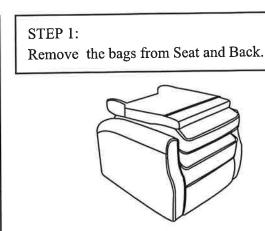

## STEP 2: Hold back and flap with both hands and line male and female brackets together. Apply downward force to top of back (one side at a time) to ensure snap engagement.

## STEP 3: To Recline:

Pull the handle on the right side of seat as below Use your body weight and push backwards to the fully reclined position

