


**ASSEMBLY INSTRUCTIONS**  
**INSTRUCCIONES**

**2321SET CHAIR**  
**2321SET SILLA**



| No. | DESCRIPTION                                                                                            | Q'TY        |
|-----|--------------------------------------------------------------------------------------------------------|-------------|
| C   | CHAIR BACK            | 1pc/pieza   |
| D   | SEAT FRAME & CUSHION  | 1pc/pieza   |
| E   | LEG                   | 2pcs/piezas |

| No. | DESCRIPTION                                                                                                            | Q'TY         |
|-----|------------------------------------------------------------------------------------------------------------------------|--------------|
| ⑤   | SPRING WASHER  1/4"*11mm            | 10pcs/piezas |
| ⑥   | METAL WASHER  1/4"*18mm             | 10pcs/piezas |
| ⑦   | BOLT  $\Phi 1/4"$ *20*1-1/2"        | 2pcs/piezas  |
| ⑧   | BOLT  $\Phi 1/4"$ *20*2-5/8"        | 4pcs/piezas  |
| ⑨   | BOLT  $\Phi 1/4"$ *20*3-1/8"        | 4pcs/piezas  |
| ⑩   | WOOD DOWEL  $\Phi 10\text{mm}$ *1"L | 1pc/pieza    |
| ⑪   | ALLEN KEY  $\Phi 1/4"$ *2-1/4"      | 1pc/pieza    |

step 1 / paso 1

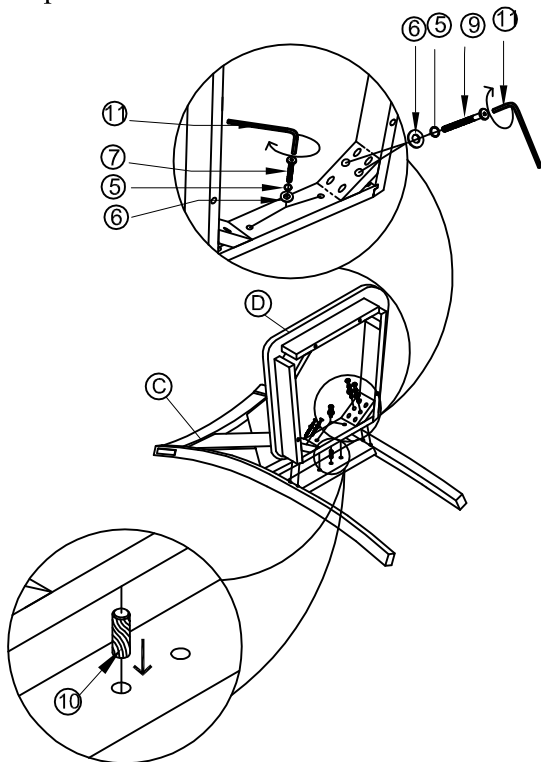

step 2 / paso 2

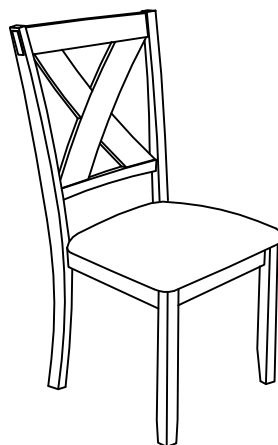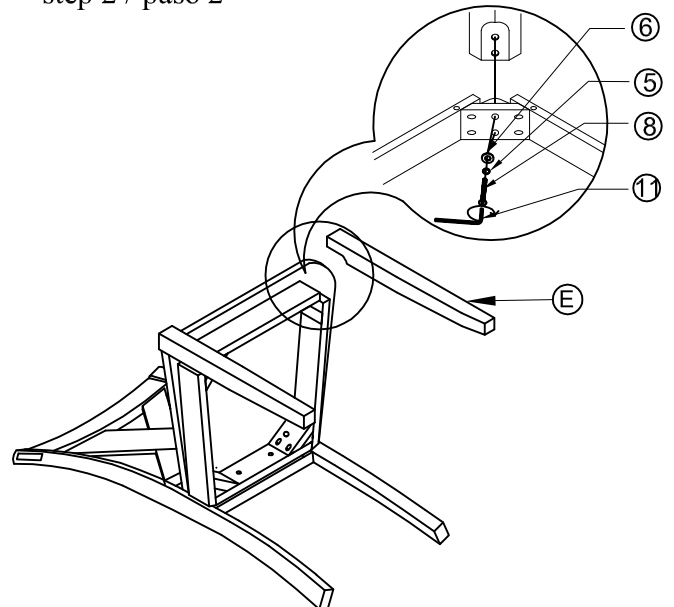

**DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !**  
**NO APRETAR LOS TORNILLOS HASTA ARMAR COMPLETAMENTE**