



Liberty Furniture
INDUSTRIES, INC

LIBERTY FURNITURE

ASSEMBLY INSTRUCTION

ITEM #: 303-B300124 DESCRIPTION: UPHOLSTERED X BACK COUNTER HEIGHT CHAIR

Thank You for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below.



Assembly Completed !!

List of Part For 1 Set

01		Chair Back	1
02		Seat Frame	1
03		Front Leg Left	1
04		Front Leg Right	1
05		Front Stretcher	1
06		Side Stretcher Left	1


07		Side Stretcher Right	1
----	--	----------------------	---

List of hardware For 1 Set

a		Flat Washer 1/2 x 18mm	10
b		Spring Washer 1/2	10
c		Hex.Bolt M6 x 80mm	4

d		Hex.Bolt M6 x 60mm	4
e		Hex.Bolt M6 x 40mm	2
f		PHRS Screw #8 x 1 1/2	6
g		Spanner	1

Step 1

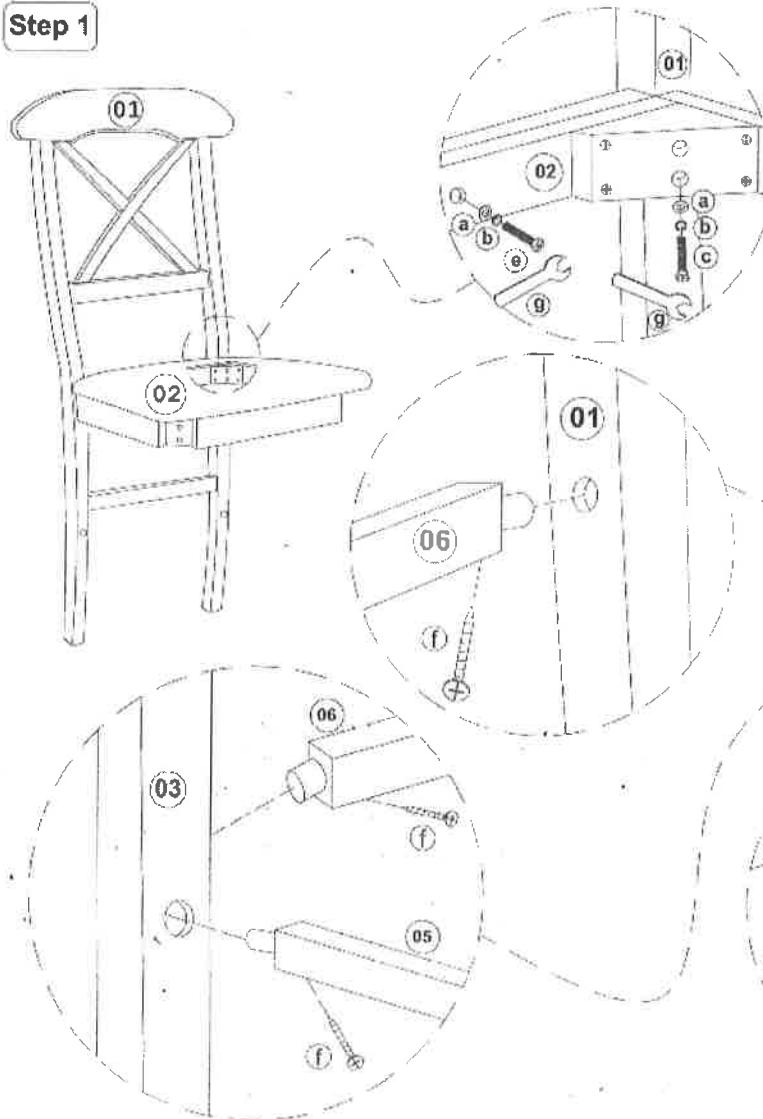

Step 2

