


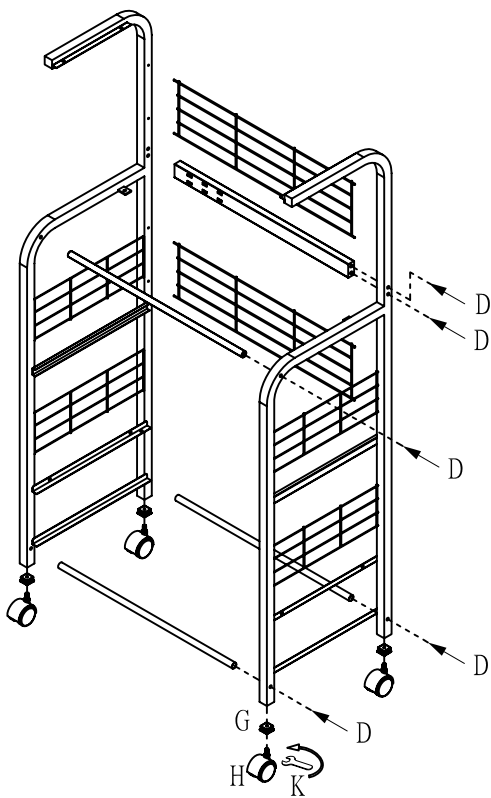
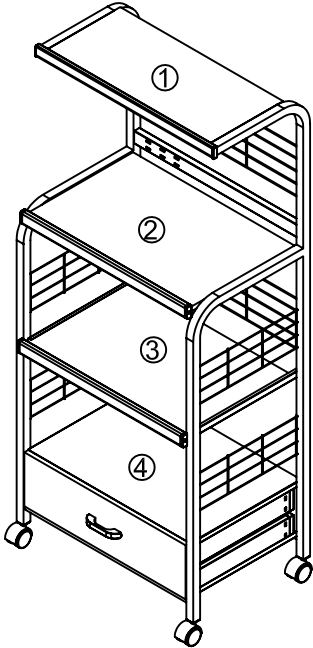
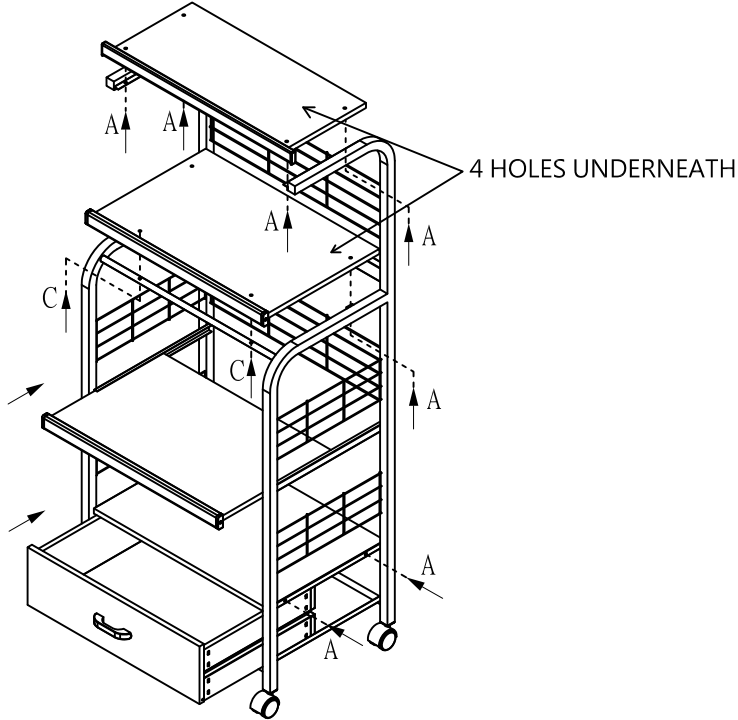
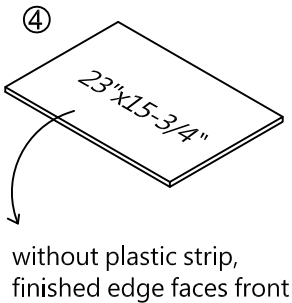


# ASSEMBLY INSTRUCTIONS

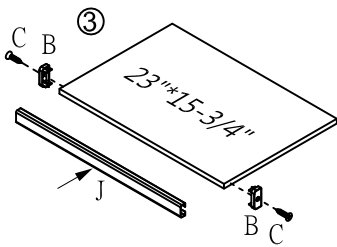

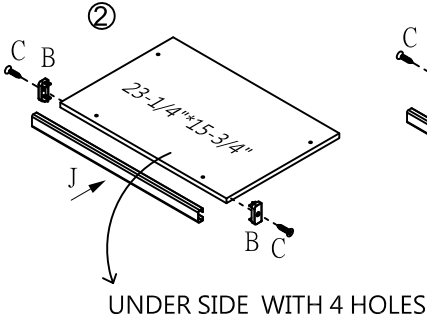


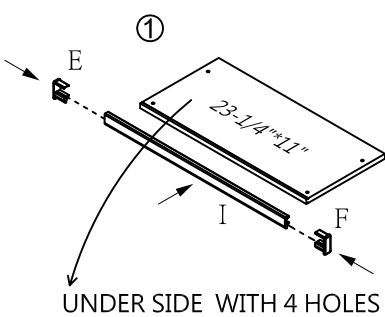



PARTS LIST			
A		ø4*3/8"	10PCS
B			4PCS
C		ø4*1"	6PCS
D		1/4"x1-3/4"	10PCS
E			1PC
F			1PC
G			4PCS
H			4PCS
I			1PC
J			2PCS
K			1PC
L			1PC




\* DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED!!

# Assembly Instruction

## PARTS LIST

A.Front panel		1	E. 'L' joint		4
B.Side panel		2	F.Handle		1
C.Rear side panel		1			
D.Bottom panel		1	G.Wood screw		2

1.Insert the 4\*'L' joint(Parts"E") into both sides of rear side panel (Parts"C")

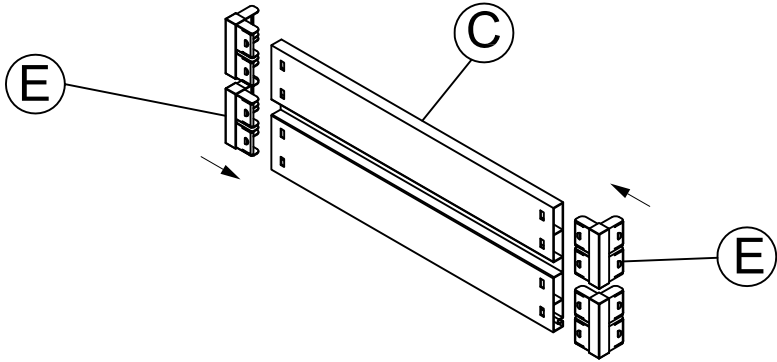

2.Put side panel onto 'L' joint on both sides(Parts"B") of rear panel and fix.  
(Note:Groove on both rear and side panel should be facing down)

3.Put m bottom panel along groove of the rear (white side up),  
insert rear panel to the 'E' fixture on the front.

4.Screw(G\*2)handle on front panel.

