

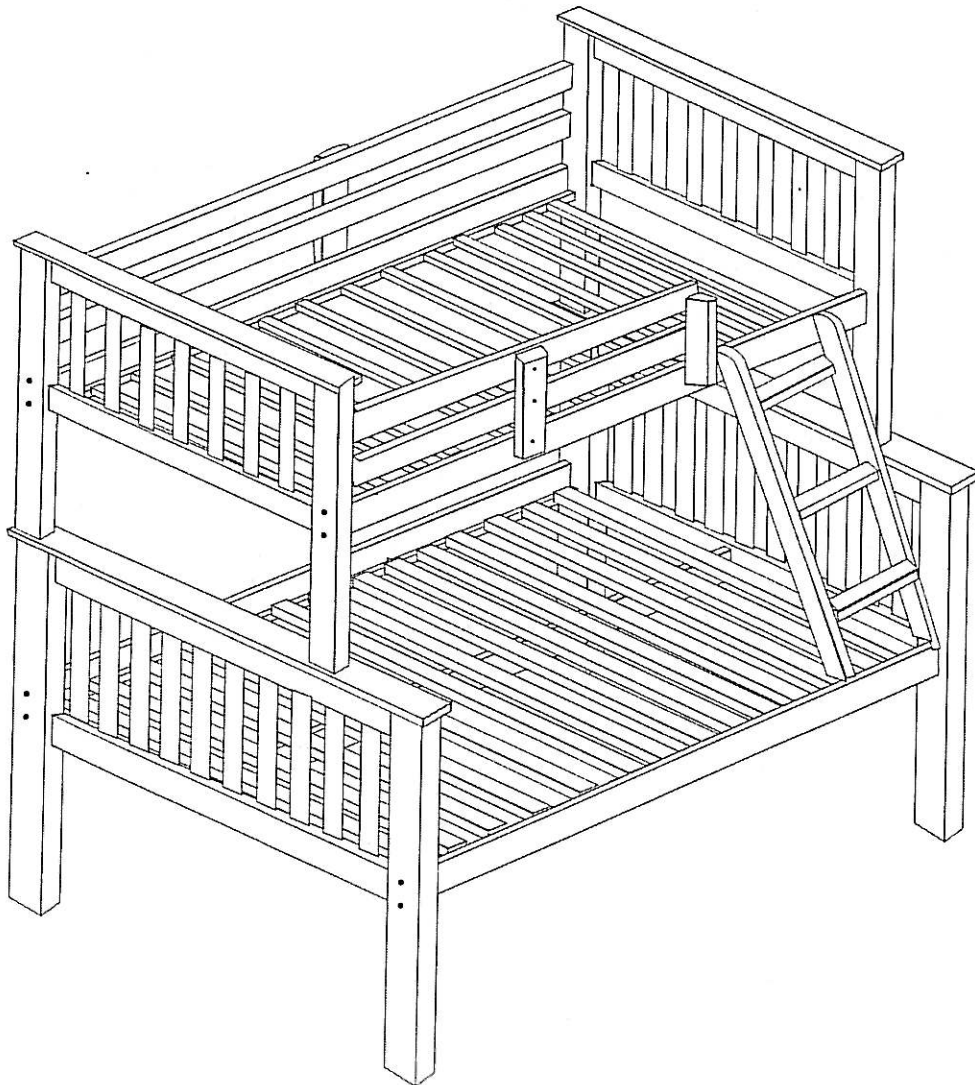
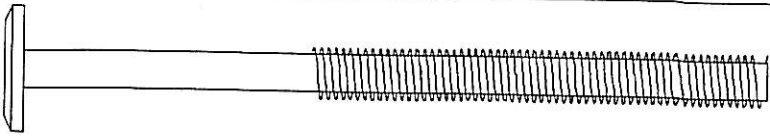








2501

TWIN FULL BUNK BED





A	16x		1/4" x 110 mm
B	16x		1/4"
C	06x		7,0 x 100 mm
D	09x		7,0 x 50 mm
E	01x		4,0 mm
F	66x		C.C - 4,0 x 35 mm
G	20x		10 x 40 mm
H	04x		15 x 90 mm
I	06x		C.Fl. - 4,0 x 35 mm
J	24x		C.C - 4,0 x 16 mm
K	02x		
L	02x		
M	02x		
N	02x		20g
O	02x		

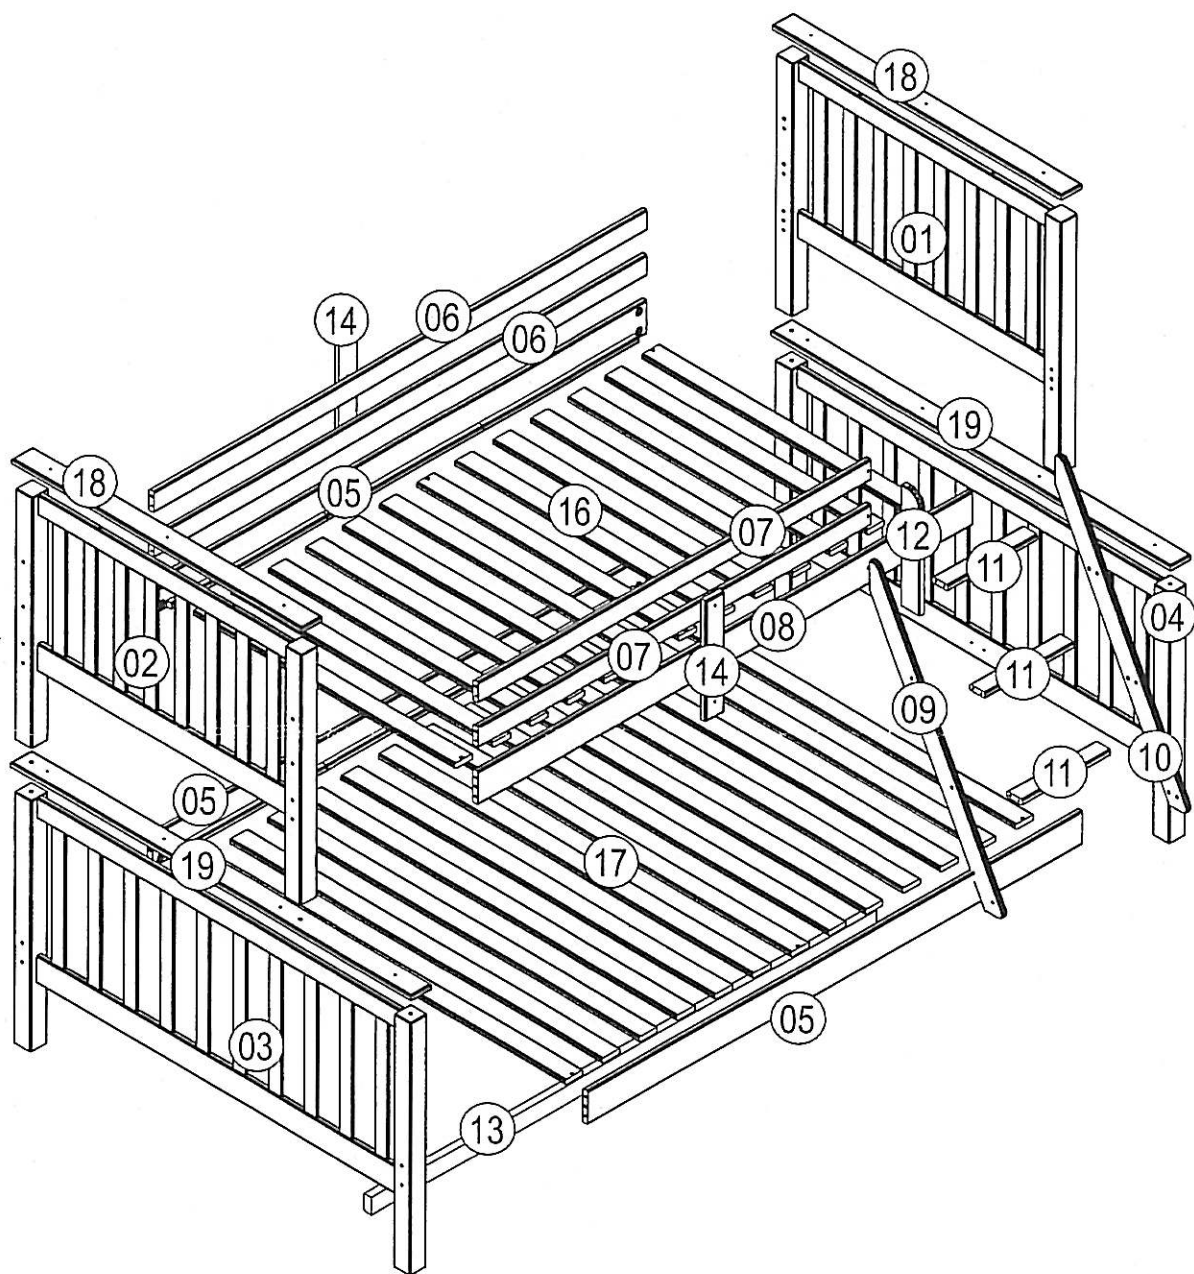



01)

G - 10 x40mm - 20x

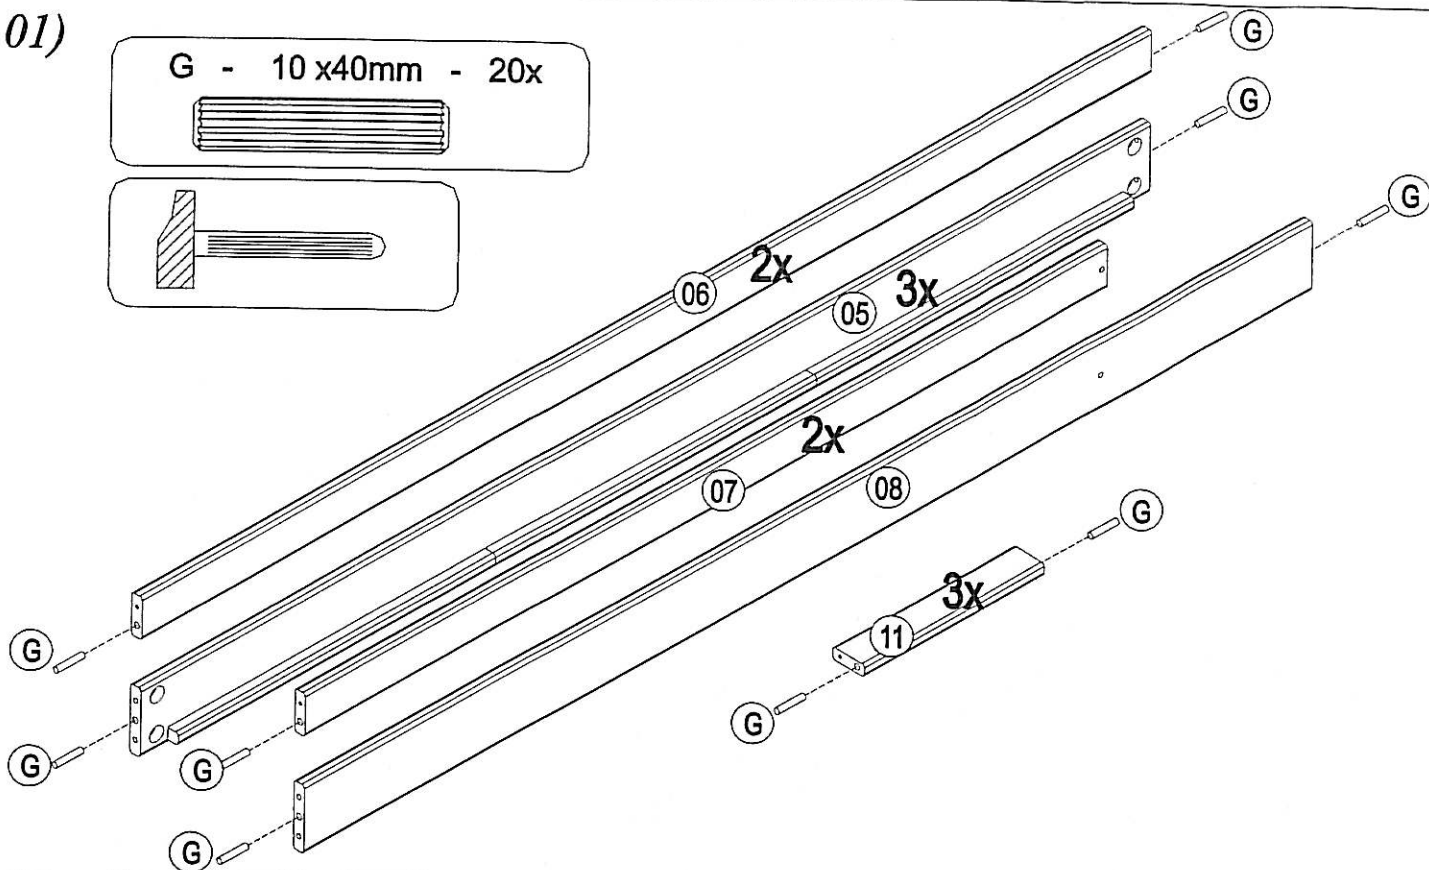


02)

F - 4,0 x 35 mm - 14x



N - 2x

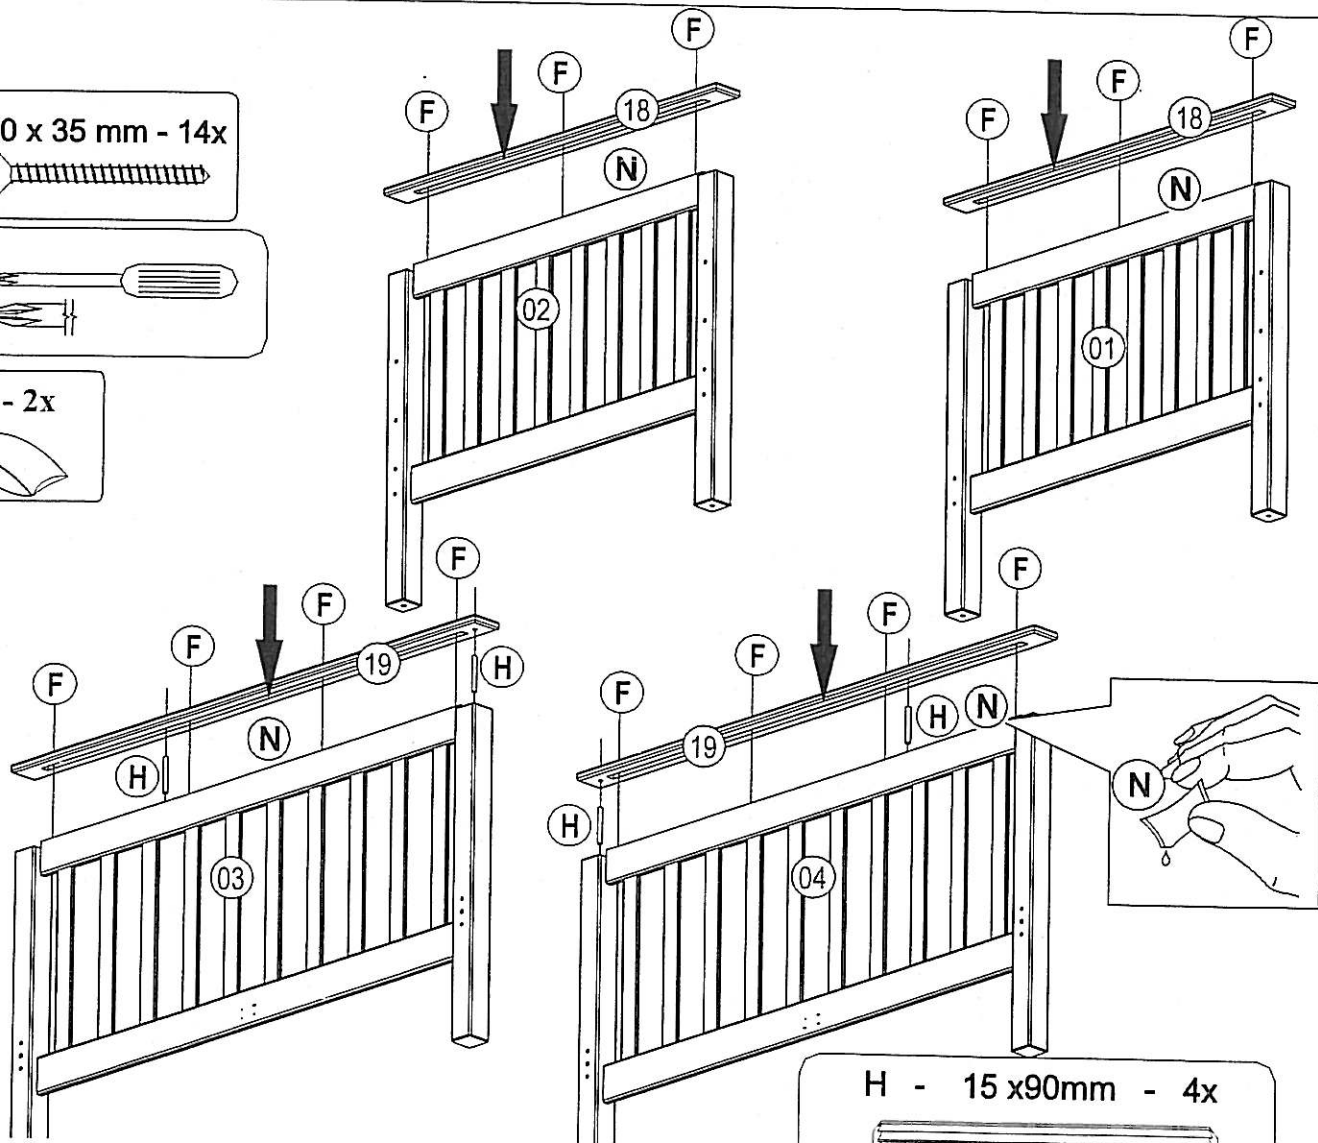

H - 15 x90mm - 4x






03)

J - 4,0 x 16 mm - 8x



M - 2x

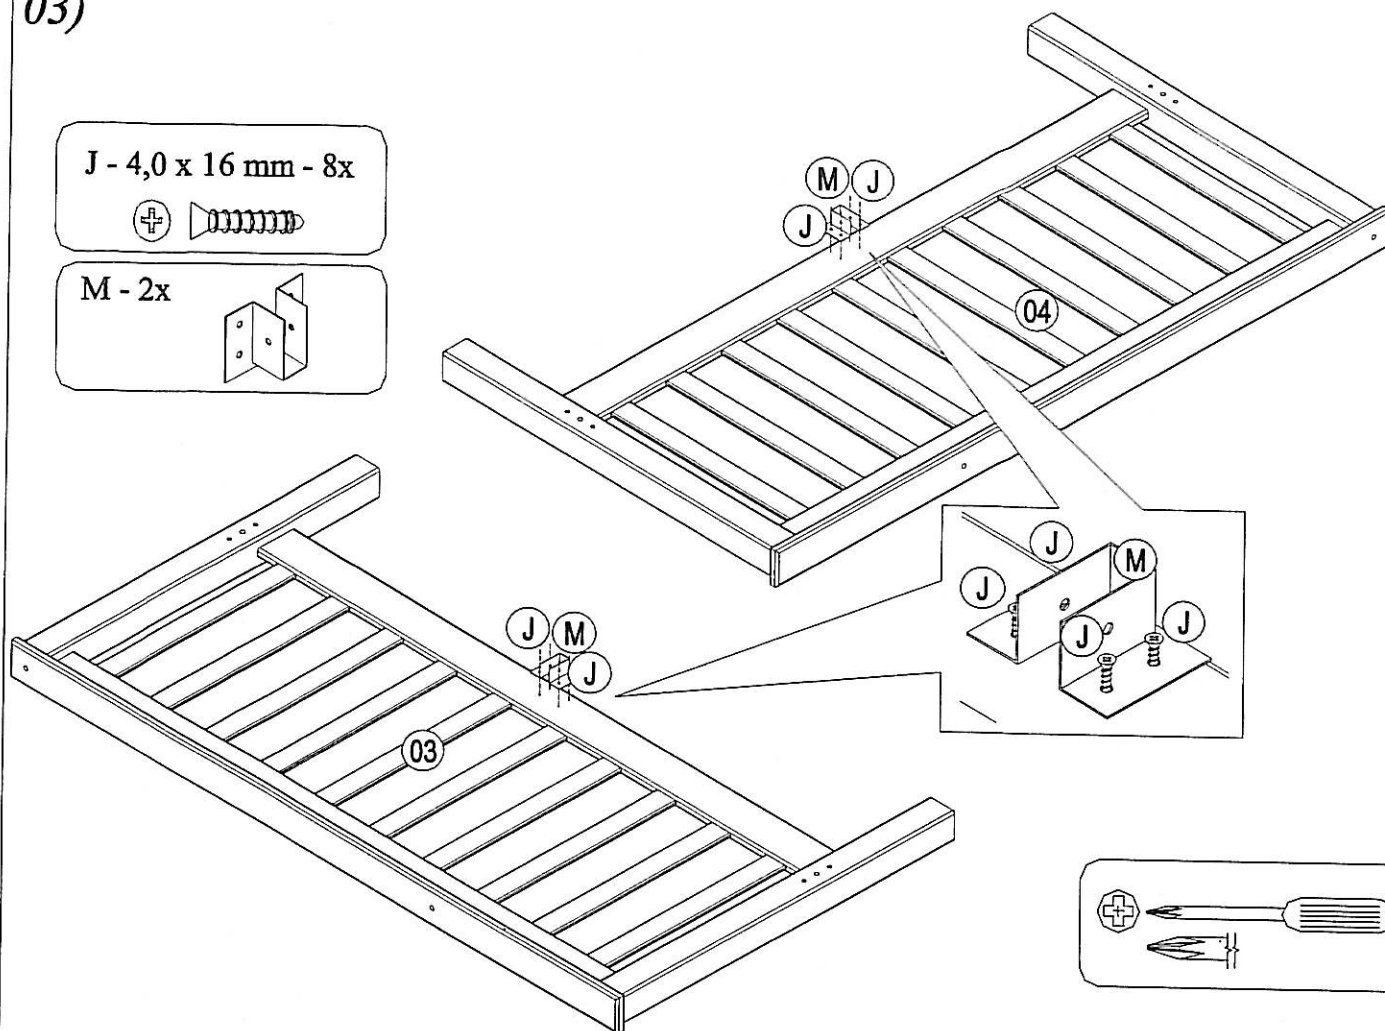


04)


E - 4,0mm - 1x




B - 1/4" - 8x

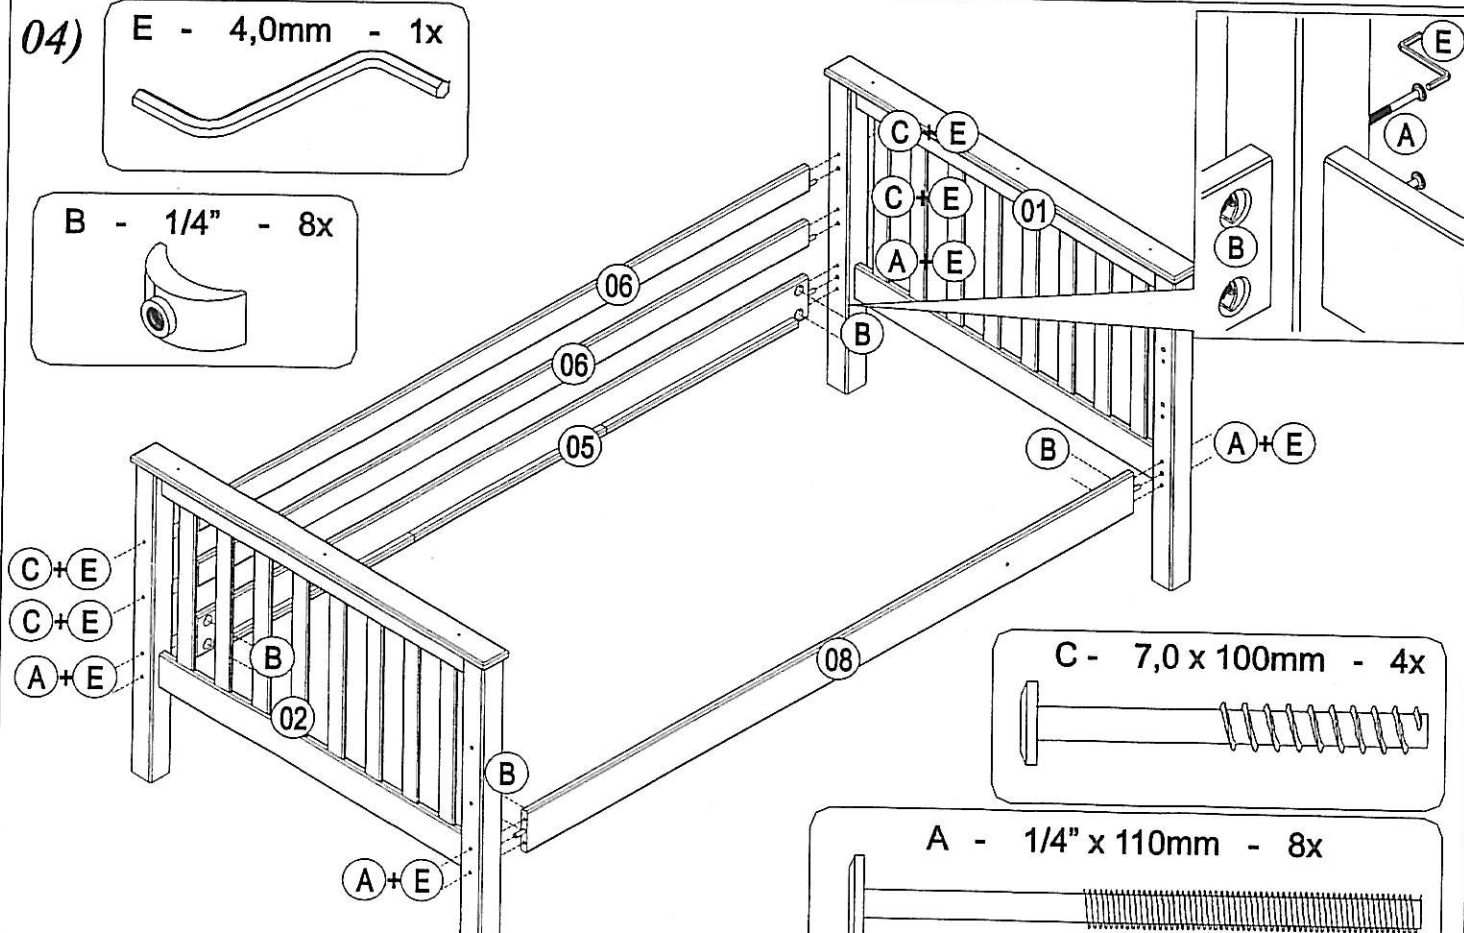

C - 7,0 x 100mm - 4x




A - 1/4" x 110mm - 8x




05)

A - 1/4" x 110mm - 8x




E - 4,0mm - 1x

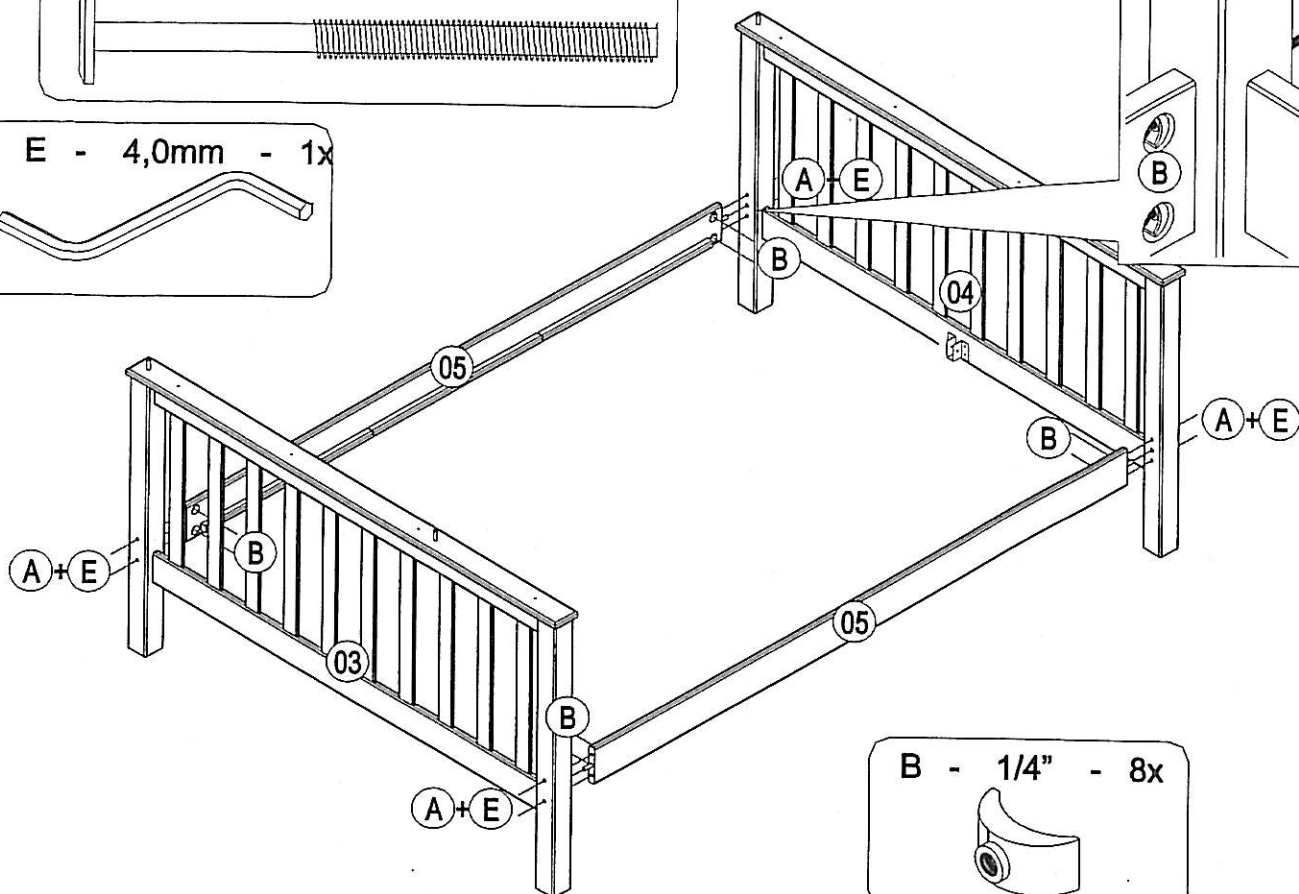

B - 1/4" - 8x




06)

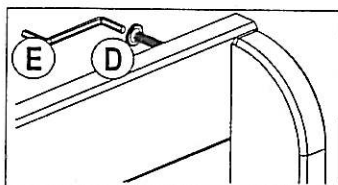



D+E

D+E

E - 4,0mm - 1x

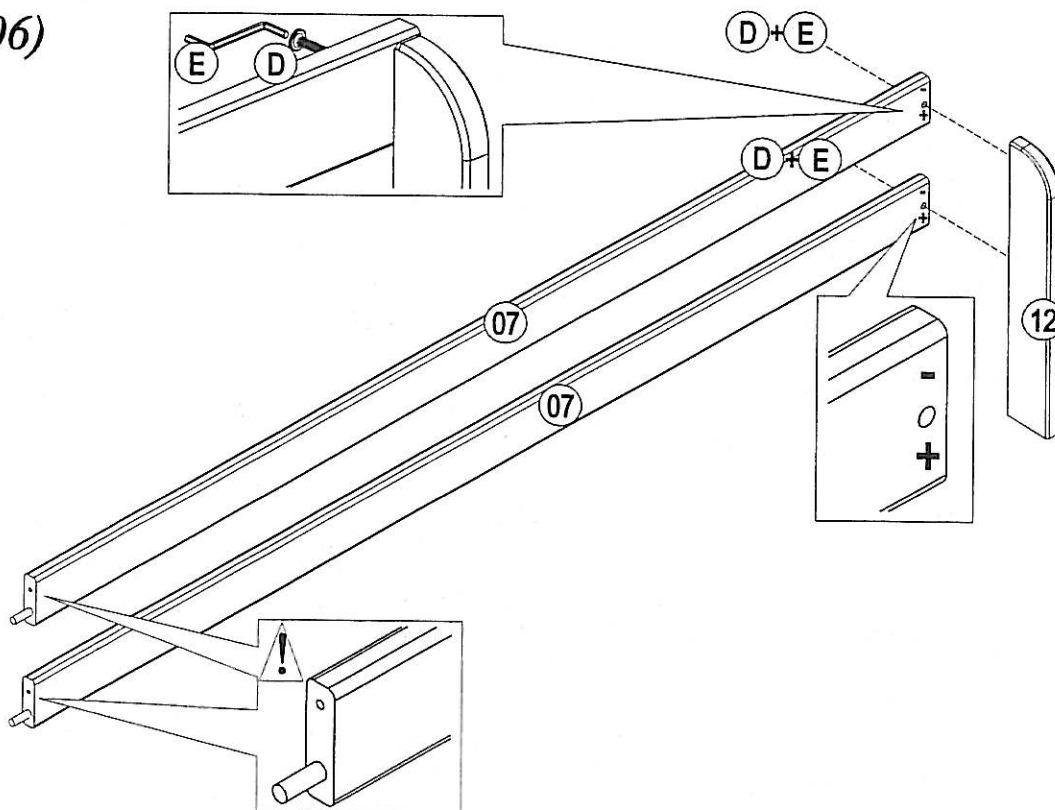

D - 7,0 x 50mm - 2x





07)


E - 4,0mm - 1x



D - 7,0 x 50mm - 1x

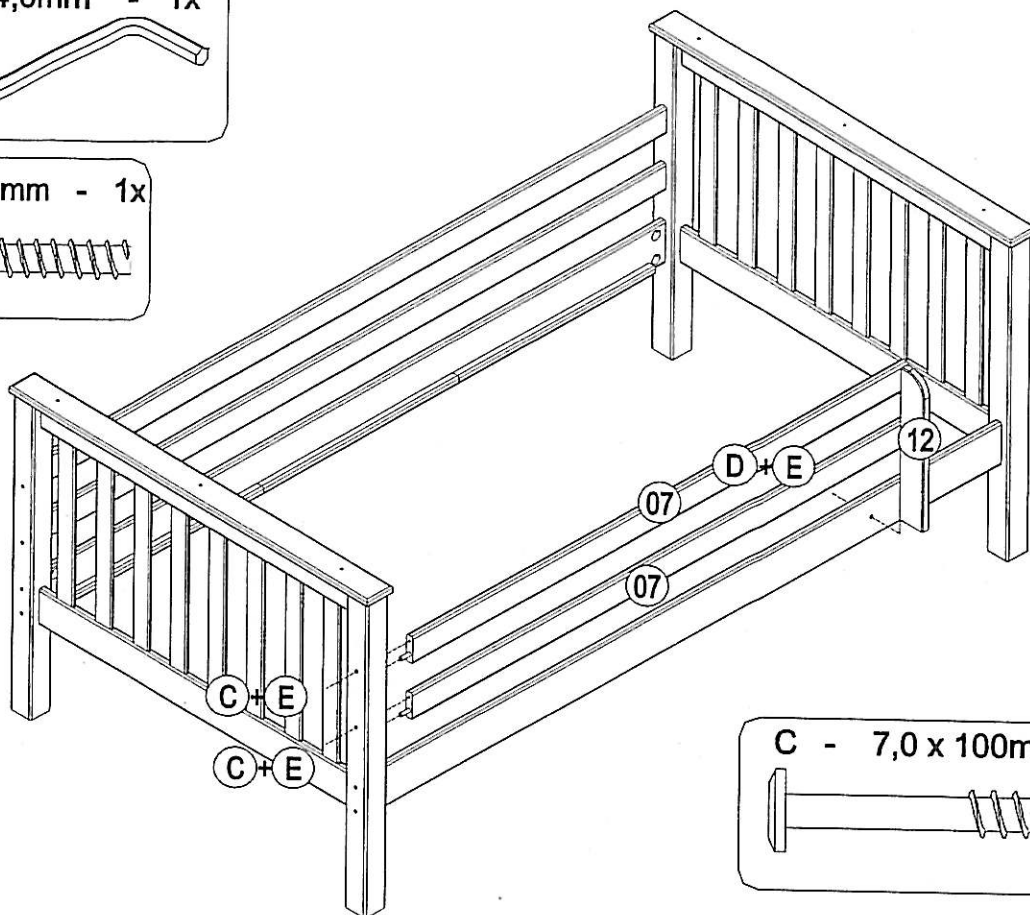


C - 7,0 x 100mm - 2x




08)





I - 4,0 x 35 mm - 6x





F - 4,0 x 35 mm - 26x



O - 2x

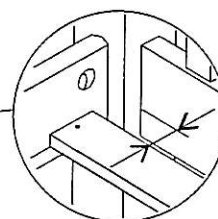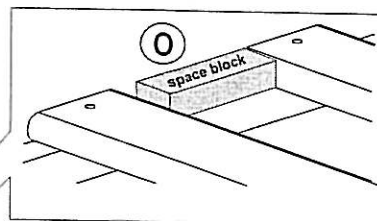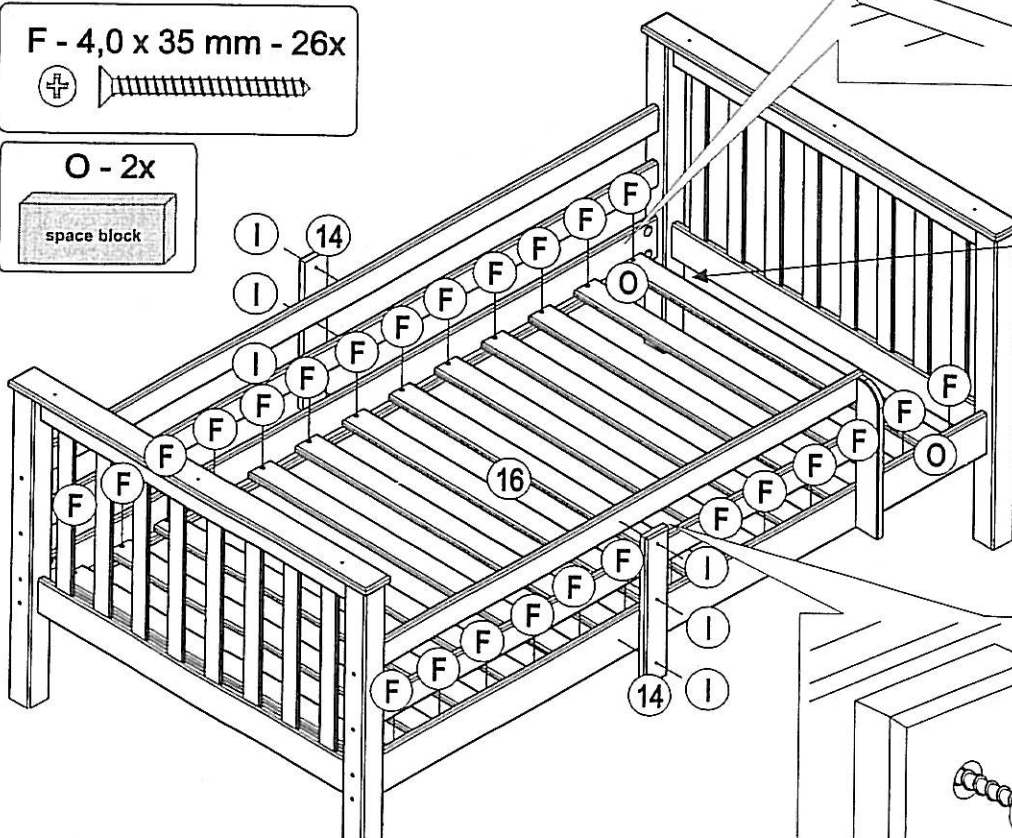



Distance between slat and bed end must be 3"1/4"

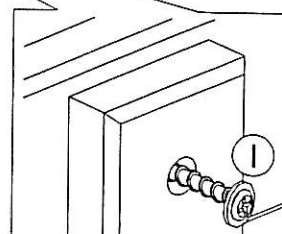


09)

J - 4,0 x 16 mm - 2x

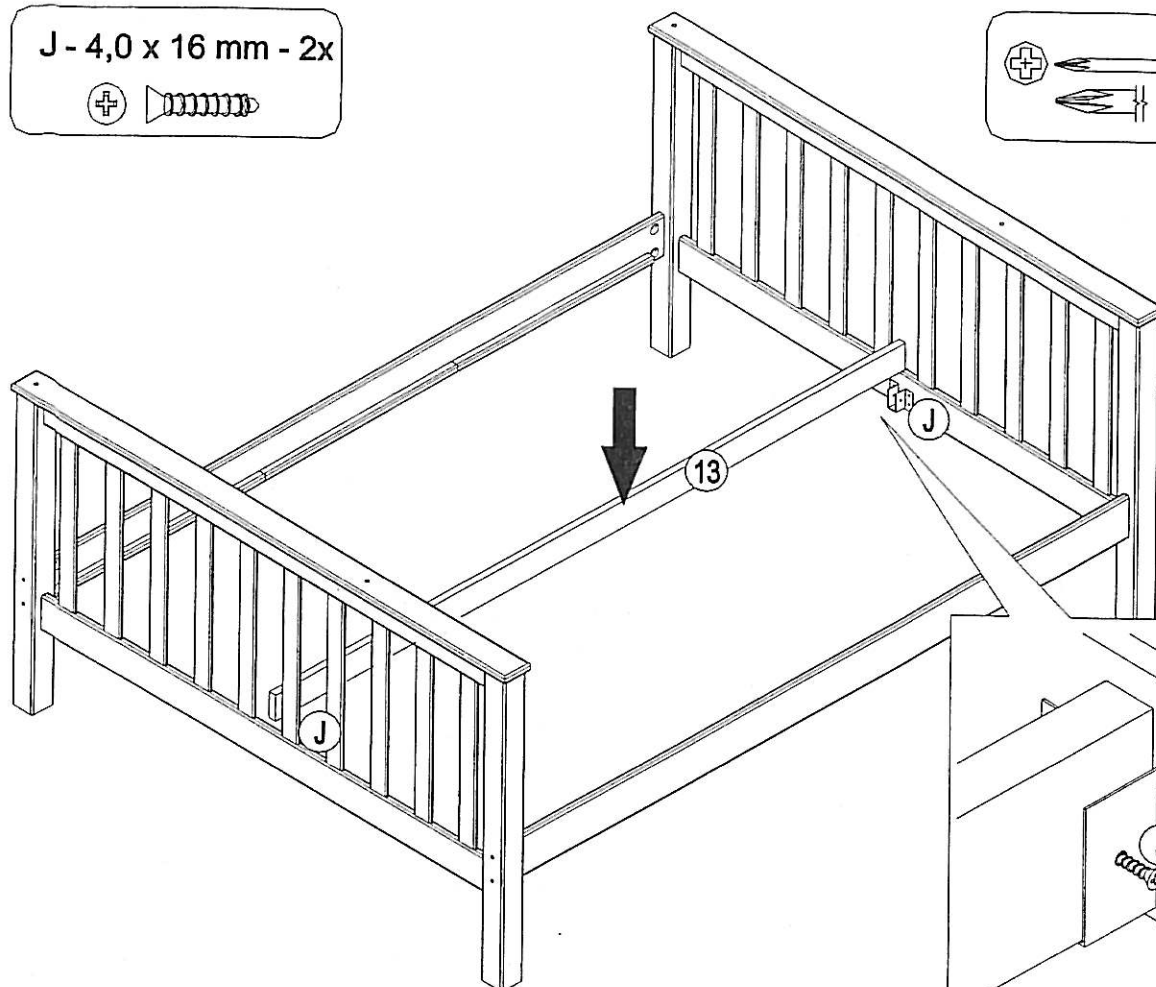




10)

F - 4,0 x 35 mm - 26x




O - 2x


space block

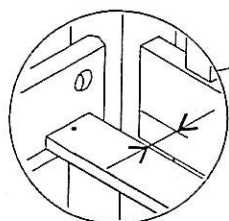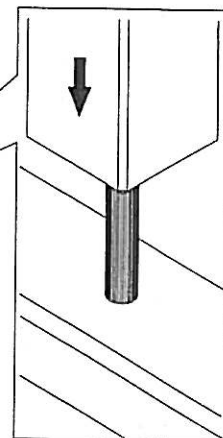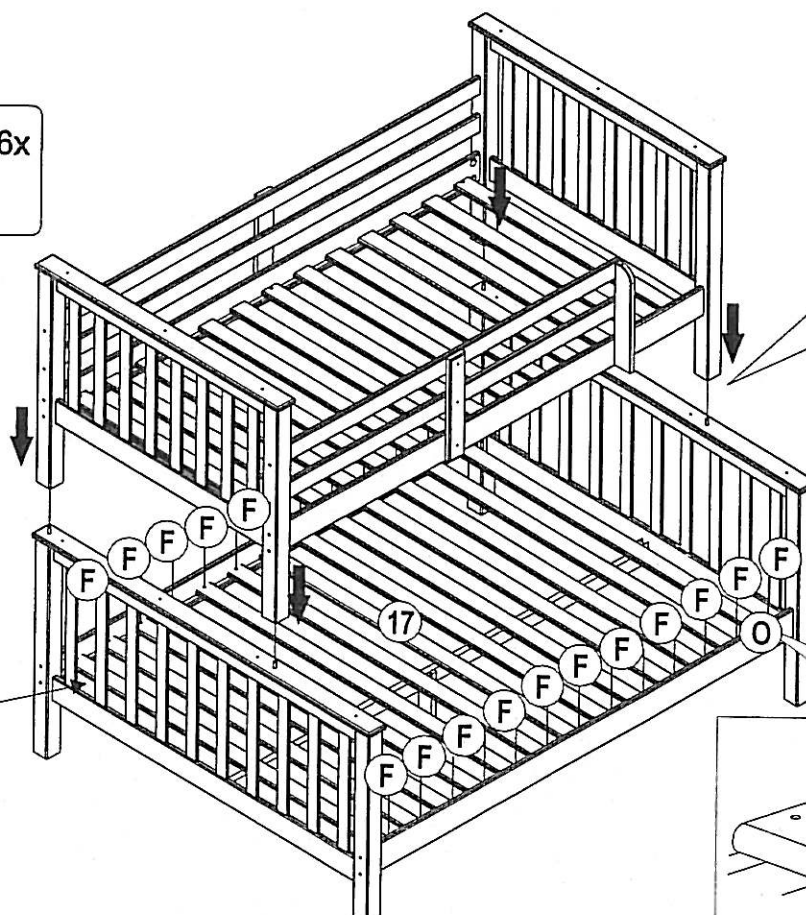

Distance between slat

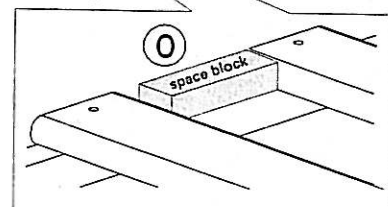

11)

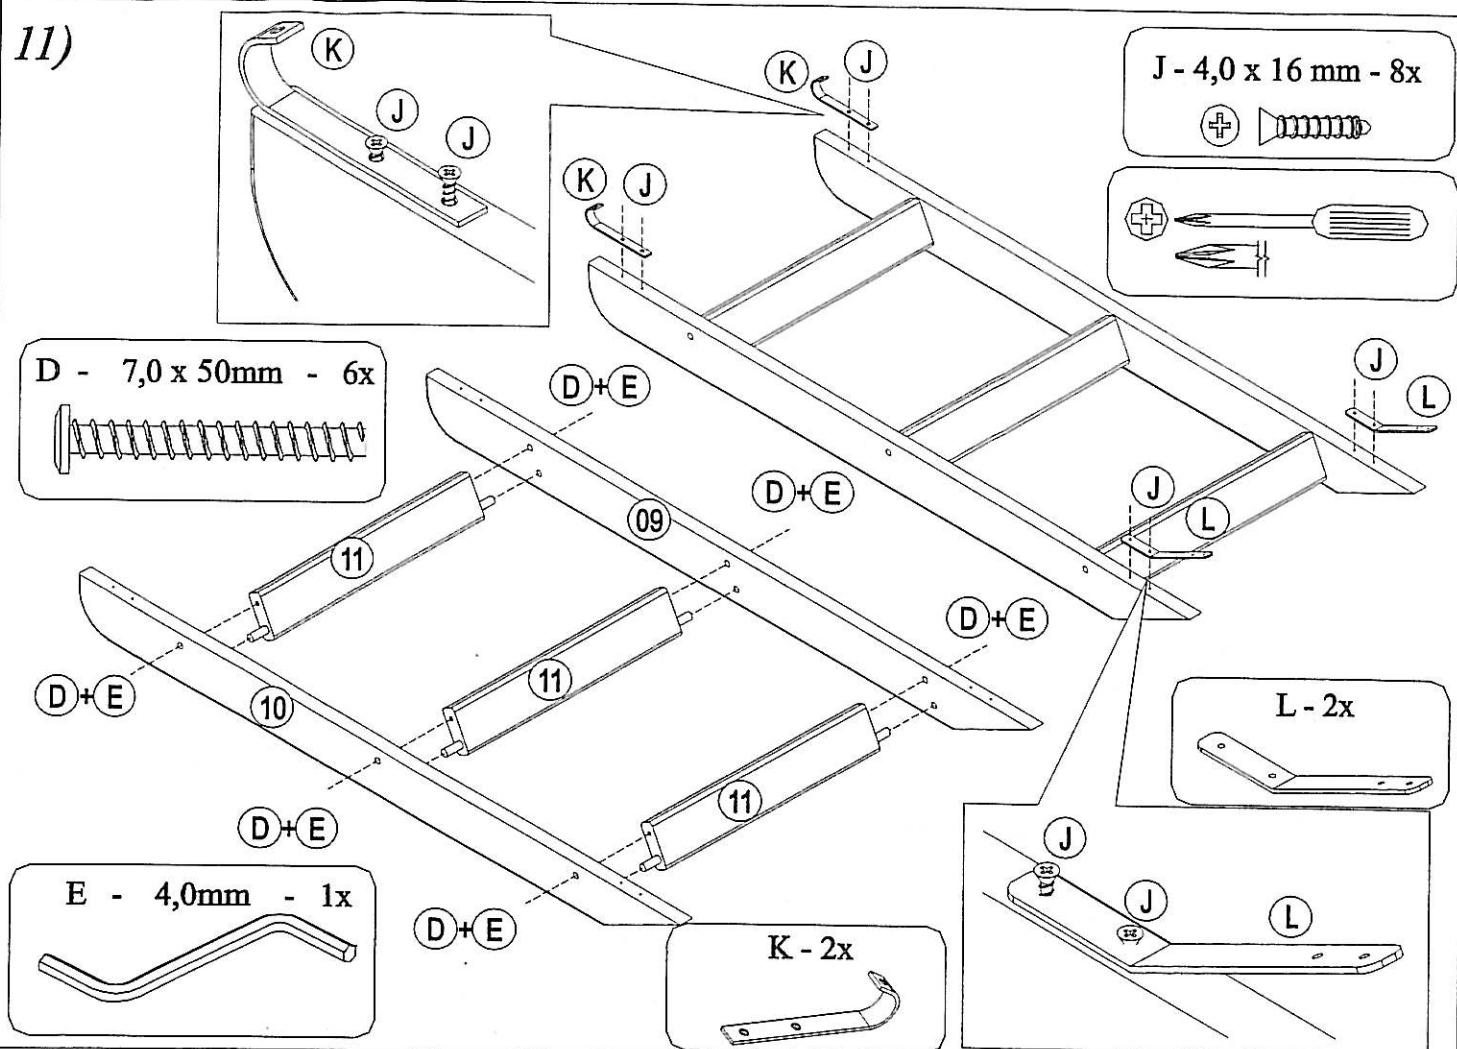

12)

