




8° th
Step:


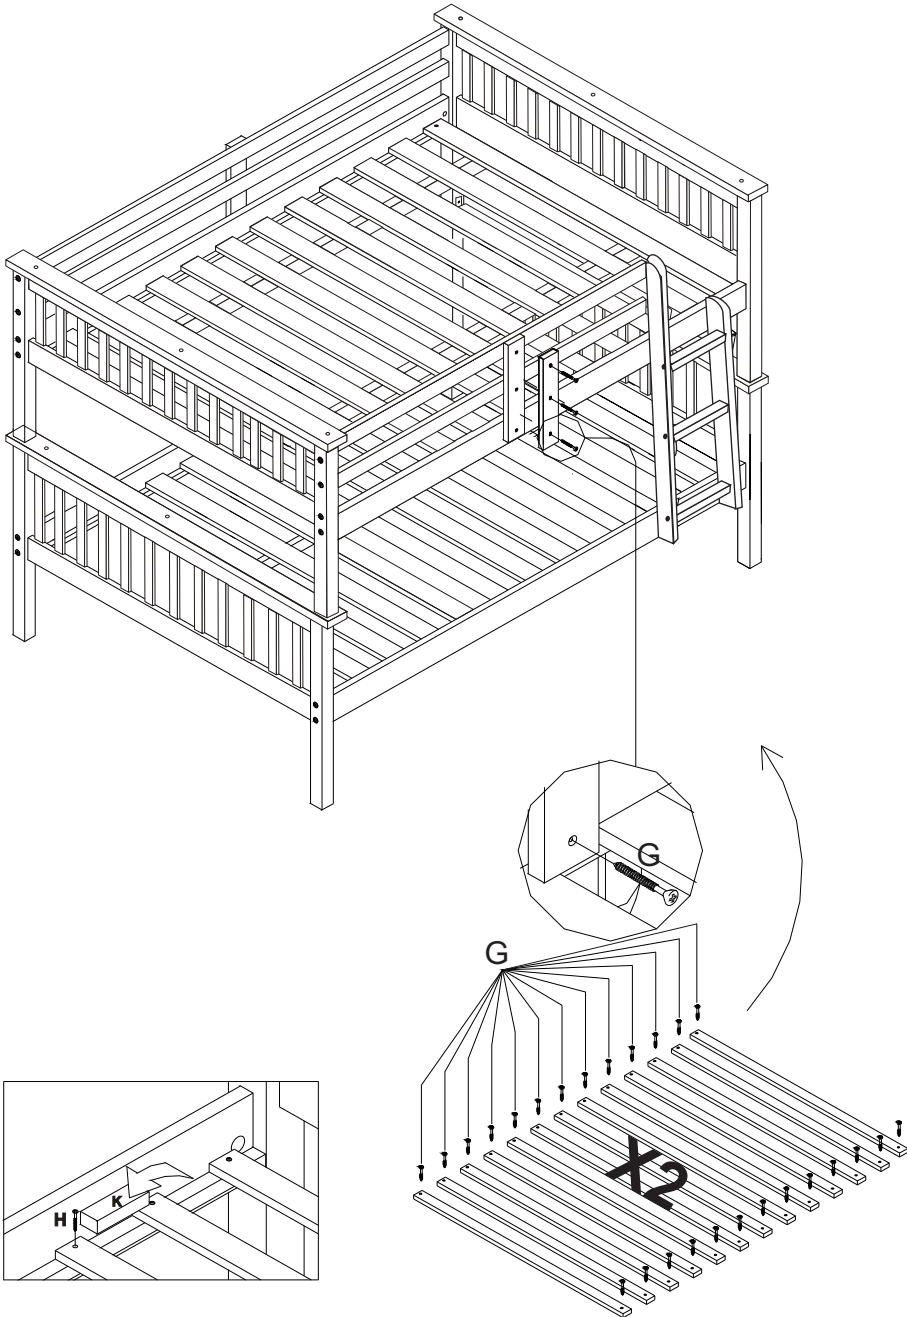


Bunk Bed Full/Full


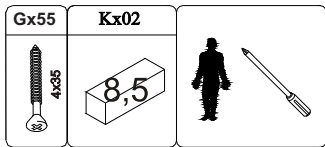


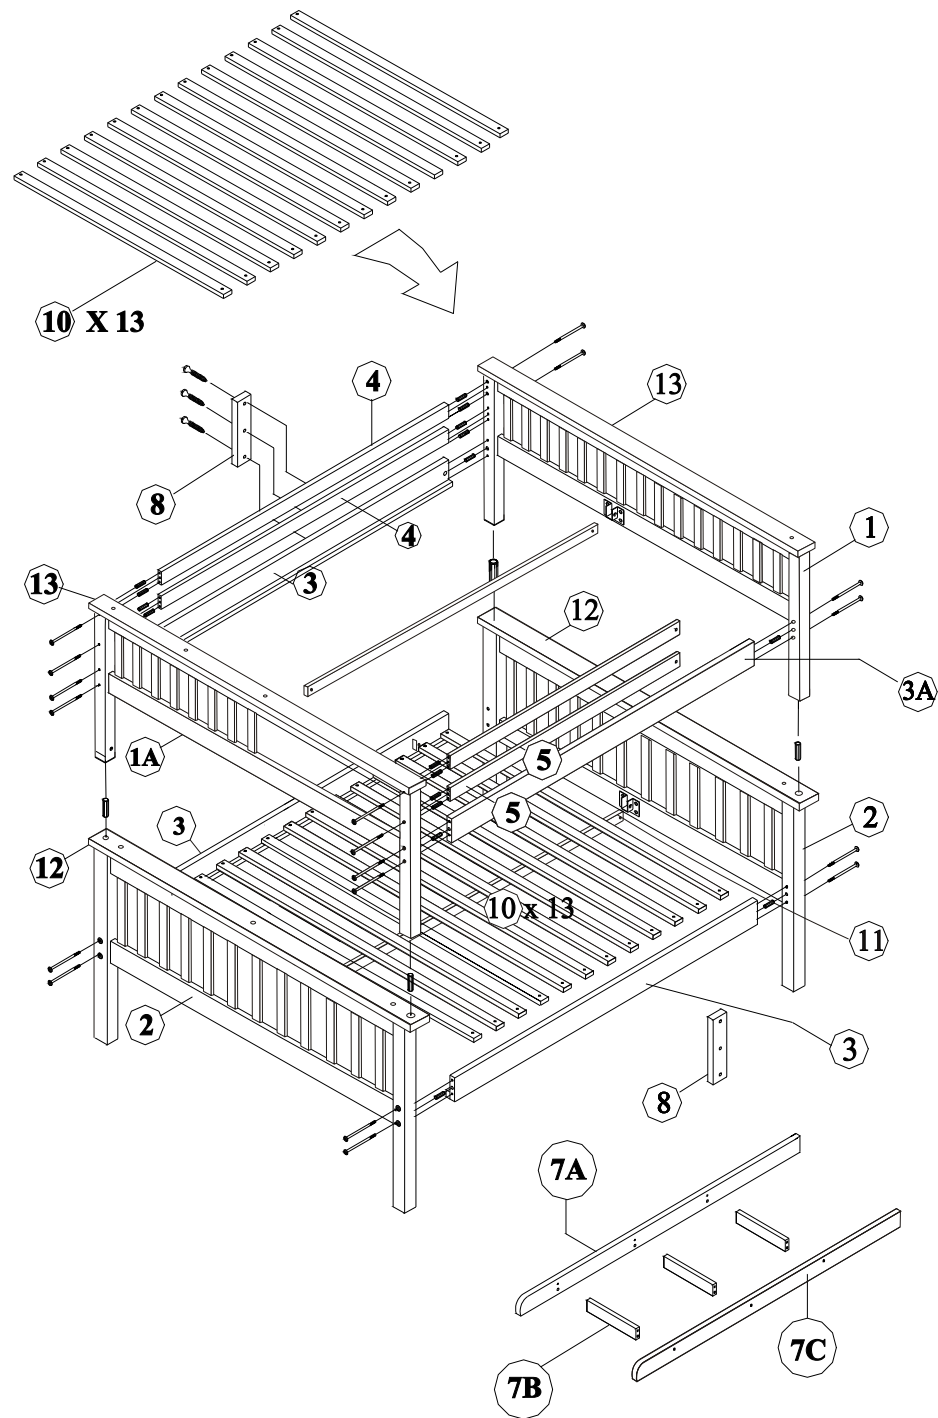




**6° th
Step:**

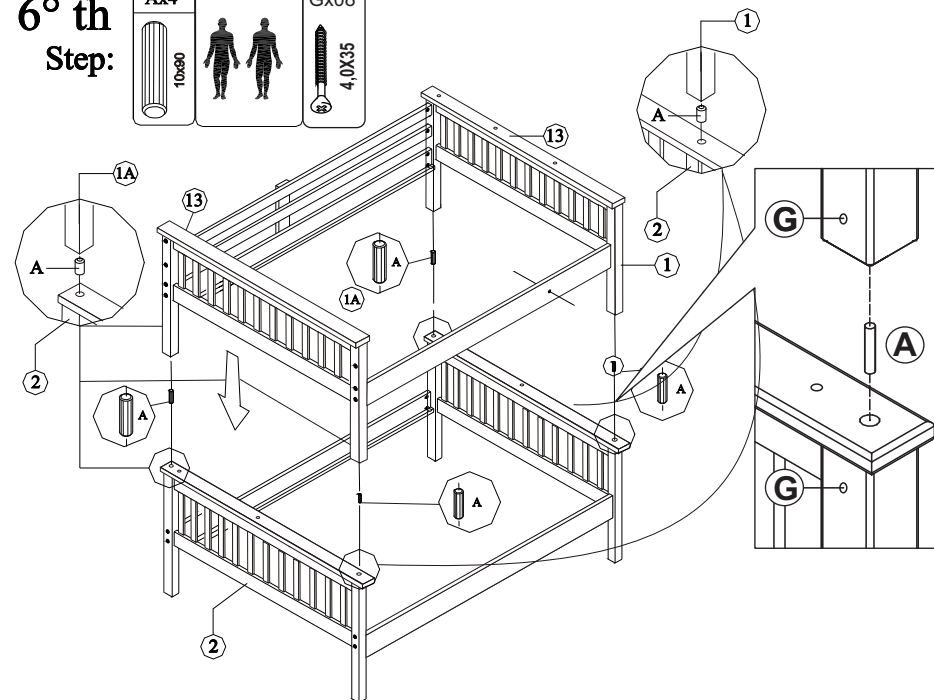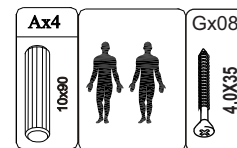



**7° th
Step:**

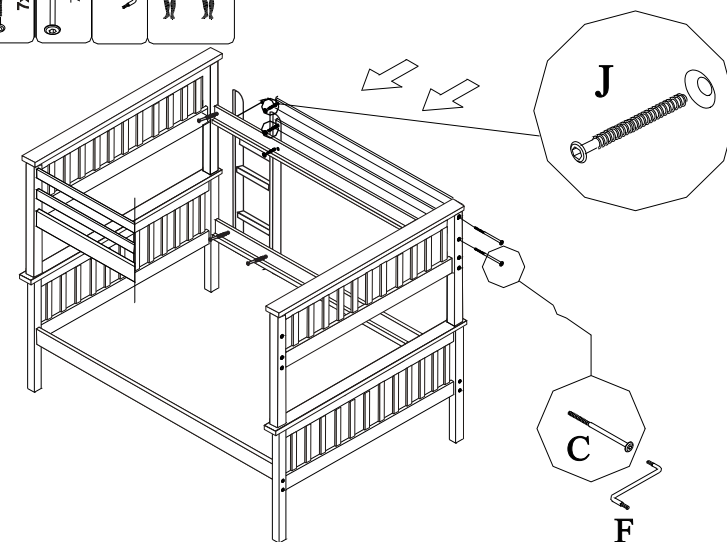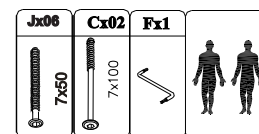


4^o th
Step:

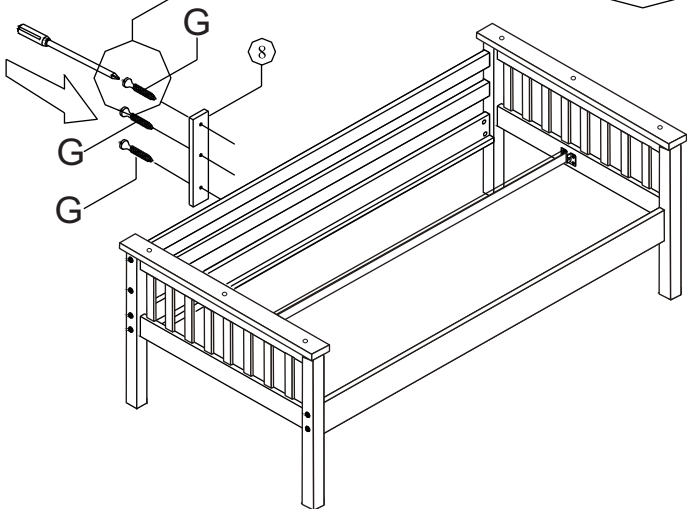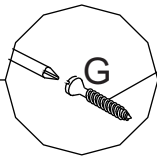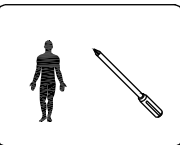

5^o th
Step:

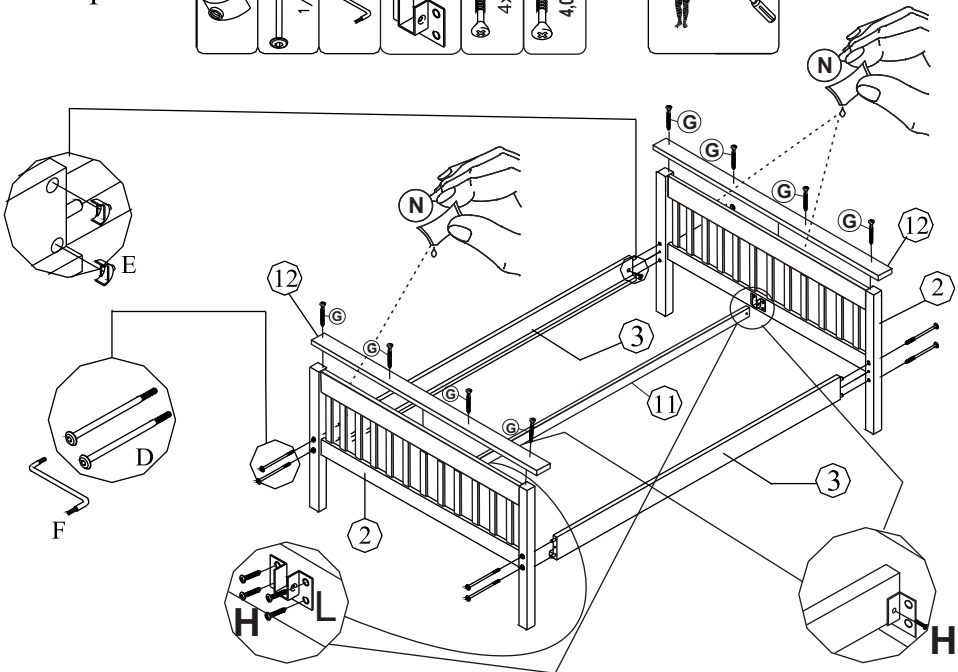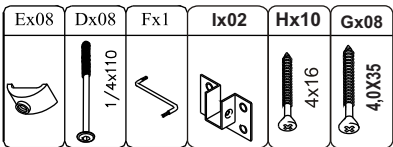


Ax04




10x90

Bx20




10X40

Cx06




7x100

Dx16




1/4x110

Ex16



1/4

Fx01




Gx82



4,0X35CC

Hx20



4x16

lx04



Nx02




Jx12









7x50



Kx02





Tools Required

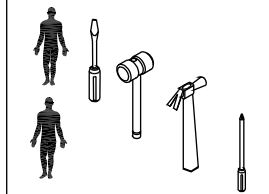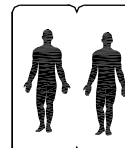

1° st
Step:

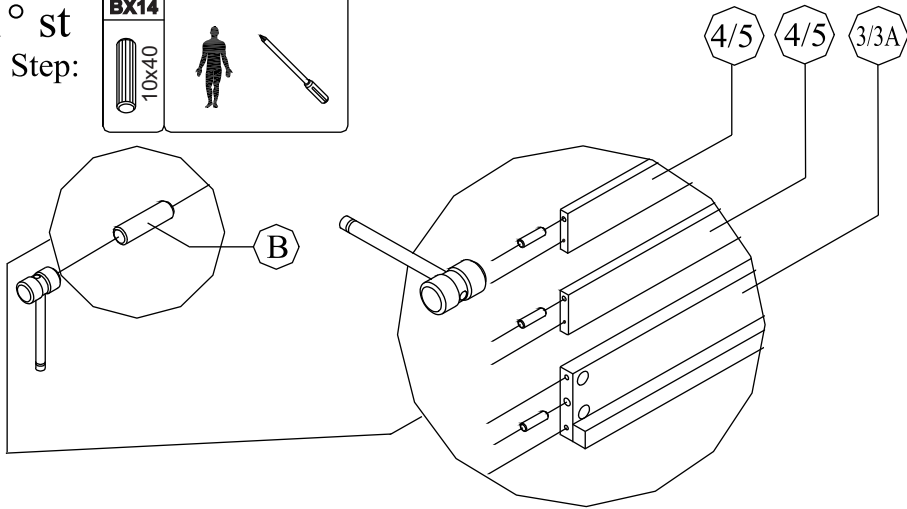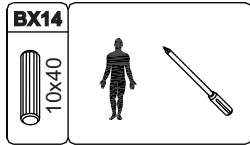

2° nd
Step:

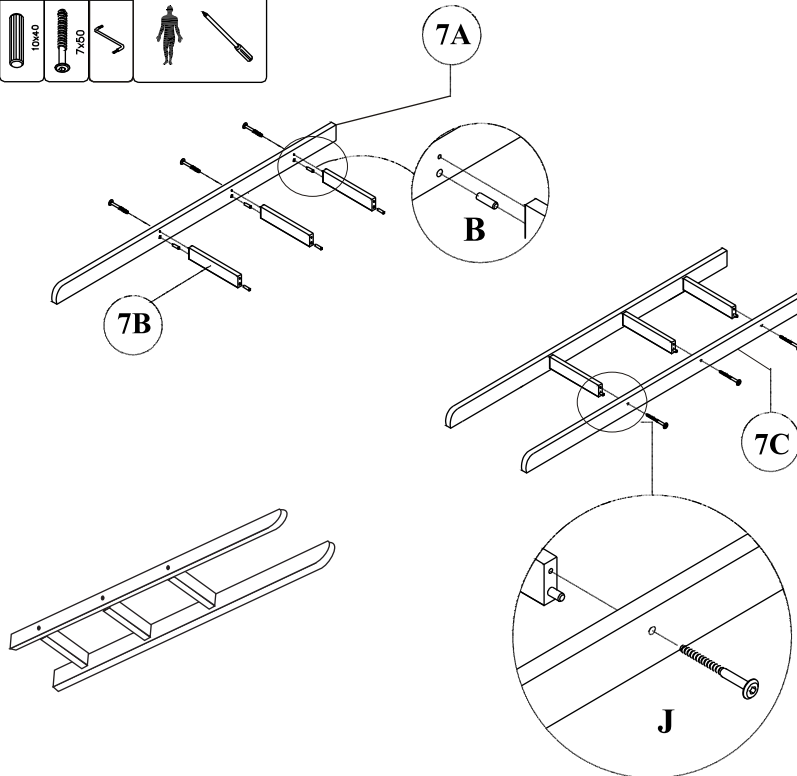

3° rd
Step:

