

Captains Bookcase Bed Assembly Instructions

Contents:

- (A) 1 headboard (53" tall)
- (B) 1 footboard (26" tall)
- (C) 2 bed rails (80" or 85" long)
- (D) 9 slats (twin 40-1/4" long, full 55-1/4" long, queen 61-1/4" long)
- (E) 4 connector bolts (100mm long)
- (F) 4 cross dowels
- (G) 18 wood screws (1-1/2" long)
- (H) 4 wood screws (2-1/2" long)
- (I) 1 Allen key




Tools required:

- Slotted screwdriver
- #2 Robertson or Phillips screwdriver



Please read all instructions completely before beginning

1. Assemble the footboard (B) to each bed rail (C) using 4 connector bolts (E) with 4 cross dowels (F). Refer to Figure 1 for correct position of bed rail, bed end and hardware.
2. Position the bed rails into the headboard (A). Ensure that the rails are inserted as far as they will go.
3. Fasten the bed rails to the headboard with two 2 1/2" long wood screws (H) per bed rail through the pilot holes and into the headboard, refer to Figure 3.
4. If a 3 drawer unit is being installed, do so now. Position the drawer unit on the support rail shown on the headboard & on the matching rail on the footboard. Refer to notes & images below.
5. Slide 9 slats (D) into bed rail grooves. Position so that the spaces between slats are equal. Secure each slat with two 1-1/2" long wood screws (G) using predrilled holes at each end of a slat, refer to Figure 2.

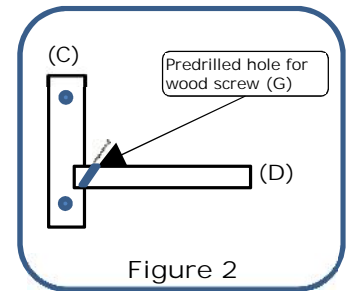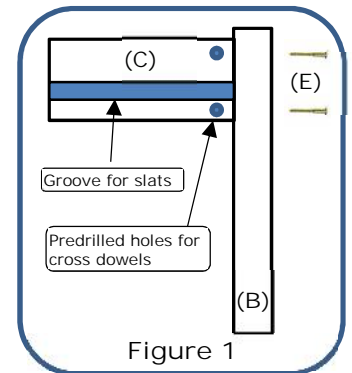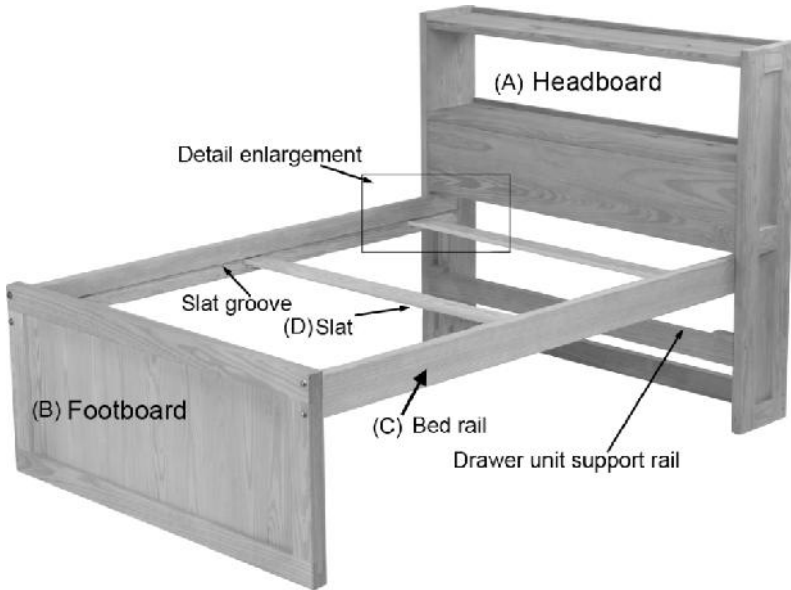

Adding an optional 3 drawer unit

- 1) Attach mounting blocks (J) to both end panels (if necessary).
- 2) Position the drawer unit on the drawer unit support rail shown in the picture above & on the matching rail on the footboard.
- 3) Screw lock block (K) to the footboard.
- 4) Screw the mounting block (J) to the headboard rail.

