



# FURNITURE HARDWARE



1586-VB



1586-WID



1976-DACM



1977-DACM



1977S-ABSB



20630-138




24409-904




215-O



250-O

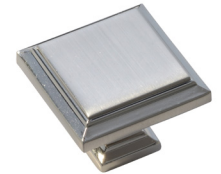

289-BRN

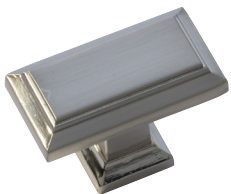

290-BRN




291-BRN



313-VB



314-VB

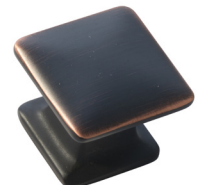

322-VB



332-P



334-P



339-BRN




349-VB



36558-PNGM



39734

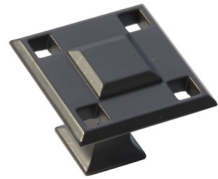

4007-O



53005-FB



625-160SBZ



625-160SN



625-320SBZ



625-320SN



750-909




751-909




920240-904




A819-BN

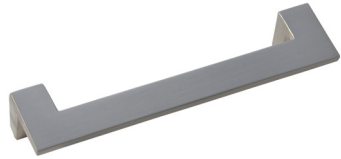

A847-BN

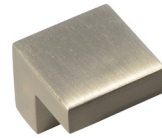

A865-BN

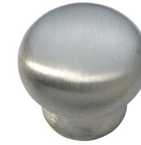

BP19008-SS



BP30214-909



BP37160-909



D523-SN



D521-W



D523-W



J15604-WAN



K26-SN



K317-96-DBN



K417-DBN



K45 in wood



K475-SN



K525-DMAC



K525-96-DMAC



K558-BL



K6373-128-SIM



K749-DACM



K749-96B-DACM



K749-128-DACM



K803-BI



K807-BI



P2014-VP



P2140-SN



P2143-SN



P3060-BI



P3061-BI



PA1218-VP