



TEMPLATE 2 - THIS SIDE IS FOR BOTTOM OF THE CABINET

IMPORTANT
Read the instruction booklet for complete instructions before beginning installation.
Temple must lay flat against the cabinet when locating the holes.


(See installation booklet for complete instructions)

If you drill the 4 mounting holes from the bottom side of the cabinet—measure the thickness of the front rail and cut that amount off the front of the template. Use the cutting lines to insure a straight cut. Place the cut edge against the back side of the front rail and position. Drill the 4 holes 1/4" DIA. as described in the installation instruction booklet.

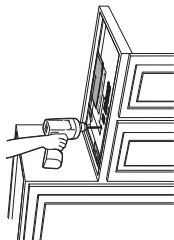

IMPORTANT

MAKE SURE THAT THE LEFT AND RIGHT SIDES OF THE TEMPLATE-MACROWOME SIDE (A) OR (B)-AGREE WITH THE EVENTUAL DESIRED LOCATION OF THE MOUNTED OVERLAPPING, ON WHETHER YOU CHOOSE TO DRILL FROM INSIDE THE CABINET(A)OR FROM THE BOTTOM SIDE OF THE CABINET(B).THE TEMPLATE SIDES MARKED "MACROWOME SIDE (A)" OR "MACROWOME SIDE (B)" WILL INDICATE THE LOCATION OF THE SIDES OF THE MOUNTED OVERLAPPING.

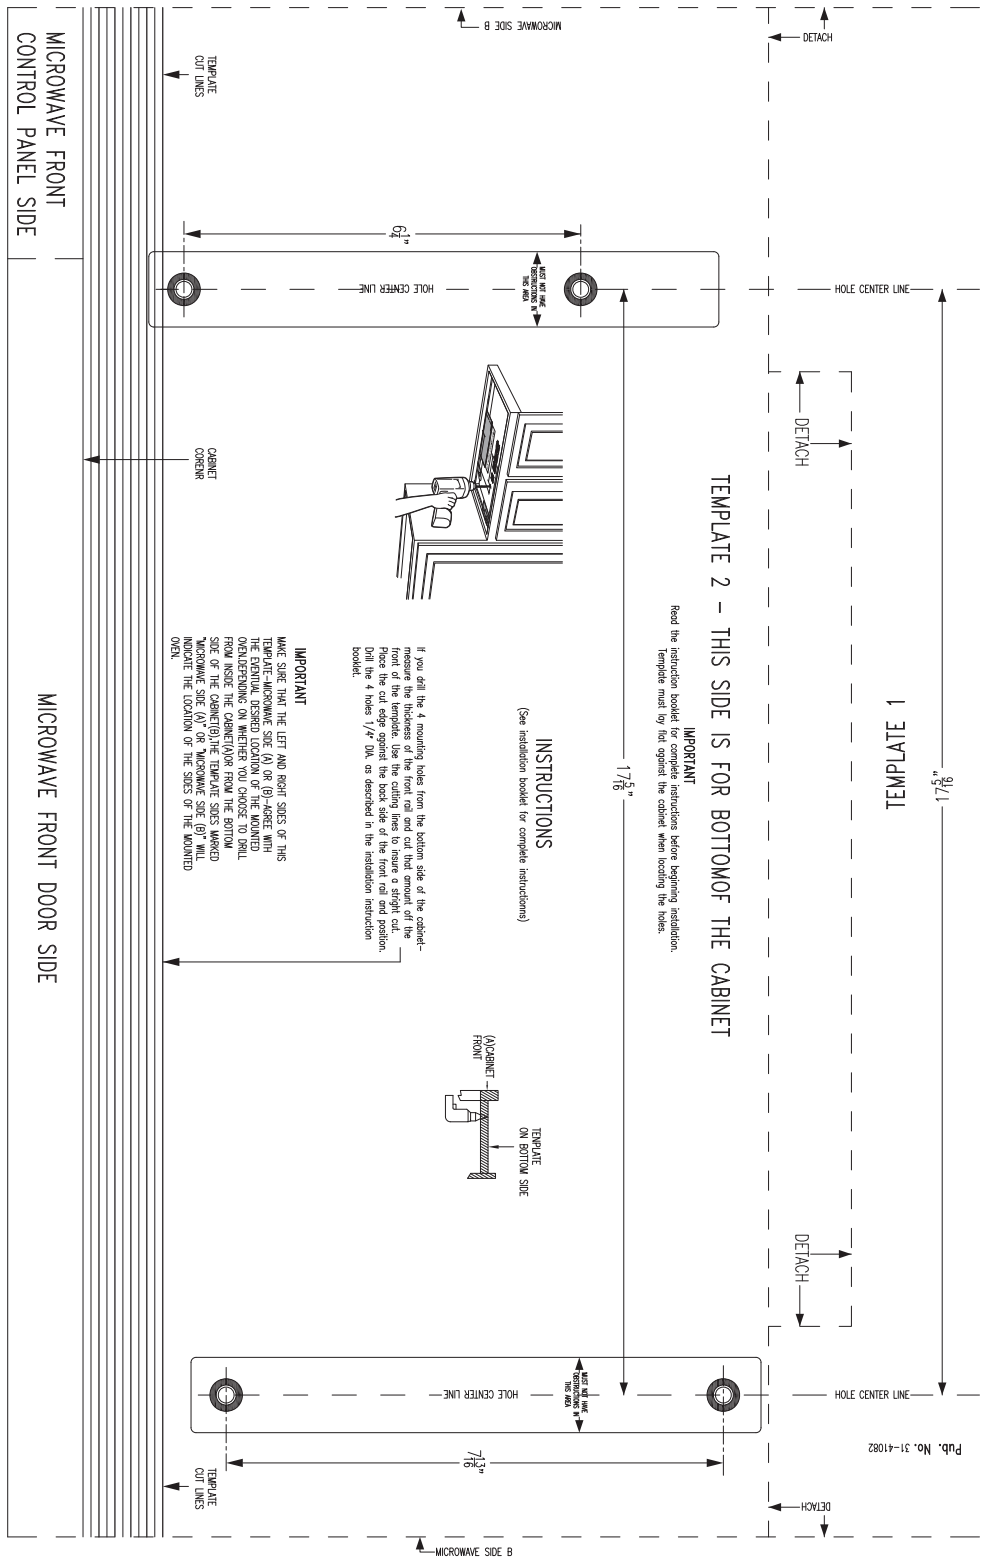

1
TEMPLATE

TEMPLATE 2 - THIS SIDE IS FOR INSIDE OF THE CABINET

IMPORTANT
Read the instruction booklet for complete instructions before beginning installation.
Template must be held tight against the cabinet when locating the holes.

INSTRUCTIONS

(See installation booklet for complete instructions)

If you drill the 4 mounting holes from the inside of the cabinet, you must first determine the location of the holes. Drill the 4 holes 1/4" DIA. as described in the installation instruction booklet.

IMPORTANT

MAKE SURE THAT THE LEFT AND RIGHT SIDES OF THIS TEMPLATE-MICROWAVE SIDE (A) OR (B)-AREET WITH THE IDENTICAL DESIRED LOCATION OF THE MOUNTED OVERLAPPING, ON WHETHER YOU CHOOSE TO DRILL FROM INSIDE THE CABINET(OR FROM THE EXTERIOR SIDE OF THE CABINET) TO OBTAIN THE DESIRED MICROWAVE SIDE (A) OR MICROWAVE SIDE (B) WILL INDICATE THE LOCATION OF THE SIDES OF THE MOUNTED OVEN.

