

HOOKER® — FURNITURE —


Martinsville, VA 24112


ASSEMBLY INSTRUCTION

- ITEM# 5875-90367-95 Diamont 6/0-6/6 Panel Headboard
 5875-90368-95 Diamont 6/0-6/6 Panel Footboard
 5875-90363-95 Diamont 6/0 Rails
 5875-90353-95 Diamont 5/0-6/6 Rails
 5875-90351-95 Diamont 5/0 Panel Headbaord
 5875-90352-95 Diamont 5/0 Panel Footboard
 5875-90364-95 6/6 Canopy
 5875-90374-95 6/0 Canopy

**Caution: Please make sure you have all parts indicated below prior to assembly.
 This unit is heavy and can best be assembled with the help of two or more persons.**

NO.	HARDWARE LIST		Q'TY
E		Nut	8
F		Spanner wrench	1
G		Curved washer	8
H		Bolt	8
K		Screw	20 (for 6/0-6/6 bed) 16 (for 5/0 bed)
R		Allen wrench 4MM	1
Q		Bolt 1/4"*35MM	10 (for 6/0-6/6 bed) 8 (for 5/0 bed)
V		Lock washer 1/4"	10 (for 6/0-6/6 bed) 8 (for 5/0 bed)
U		Flat washer 1/4"	10 (for 6/0-6/6 bed) 8 (for 5/0 bed)
M		Allen wrench 5MM	1
N		Bolt 5/16"*30MM	4
J		Lock washer 5/16"	12
O		Flat washer 5/16"	12
P		Bolt 5/16"*15MM	8

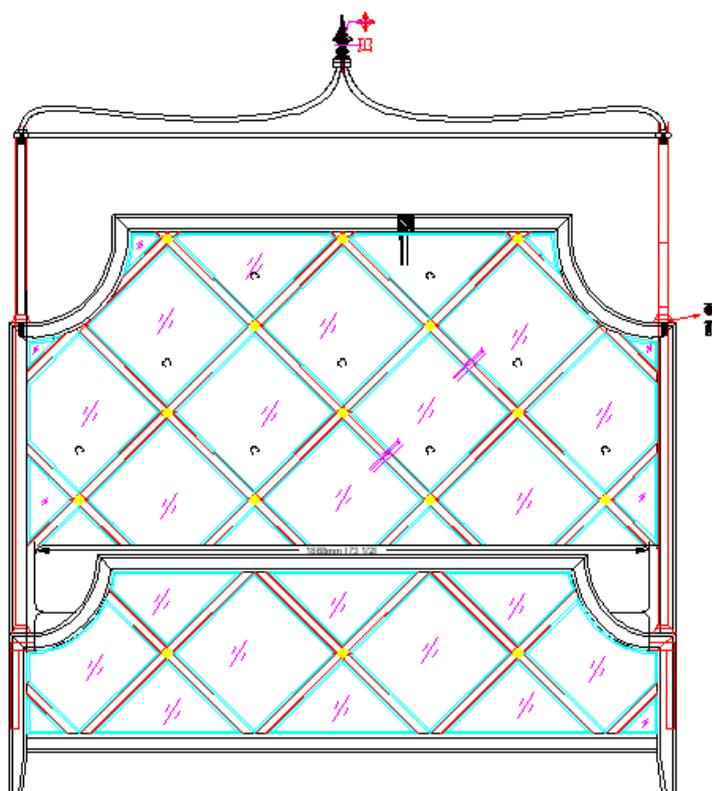

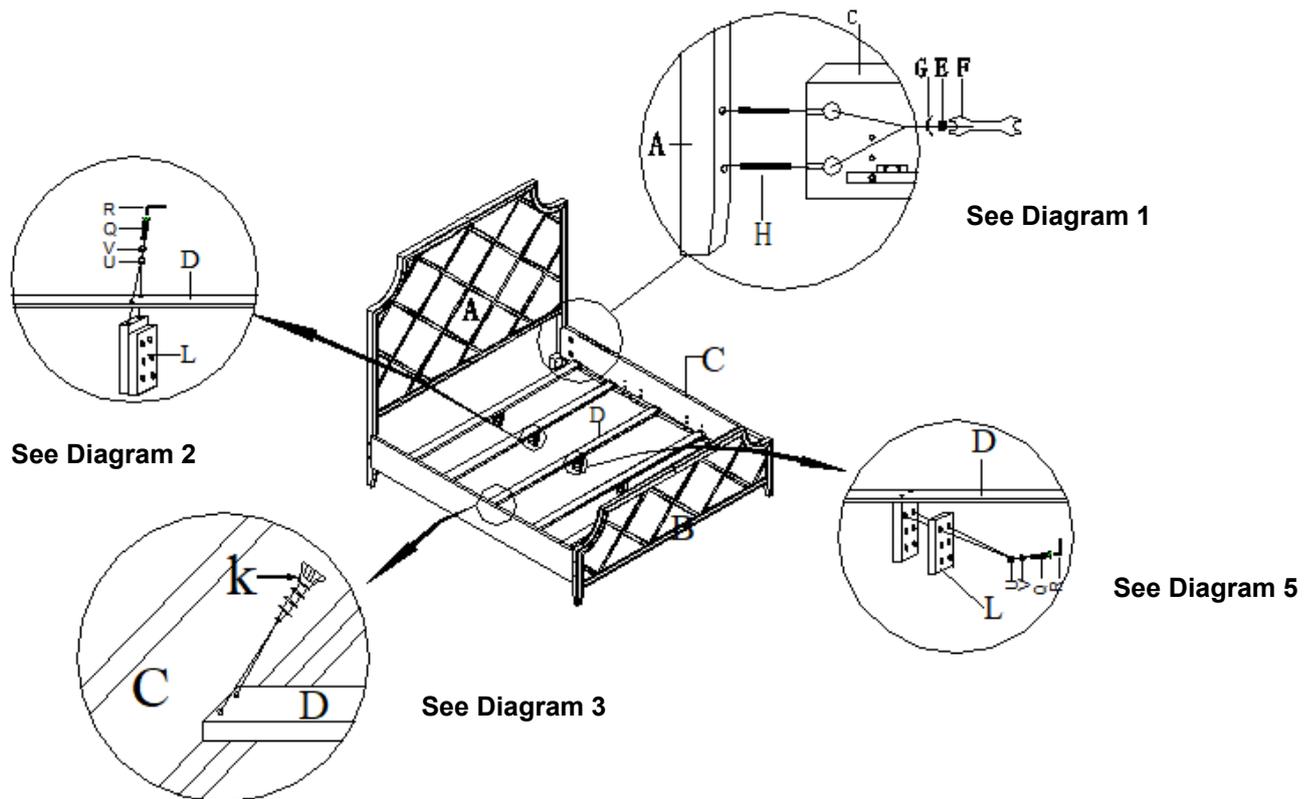

Please note the hardware bag to assemble side rails to HB&FB is in the box of side rails.

Assembly steps:

1. Insert 2 bolts (H) into holes of each side post on Headboard (A) and Footboard (B), attach the ends of side rails (C) to bolts (H) on posts by using 2 curved washers (G) and 2 nuts (E), tighten nuts (E) securely with spanner wrench (F). (See diagram 1)

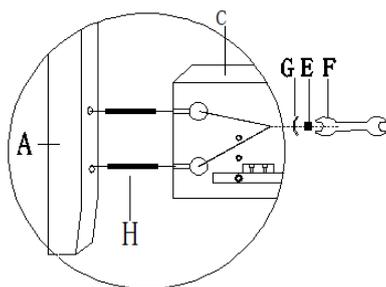


Diagram 1

2. Take out center supports (L) from the rail box, attach center supports (L) to slats (D) by using 2 bolts (Q), 2 lock washers (V) and 2 flat washers (U). Secure bolts (Q) by using Allen wrench (R).

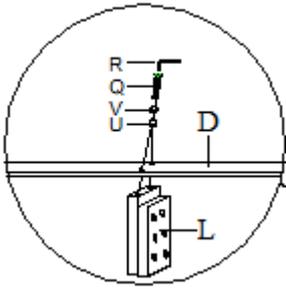


Diagram 2

3. Attach slats (D) to side rails (C), align pre-drilled holes on the slats to holes on the cleats of side rails (C), using screws (K) to tighten both. (See diagram 3)

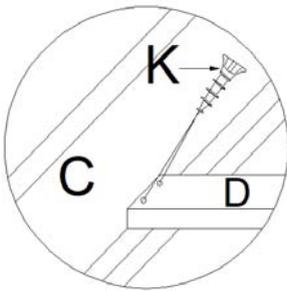


Diagram 3

Note: You can change the height of slats by adjusting the height of cleats on side rail as shown in diagram 4. Remove bolts (I), lock washers (O) and flat washers (J) from the cleats by turning the bolts (I) with allen wrench (M) in anti-clockwise direction. Adjust the cleats to a desired position, and then secure lock washers, flat washers, bolts in clockwise direction by turning with allen wrench.

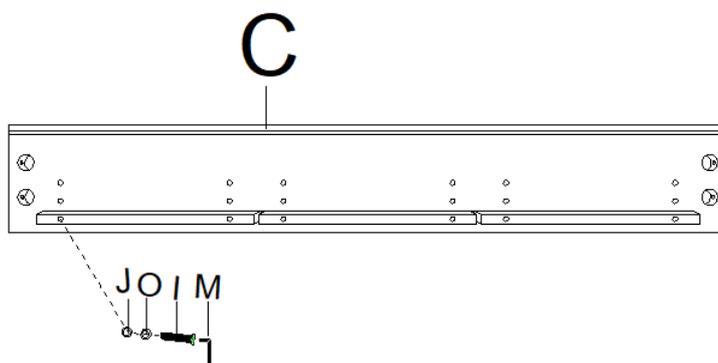


Diagram 4

You can adjust the height of center supports (L) as shown in diagram 5 to meet your need by the following steps.

1. Unscrew bolts on center supports (L) with allen wrench (R).

- Adjust the height of center supports, align holes on 2pcs of woods and tighten them together with 2 bolts (Q), 2 lock washers (V) and 2 flat washers (U) by turning with Allen wrench (R) in clockwise direction.


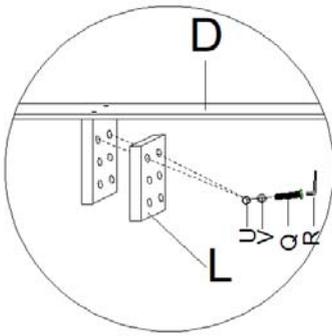


Diagram 5

Assembly steps for HB/FB posts and metal canopy.

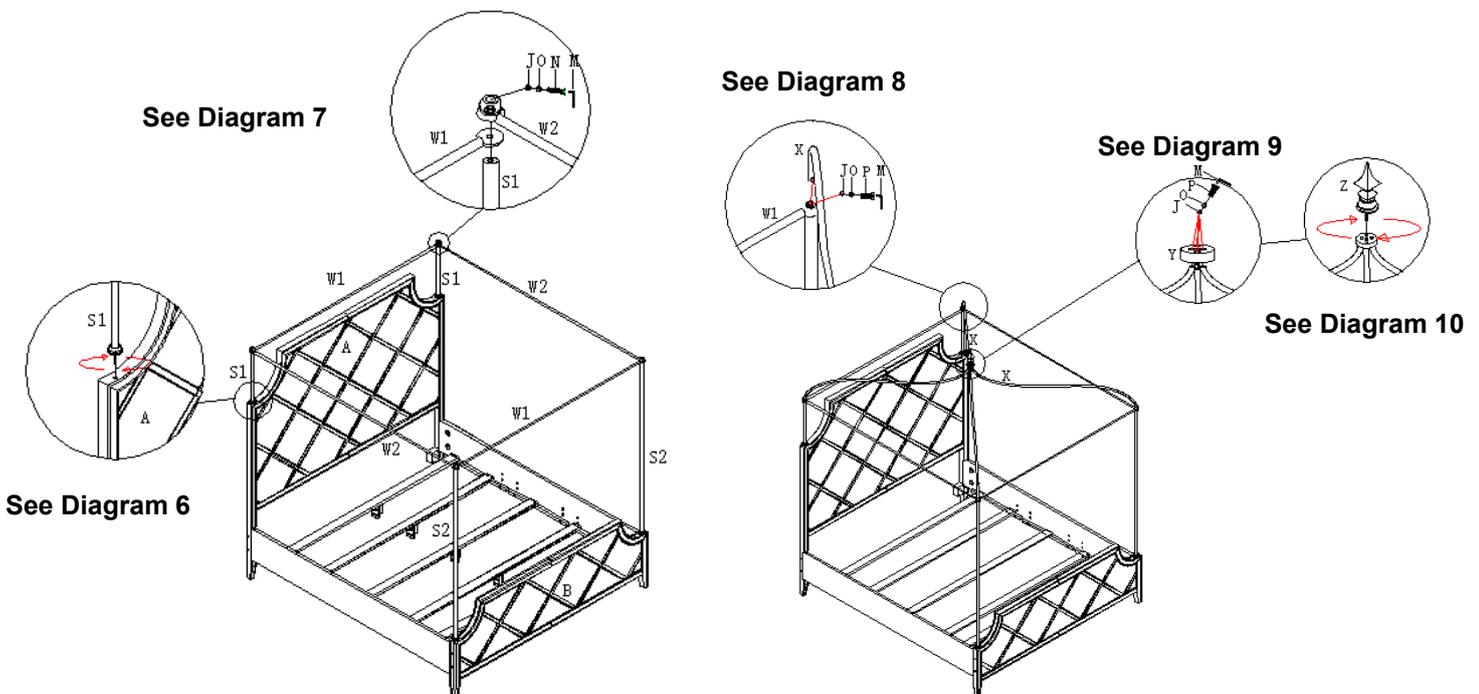

- Tighten shorter posts (S1) to headboard (A) by turning in a clockwise direction. (See diagram 6)
- Follow above step to tighten the longer posts (S2) to footboard (B).
- Assemble canopy shorter parts (W1) and longer parts (W2) to shorter posts (S1) by using lock washer (J), flat washer (O), bolt (N), tighten bolts with Allen wrench (M). (See diagram 7)
- Follow step 3 to assemble canopy shorter parts (W1) and longer parts (W2) to longer posts (S2).

5. Assemble canopy parts(X) to canopy parts (W1) by using lock washer (J), flat washer (O), bolt (P), tighten bolts with Allen wrench (M). (See diagram 8).
6. Attach canopy part (Y) to the connector of canopy parts(X) by using lock washer (J), flat washer (O), bolt (P), tighten bolts with Allen wrench (M). (See diagram 9).
7. Assemble the finial (Z) to canopy part (Y) by turning the finial (Z) in a clockwise direction. (See diagram 10).

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.