



email: info@riverside-furniture.com

## Talford Natural Bedroom Assembly Instructions


Page 1 of 5 Made in Viet Nam

6/0-6/6 King Upholstered Bed




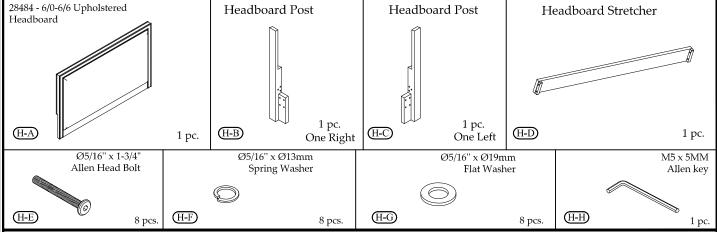

## Hardware and Parts packed with the Footboard

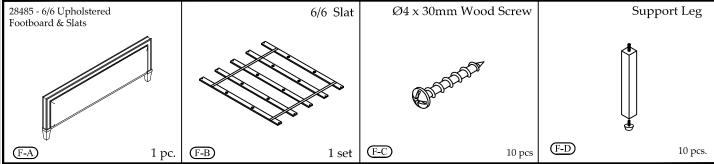

## Hardware and Parts packed with the Bed Rails

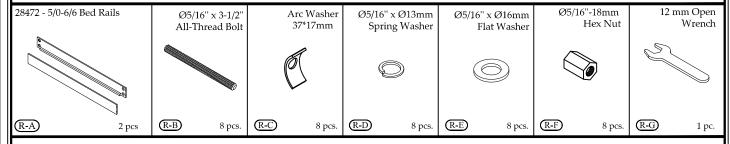

6/0-6/6 King Upholstered Bed 28484 - 6/0-6/6 Upholstered Headboard

28485 - 6/6 Upholstered Footboard & Slats

28472 - 5/0-6/6 Bed Rails


Riverside


email: info@riverside-furniture.com

Talford Natural Bedroom Assembly Instructions Page 2 of 5

Made in Viet Nam

6/0-6/6 King Upholstered Bed

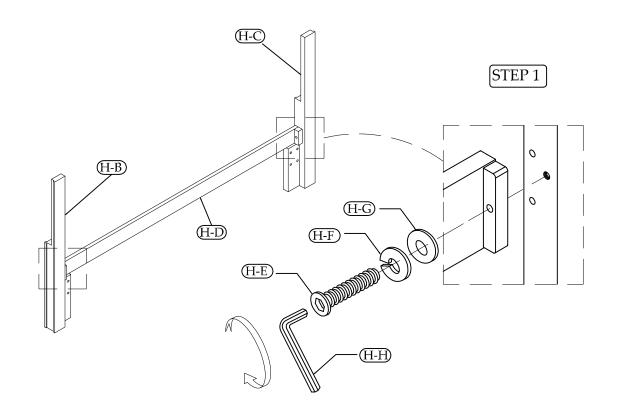

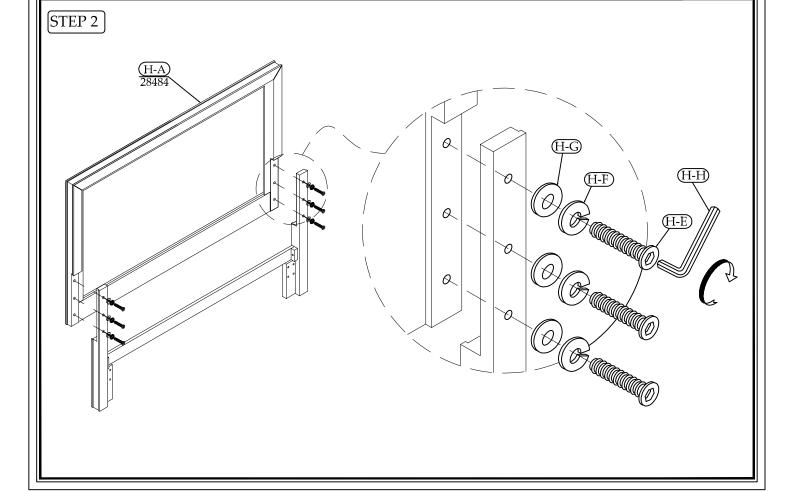


Riverside


email: info@riverside-furniture.com

Talford Natural Bedroom Assembly Instructions Page 3 of 5
Made in Viet Nam

6/0-6/6 King Upholstered Bed

STEP 3

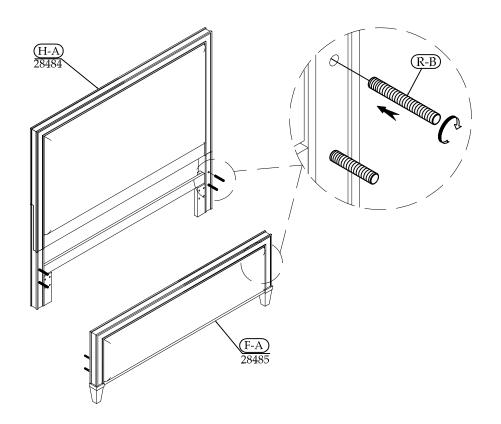

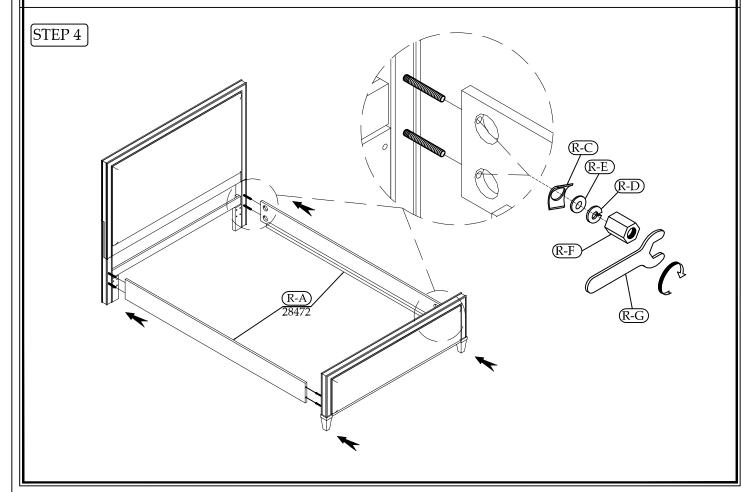


Riverside


email: info@riverside-furniture.com

Talford Natural Bedroom Assembly Instructions Page 4 of 5
Made in Viet Nam

6/0-6/6 King Upholstered Bed

STEP 5

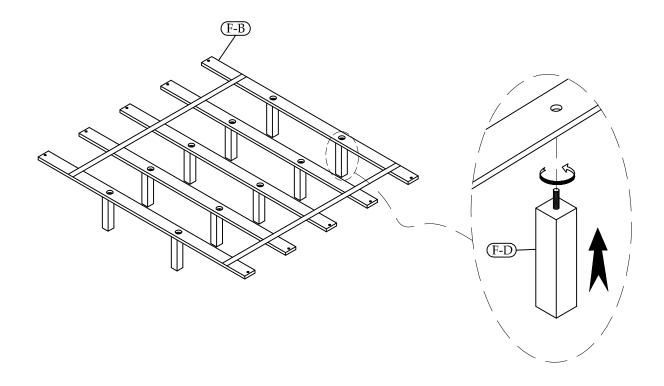

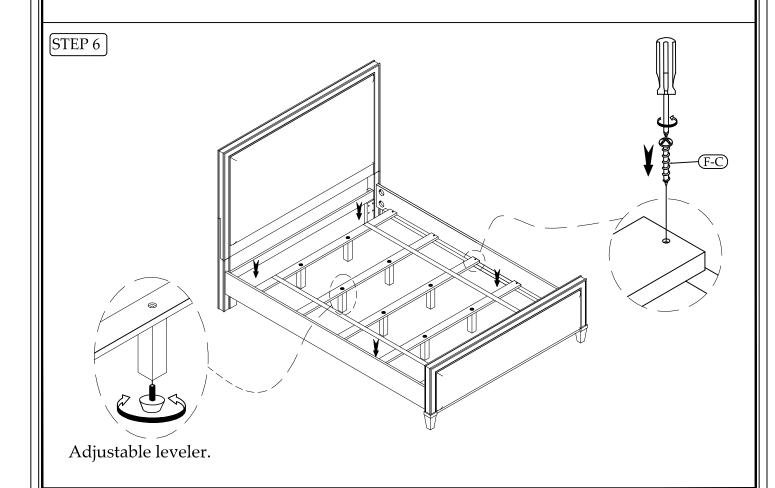




Talford Natural Bedroom Assembly Instructions Page 5 of 5 Made in Viet Nam

6/0-6/6 King Upholstered Bed

6/0-6/6 King Upholstered Bed 28484- 6/0-6/6 Upholstered Headboard

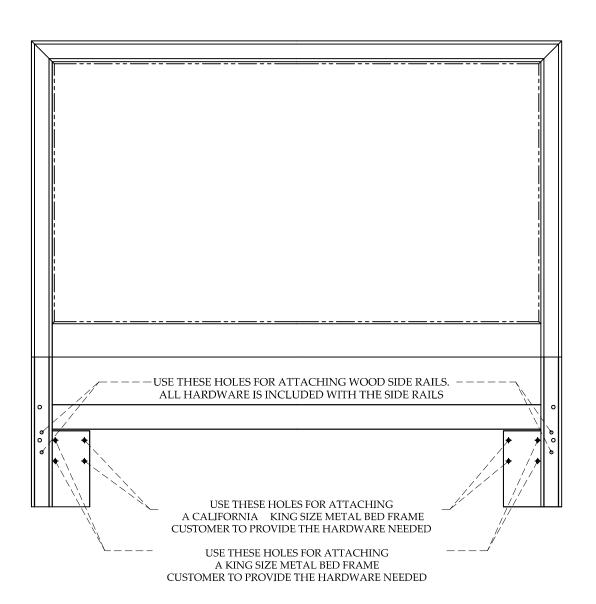

6/0 - 6/6 Bed

THE HEADBOARD MAY BE USED ALONE WITH A CALIFORNIA KING OR A STANDARD KING SIZE METAL BED FRAME.