




ITEM NO: I262-462

Mirror


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

Option 1: Wall Mount


A (Portrait)

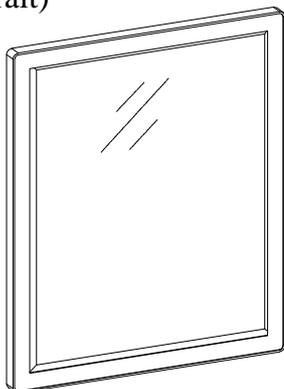

B (Landscape)

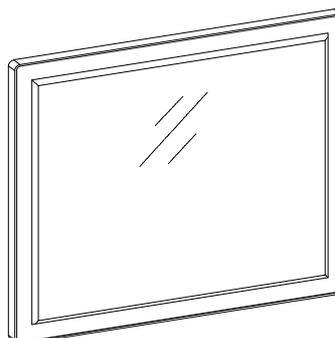

Option 2: Dresser Mount

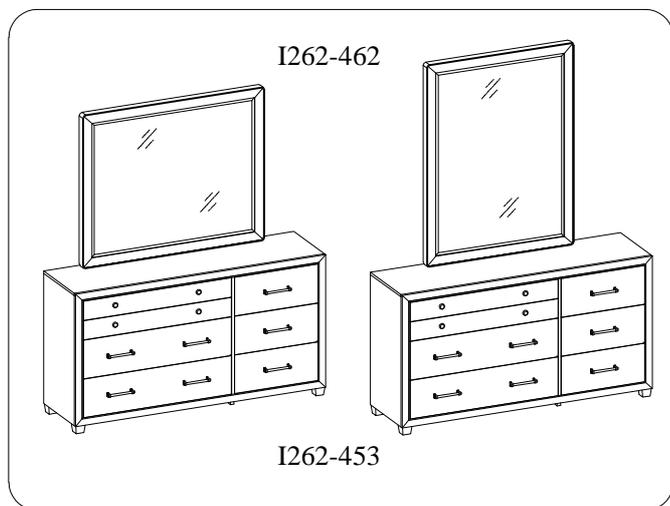

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST:

No.	Description	Sketch	Quantity
A	Bolt Ø1/4" x 2"		8 PCS
B	Lock Washer Ø1/4"		8 PCS
C	Flat Washer Ø1/4" x 3/4"		8 PCS
D	Allen Wrench 4mm		1 PC
E	Wood Screw M3.5 x 2"		5 PCS

COMPONENTS LIST:

No.	Description	Sketch	Quantity
1	Mirror		1 PC
2	Wood Strip		2 PCS
3	Wall Cleat		1 PC

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I262-462

Mirror

FOR OPTION 1 (Wall Mount)


STEP 1: Attach the wall cleat with wood screws(E) to wall which the height is 71-1/4" by the landscape way. Attach the mirror to the wall cleat as shown below.

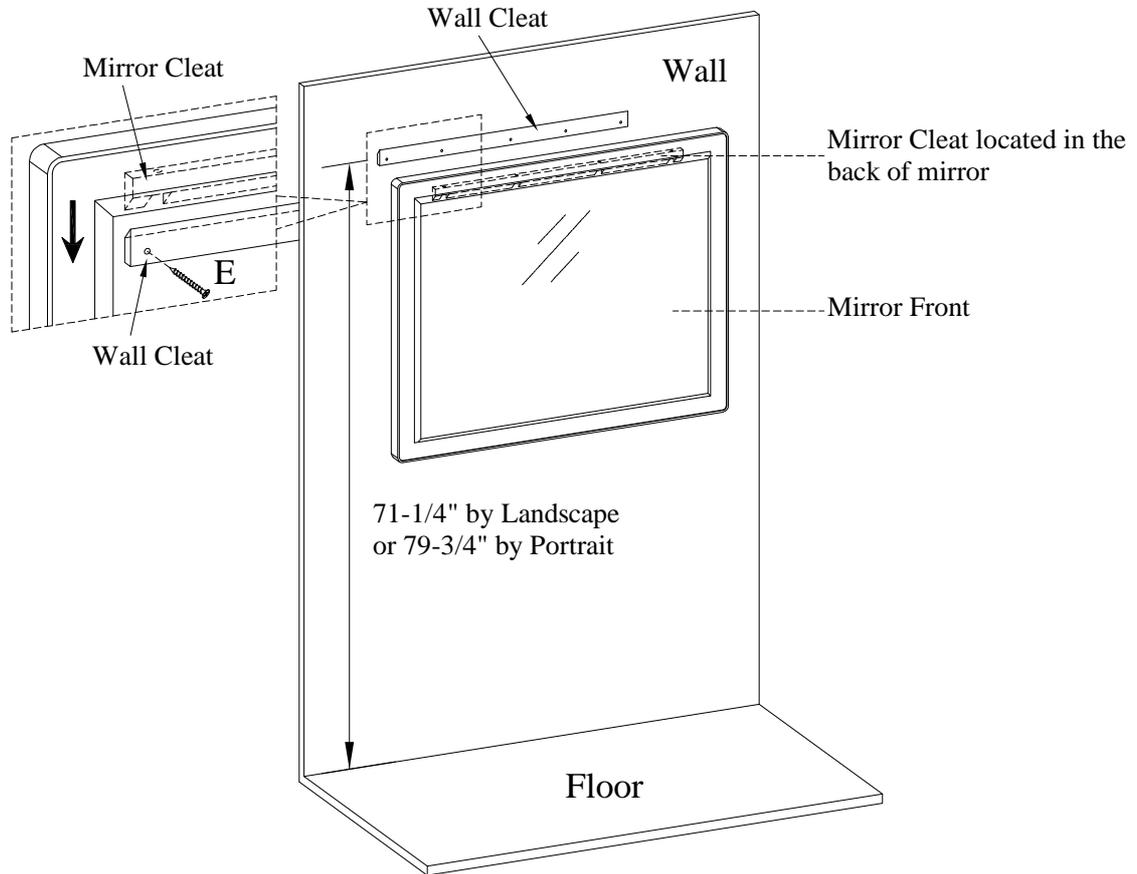

STEP 2: If you refer to hang the mirror in portrait orientation, remove the mirror cleat.

STEP 3: Attach the mirror cleat with bolts on the mirror frame (short) as shown below(A portrait) . Attach the wall cleat with wood screws(E) to wall at a height 79-3/4" as shown above . Attach the mirror to the wall cleat.

Note: Ensure the nail/hanger is in a wall stud or wall solid enough to support mirror.

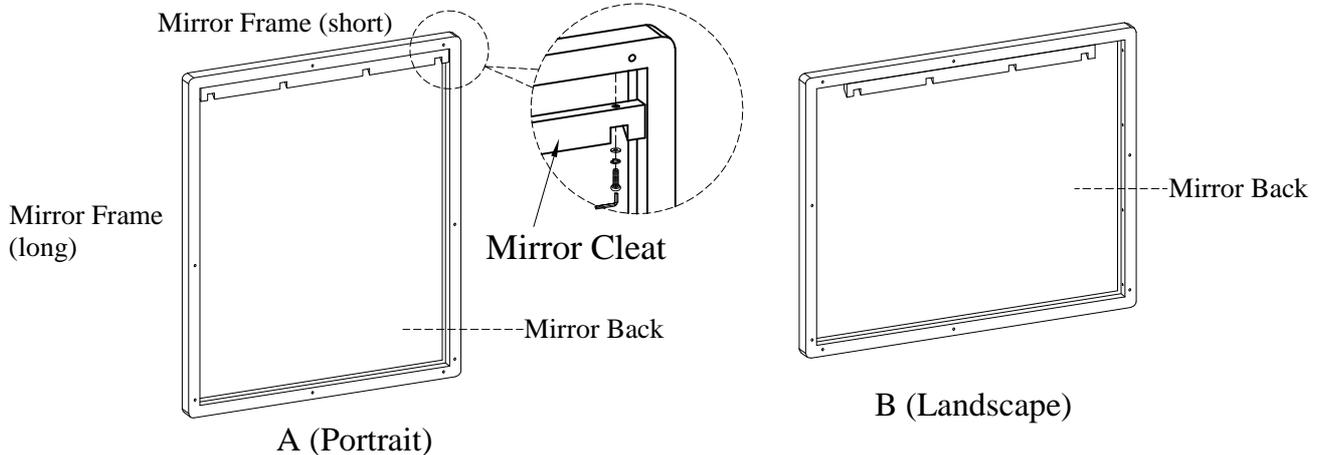




ITEM NO: I262-462

Mirror

FOR OPTION 2 (Dresser Mount)

STEP 1: Attach the wood strip to the dresser by using 4 bolts(A), lock washers(B), and flat washers(C). Do not tighten bolts completely.

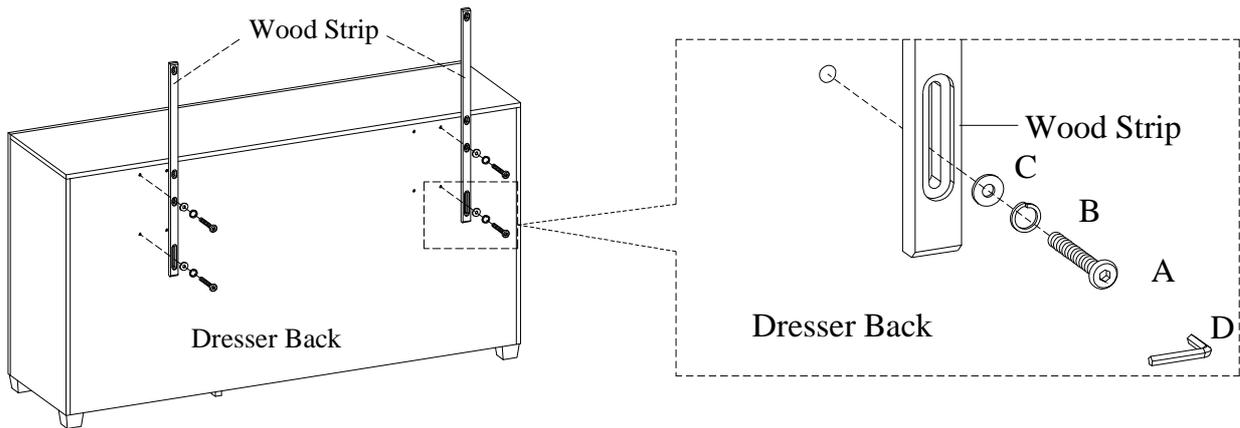

STEP 2: Attach the wood strip to the mirror by using 4 bolts(A), lock washers(B), and flat washers(C). Tighten all bolts on dresser and mirror with Allen wrench.

