

email: <u>info@riverside-furniture.com</u>


## Bradford Dining Room Assembly Instructions

Page 2 of 2

Made in Viet Nam
Uph Seat Side Chair

Step 3

**Step 4: Using the Allen Key to tighten all bolts** 

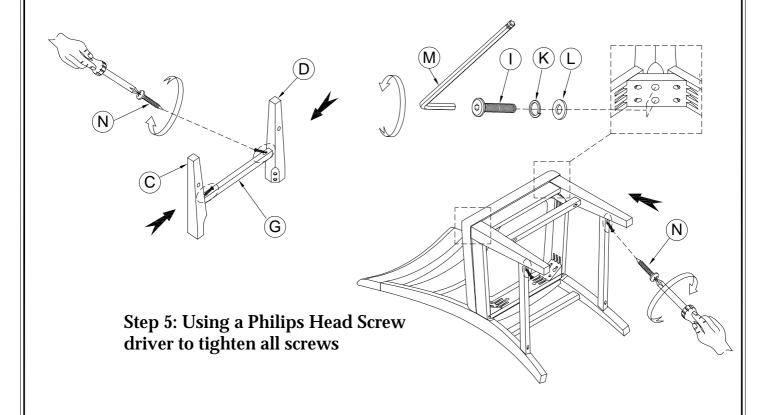

## Complete

