8

COMPANION COFFEE MAKER ACCESSORY 30"/76CM TRIM KIT

US CA NZ AU


Keep this document handy for easy reference.


- This Trim Kit is designed to complement your companion product if installing into 30" (760mm) wide cabinetry.
- For contact information or if you require service, assistance or replacement parts, see your 'Service & warranty' booklet.


This Trim Kit is designed to be installed ONLY with the FISHER & PAYKEL

- Companion Coffee Maker EB24DSX/EB60DSX
- or in combination with OB30/OB76 Ovens

1 CABINETRY SPECIFICATION

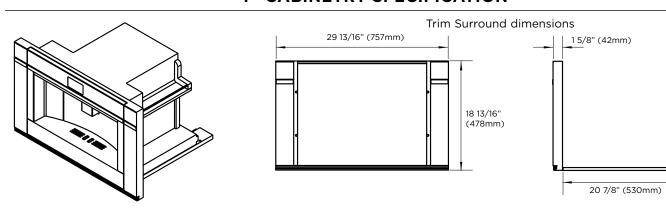

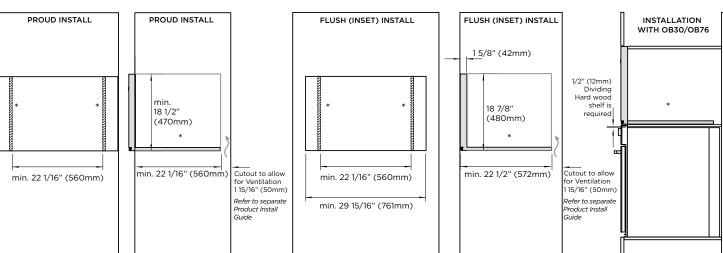

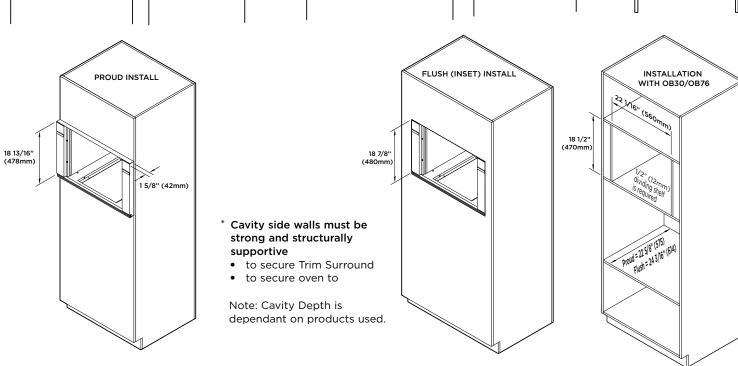

Trim Surround (1) Product Support Brackets (2)



Rubber plugs (4) (for plugging spare (for supporting your Trim Surround holes companion product)







Phillips 13/4" (45mm) screws (4) (to secure the Trim Surround)


3 POSITION TRIM SURROUND ON CABINETRY

IMPORTANT!

- Ensure all packaging and protective film is removed from the Trim Surround before installing.
- ① Mark the center of your cavity at the front.
- ② Mount the Trim Surround with the small lip resting flat on the front edge of the cabinetry
- 3 Center the Trim Surround by lining up the small cut "V" in the lip with your center mark from Step 1.

Note: If installing Coffee Maker above an Oven, ensure both products are centered and aligned in the cabinetry.

Line up the cut "V" with your cavity center mark

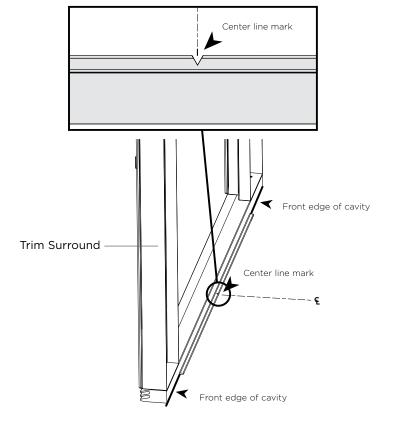



Using the 4 supplied screws, secure the Trim Surround to the cabinetry in the correct hole positions, as shown.

Pre-drill as necessary to avoid splitting the wood.

IMPORTANT!


Do not screw through either center holes in the Trim Surround.

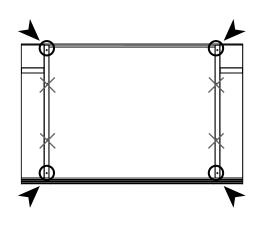

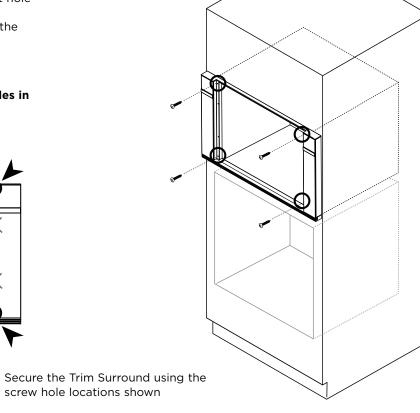

5 SECURE THE TWO SUPPORT BRACKETS IN THE CAVITY


- Position left and right support brackets as shown inside, against the walls of the cavity.
 We recommend butting the brackets up against the rear frame of the Trim Surround.
- ② Secure through front and rear hole locations on both brackets using the screws supplied.

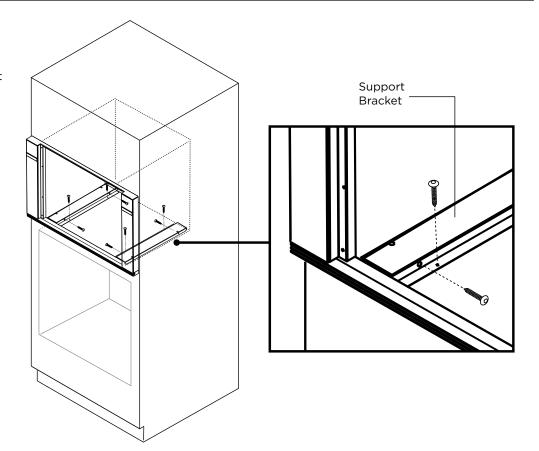


Fit the 4 supplied rubber plugs into the Trim Surround in the correct hole positions, as shown.




x4

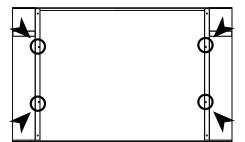

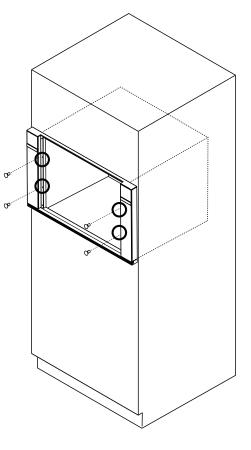

7 INSTALL YOUR COFFEE MAKER (REFER TO SEPARATE INSTRUCTIONS SUPPLIED WITH COFFEE MAKER)

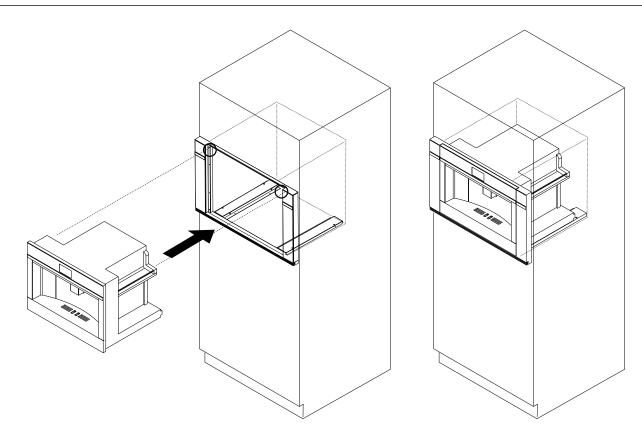

- Install your Coffee Maker as per it's installation instructions. Ensure the slides are secured correctly
- ② Position your Coffee Maker in the cavity. Ensure the Coffee Maker and Trim Kit are correctly aligned and the Coffee Maker can open and close freely, before securing.