

CENTER SUPPORT SYSTEMS FOR BEDS WITH WOOD SIDE RAILS

FULL, QUEEN, KING AND CALIFORNIA KING CENTER SUPPORT MODEL NO: GS-3 XS

EXTENSION LEG KIT (Used with higher profile bed rails)




EXTENSION LEG
Quantity 3

THREADED GLIDE WITH PLASTIC INSERT




X-BRACE
Quantity 2



#10 x 3/4 WOOD SCREW
Quantity 6



GS-3 XS Cross support
Quantity 3 (pre assembled)



#10 x 3/4 WOOD SCREW
Quantity 6



1/4 x 20 HEX KEP NUT
Quantity 9



1/4 20 x 3/4 SLOTTED TRUSS HEAD SCREW
Quantity 9



PLEASE NOTE:

The GS-3 XS CROSS SUPPORTS have been pre-assembled at the factory. To insure proper installation, please check to make sure the angle iron cross supports are threaded into the Super Clamp/Leg assembly as shown in picture above before proceeding.

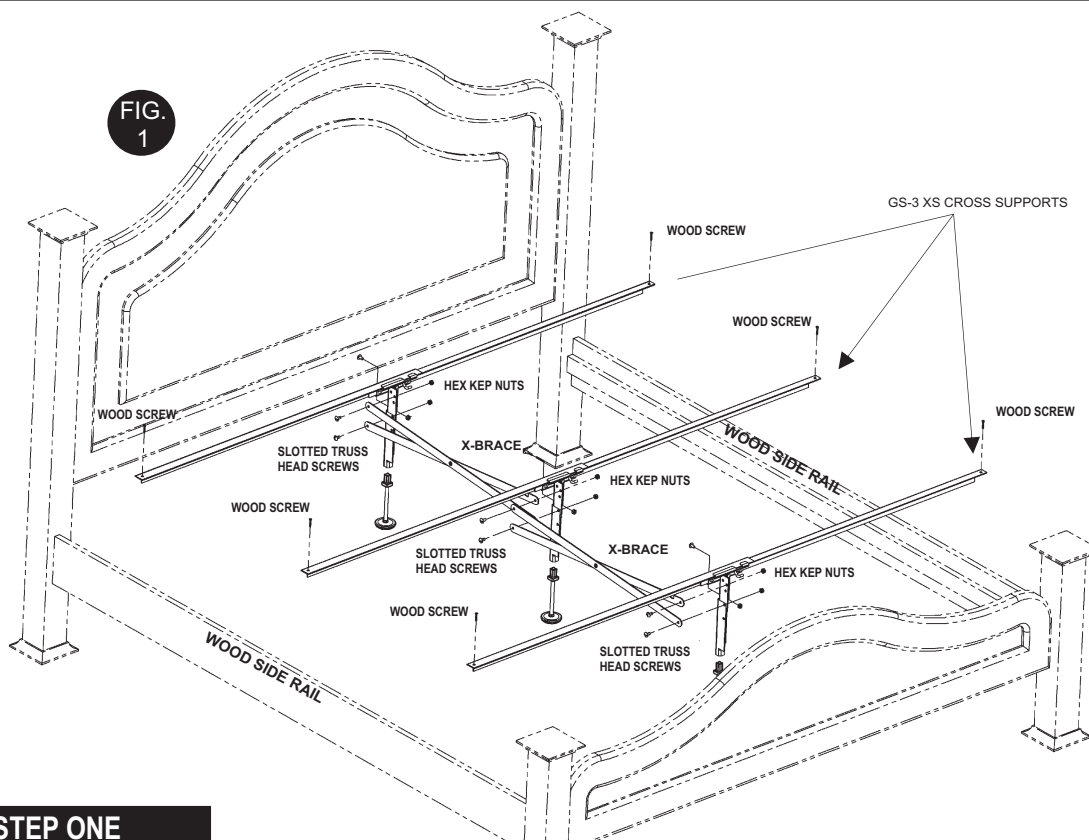


FIG. 2


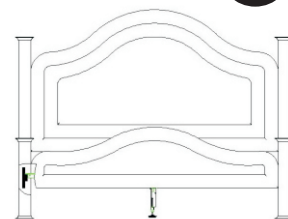


FIG. 3

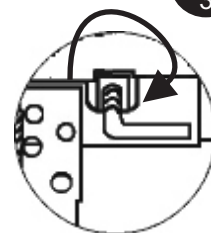

STEP ONE


Place the GS-3 XS Cross Supports approximately as shown (refer to FIG. 1). Place the first GS-3 XS Cross Support in the center of the bedframe, then place the remaining two GS-3 XS Cross Supports on each side of the center GS-3 XS Cross Support. Make sure all the clamps are facing the same direction.

STEP TWO

Extend the GS-3 XS Cross Supports to the wood side rails. Make sure the GS-3 XS Cross Support is fully seated on the lip of the rail. Be sure that the GS-3 XS Clamp is located in the center of the bed (refer to FIG. 2). Loosely tighten the "L" bolt on the super clamps (refer to FIG. 3) - DO NOT TIGHTEN COMPLETELY UNTIL ALL OTHER ADJUSTMENTS HAVE BEEN MADE.


STEP THREE

Measure the distance from the top of the center support bearer rail and the floor (refer to FIG. 4). Based on measurement-follow instructions A, B, or C:

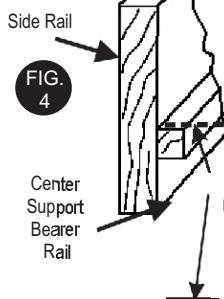


A

If measurement is 6 1/2" to 10".

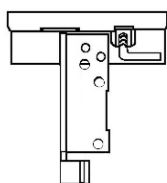


B

If measurement is 10" to 13-3/4".

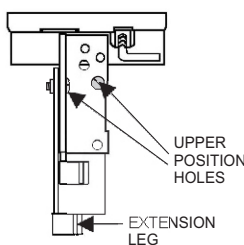

C

If measurement is 13-1/2" to 15 1/2"

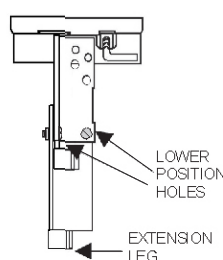

STEP FOUR

CENTER SUPPORT LEGS

FIG. 5



Insert threaded glide into leg as shown in FIG. 5.



THREADED GLIDE

CENTER SUPPORT SYSTEMS FOR BEDS WITH WOOD SIDE RAILS

FULL, QUEEN, KING AND CALIFORNIA KING CENTER SUPPORT MODEL NO: **GS-3 XS**

STEP FIVE

Attach the X-BRACE to the legs of the GS-3 XS Cross Supports and leg assembly using the Slotted Head Screw and Locking Hex Nut (refer to FIG. 6). Finger tighten the locking hex nuts until all final adjustments have been made. All three GS-3 XS Cross Supports will now be locked together (refer to FIG. 7). Make sure the Super Clamps are centered in the bed and that the center GS-3 XS Cross Support is center between the headboard and the footboard.

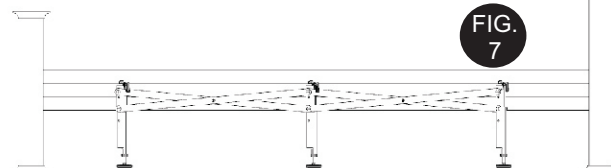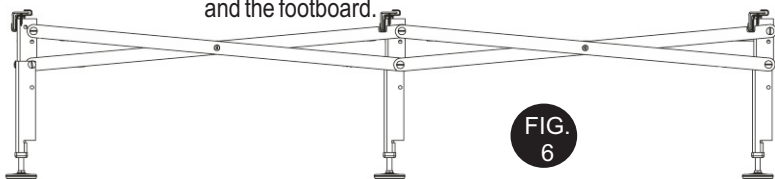

STEP SIX

Attach the GS-3 XS Cross Supports to the center support bearer rail (wood lip on lip on inside of wood rails) as shown in FIG. 8.


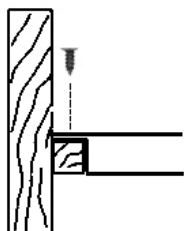


FIG. 8


STEP SEVEN

After attaching the GS-3 XS Cross Supports and checking to make sure that nothing has moved, tighten the "L" bolts firmly-securing the Super Clamp to the GS-3 XS Cross Supports. **TIGHTEN ALL REMAINING HARDWARE.**

STEP EIGHT

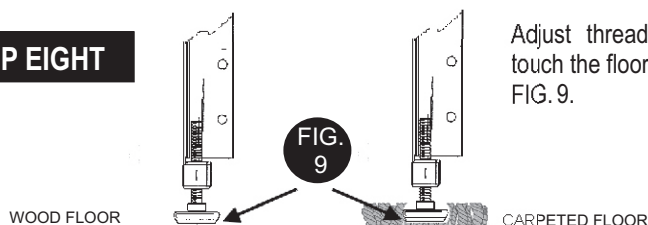

Adjust threaded glides to touch the floor as shown in FIG. 9.

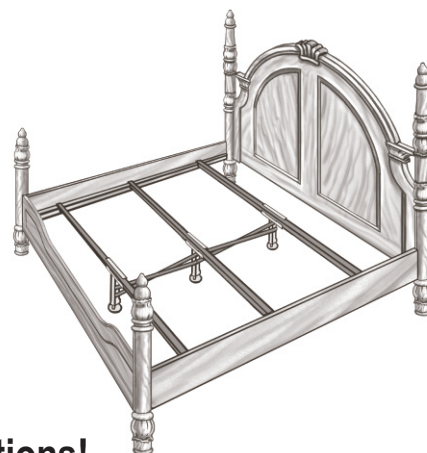

NOT FOR USE WITH WATERBEDS

Congratulations!
You are now ready to place foundation and mattress in your new bed.


"MAJOR BEDROOM MANUFACTURERS ARE NOW ADVISING THAT YOU SHOULD DISASSEMBLE THE BED BEFORE MOVING IT."

ADVISORY!



UP

AVOID DAMAGE TO PRODUCT, BED, FLOOR, RUGS OR CARPETS! PRIOR TO MOVING BED, REMOVE BEDDING, GLIDES IN THE UP POSITION. PRIOR TO REPLACING BEDDING RETURN THE GLIDES TO THEIR PROPER POSITION.

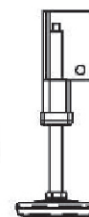

DOWN