



Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (4) Allen Bolts 1/4" x 1/2"
- B (4) Allen Bolts 1/4" x 3/4"
- C (4) Allen Bolts 1/4" x 2"
- D (4) Hex Nuts 1/4"
- E (8) Flat Washers 1/4"
- F (1) Hex Wrench
- G (1) Allen Wrench

PARTS LIST

- K (1) Duo Panel
- L (2) Leg Extensions

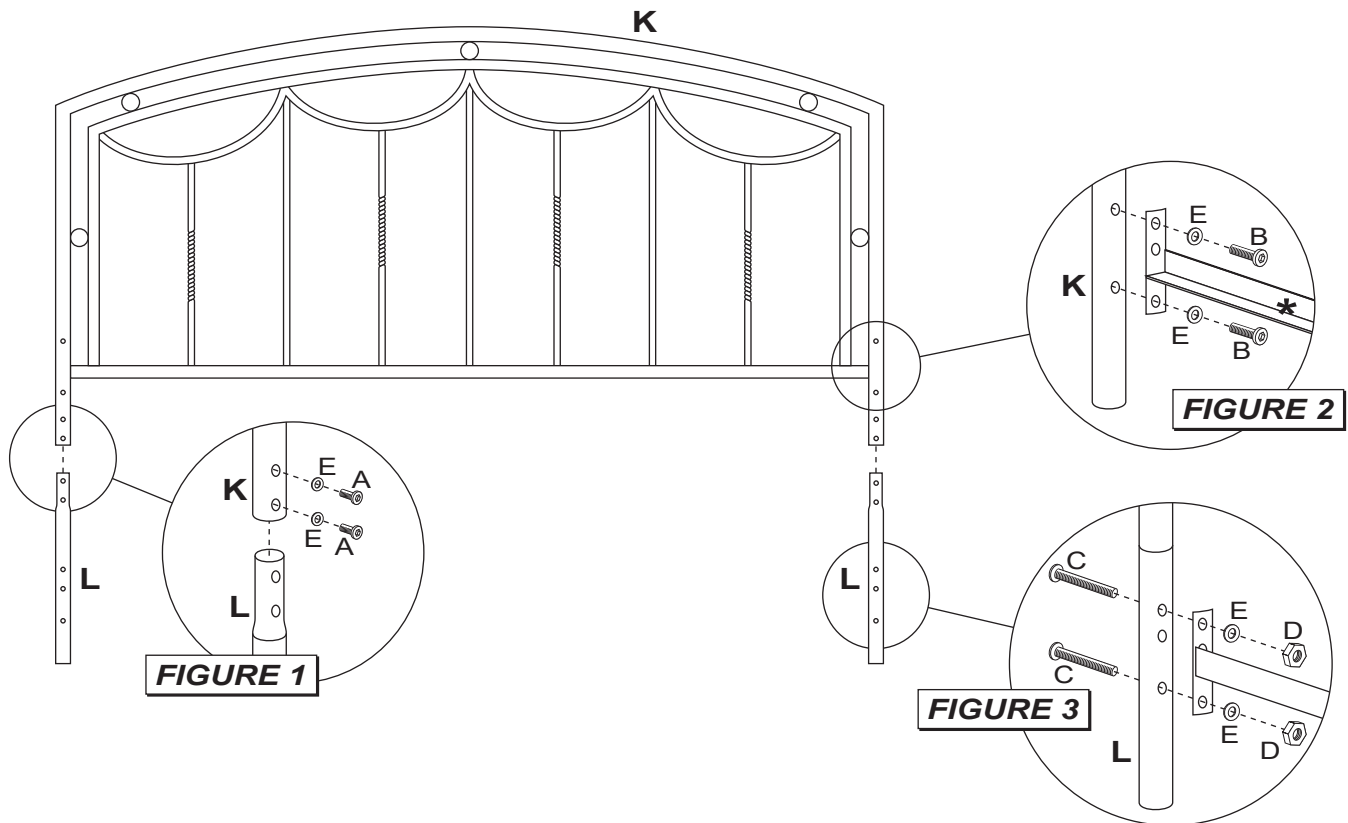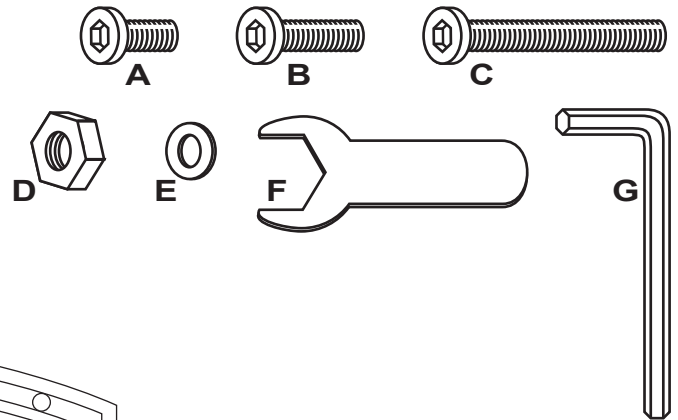

STEP 1 - Headboard Assembly Only

Begin assembly by attaching each Leg Extension (L) to the bottom of each post on the Duo Panel (K) by inserting in place and securing with 2 Allen Bolts (A) & 2 Flat Washers (E) per each leg. Tighten all bolts using the Allen Wrench (G) that has been provided.

STEP 2 - Headboard Assembly Only

Next, attach the Bed Frame (*Not Included) to each Leg Extension (L) using 2 Allen Bolts (C) from the outside, and 2 Flat Washers (E) & 2 Hex Nuts (D) per each post. Tighten all nuts and bolts using the Allen & Hex Wrenches (F & G) that have been provided. The headboard assembly is complete.

STEP 3 - Footboard Assembly Only

Attach the Bed Frame (*Not Included) to each post on the Duo Panel (K) using 2 Allen Bolts (B) & 2 Flat Washers (E) per each post. Tighten all bolts. The footboard assembly is now complete.