







Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000 **HDFBP**

CODE	QTY	HARDWARE	
1	10	M8*50 Bolts	
2	10	Ø8 Spring Washers	
3	14	Ø8 Flat Washers	
4	4	M8 Nuts	
5	1	14# Open Wrench	
6	1	Allen Wrench	

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Headboard	B	2	Headboard Legs


The Bed Frame * is not included. Sold separately.

⚠ WARNING

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

STEP 1 - Figure 1

Begin assembly by attaching Headboard Legs (B) to Headboard (A) using 3 Bolts (1), 3 Spring Washers (2) and 3 Flat Washers (3) per side. Tighten all bolts with Allen Wrench (5) provided.

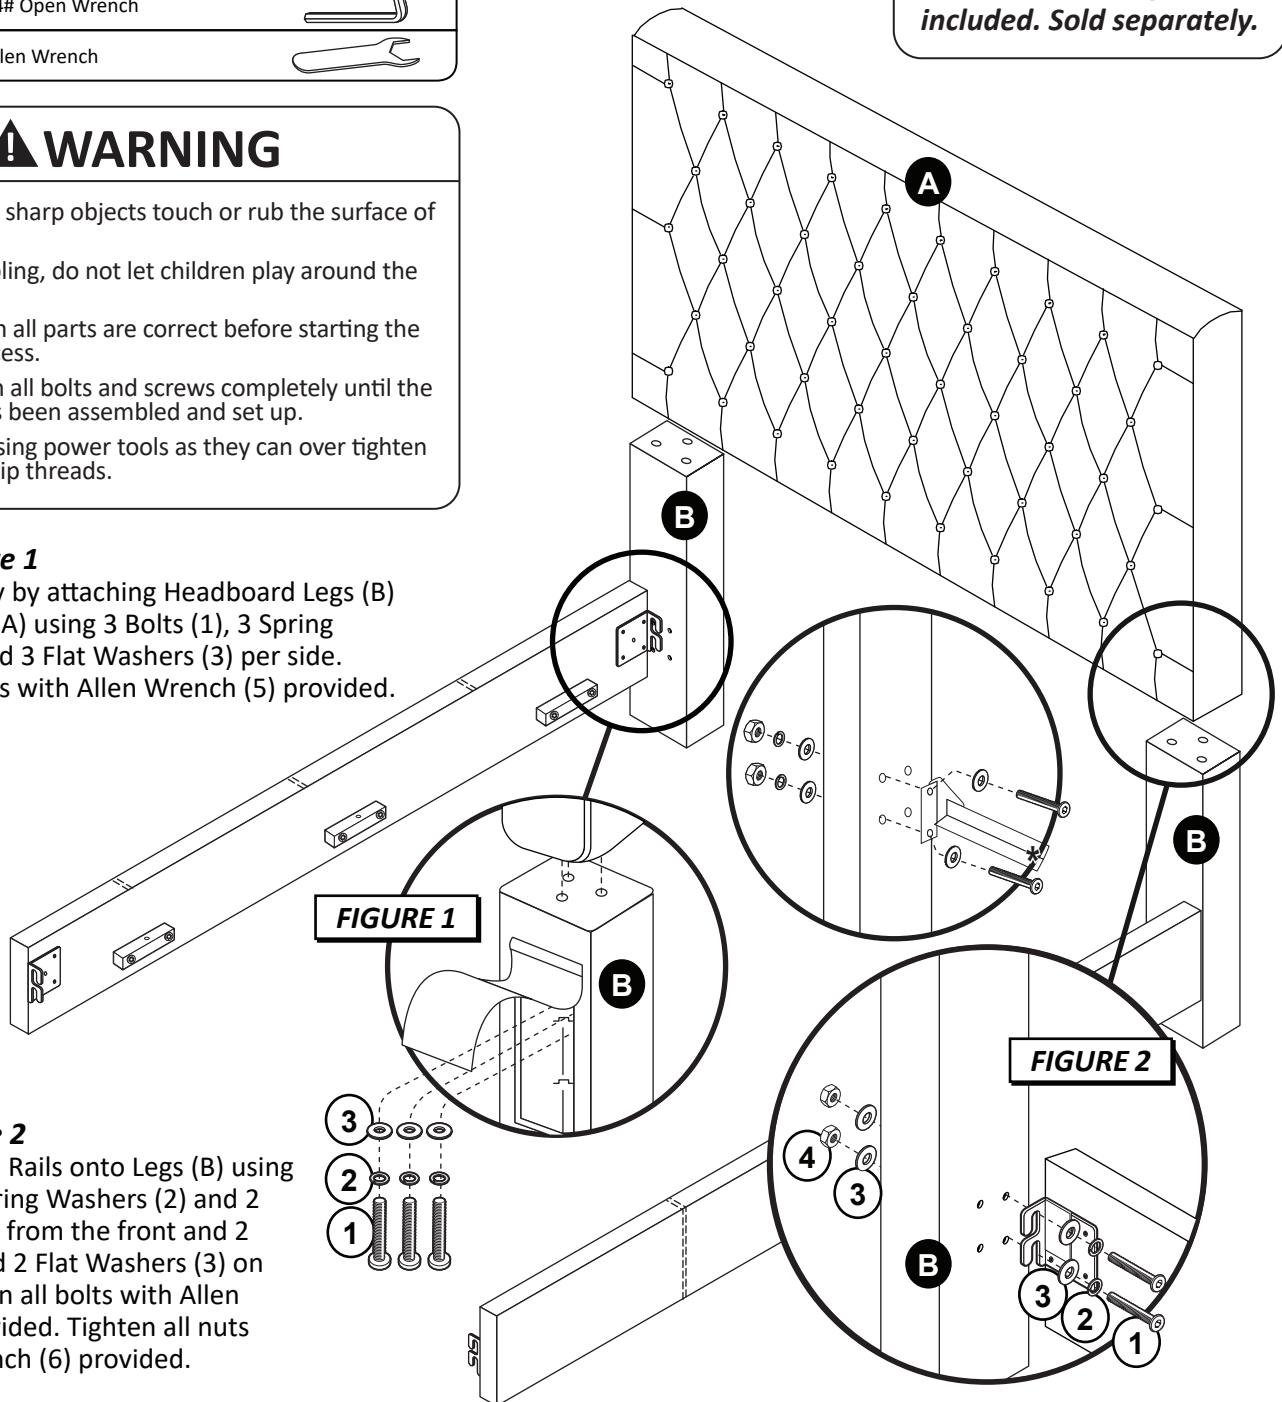

STEP 2 - Figure 2

Next attach Side Rails onto Legs (B) using 2 Bolts (1), 2 Spring Washers (2) and 2 Flat Washers (3) from the front and 2 Hex Nuts (4) and 2 Flat Washers (3) on the back. Tighten all bolts with Allen Wrench (5) provided. Tighten all nuts with Open Wrench (6) provided.