

PRESQUE ISLE WOOD 3-LADDER SWIVEL STOOL

Model # 4478-826 / 827 Counter Stool

Model # 4478-830 / 831 Bar Stool

Date: 09-12-10



Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (14) Long Allen Bolts *M6 x 40mm*
- B (4) Short Allen Bolts *M6 x 25mm*
- C (14) Spring Washers *13mm*
- D (10) Flat Washers *16.5mm*
- E (4) Wood Dowels
- F (1) Allen Wrench

PARTS LIST

- K (1) Stool Back
- L (1) Seat Cushion
- M (4) Leg Panels
- N (1) Swivels Base
- P (1) Support Ring

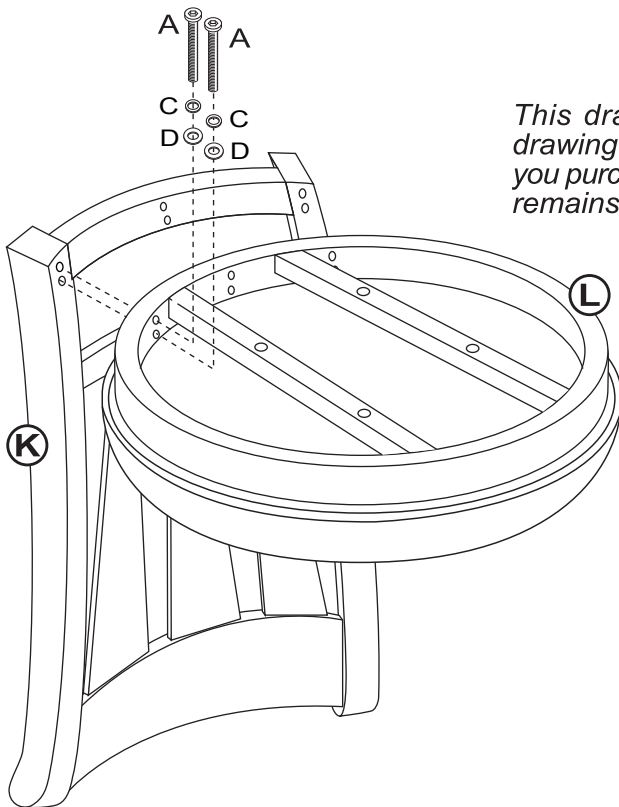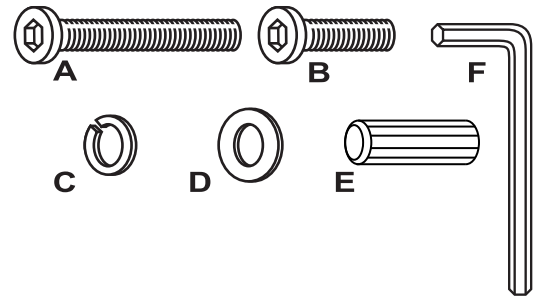

This drawing is a generic drawing of the original item you purchased. All assembly remains the same.

STEP 1

Begin the assembly by attaching the Seat Base (L) to the Stool Back (K). Once in place, secure each arm of the Stool Back using 2 Long Allen Bolts (A) 2 Spring Washers (C) & 2 Flat Washers (D) per each side. Tighten all bolts using Allen Wrenches (F).

STEP 2

Next attach each Leg (M) to Swivels Base (N) first using 1 Wood Dowel (E) per each side. Carefully align the Wood Dowels with the pre-drilled holes and fit in place. Once in place, secure from inside using 1 Allen Bolt (A) & 1 Spring Washer (C) per each side. Do not fully tighten bolts.

STEP 3

Attach each Leg (M) to the Large Support Ring (P) by using 1 Long Allen Bolt (A), 1 Spring Washer (C) & 1 Flat Washer (D) per each Leg. Do not fully tighten bolts. Tighten all bolts from STEP 2 using Allen Wrench (E).

STEP 4

Finally place the Leg Base onto the bottom of Seat Cushion (L) and align the Swivel Plate to the hole by using 4 short Allen Bolts (B). Tighten all bolts. The assembly is now complete.

