

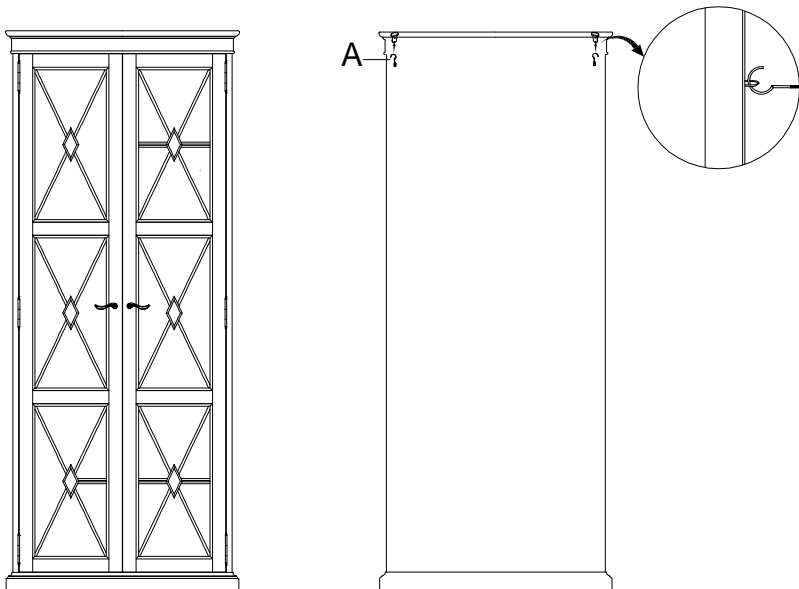


ASSEMBLY INSTRUCTION

Item#: 3005-50001 Two-Door Thin Display Cabinet-Ebony

*** Please make sure you have all parts indicated below prior to assembly.

NO	HARDWARE LIST	Q'TY
A	 HOOK	2
B	 PLASTIC ANCHOR	2



Assembly Steps:

1. Drill two holes into the wall using 1/4" drill bit at the desired place you want to set the cabinet and insert the plastic anchor (B).
2. Screw the hook (A) into the plastic anchor (B). Check and make sure the plastic anchor (B) is securely held in the wall.
3. Hang the metal ring on to the hook (A) and set the cabinet in place.

Above hardware is packed in the plastic bag with the instruction sheet.

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.