
ASSEMBLY INSTRUCTION

Item#: 500-50-757 French Jewelry Armoire

*** Caution: Please read all instructions carefully before starting the assembly process.

NO	Hardware List		Q'ty
Α		Hook	2
В		Plastic Anchors	2

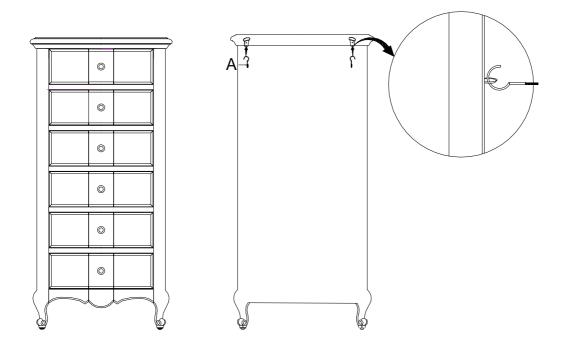

Assembly Steps:

- 1. Drill two holes into the wall using 1/4"drill bit at the desired place you want to set the Jewelry Armoire and insert the Plastic Anchors (B).
- 2. Screw the Hook (A) into the Plastic Anchor (B) .Check and make sure the Plastic Anchor(B) is securely held in the wall.
- 3. Hang the metal rings on to the Hook (A) and set the Jewelry Armoire in place.

Above hardware is packed in the plastic bag with the instruction sheet.

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.