

Stealthbox®

INSTALLATION GUIDE
for the
SB-GM-CTRIIP/10TW3
SKU# 94602 - 94603
2010 & Up Chevrolet Camaro Coupe



Thank you for choosing a JL Audio Stealthbox® for your automotive sound system. With proper installation, your new vehicle-specific enclosed subwoofer system will deliver years of listening pleasure.

We strongly recommend that you have your new Stealthbox® installed by your authorized JL Audio dealer. The installation professionals employed by your dealer have the necessary tools and experience to disassemble and reassemble your vehicle properly. Also, keep in mind that your warranty coverage extends to 2 years if your system is installed or approved by your authorized JL Audio dealer. If you prefer to perform your own installation, please read this installation guide completely before beginning the process.

JL AUDIO®
Ahead of the Curve™

! IMPORTANT

If you choose to perform the installation yourself, it is absolutely vital that the Stealthbox® be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems:

- 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer(s).
- 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

INSTALLATION DIFFICULTY:

1 OUT OF 5

ESTIMATED TIME:
1/2 HOUR



STEP 1

Empty the trunk of the vehicle.



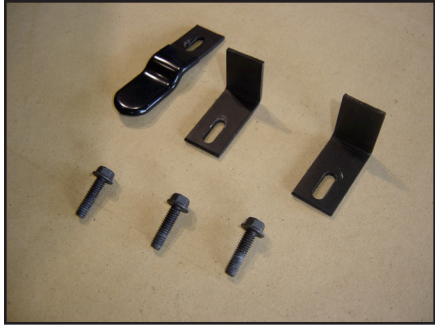
STEP 2

Empty the rear seat area, and fold down the rear seat back.



STEP 3

Connect speaker cable to the terminal cup on the Stealthbox®, and carefully place the enclosure face down in the trunk as shown.

**STEP 4**

Pictured is the Stealthbox® mounting hardware. The two L-Brackets are used for bottom of the enclosure, and the Center Bracket is used for the top of the enclosure.

**STEP 5**

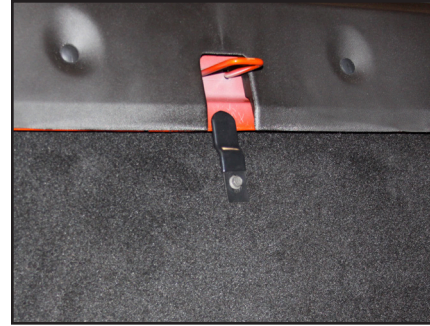
From the back seat area, secure each of the L-Brackets to the threaded inserts on the bottom of the enclosure using a pair of 1/4 - 20 x 1" Hex Head Bolts, 1/4" Lock Washers, and 1/4" Flat Washers.

**STEP 6**

Route the speaker cable as necessary, and tilt the Stealthbox® up into position so the woofers face the rear of the vehicle.

**STEP 7**

Be sure the two L-Brackets grab the bottom lip of the trunk as shown.

**STEP 8**

Secure the Center Bracket to the threaded insert on the top of the enclosure using a 1/4 - 20 x 1" Hex Head Bolt, 1/4" Lock Washer, and 1/4" Flat Washer, and position it below the seat latch hook as shown.

**CONGRATULATIONS!**

You have completed the installation for this model!

Enjoy your new Stealthbox®!

Please refer to the Power Recommendation section for an amplifier recommendation and basic set-up help.

INCLUDED HARDWARE

- | | |
|--------------------------------|----------------------|
| (1) Center Bracket | (1) Rectangular Cap |
| (2) L-Bracket | (3) 1/4" Flat Washer |
| (3) 1/4 -20 x 1" Hex Head Bolt | (3) 1/4" Lock Washer |

SPECIFICATIONS

Enclosure Type: Acoustic Suspension (sealed)

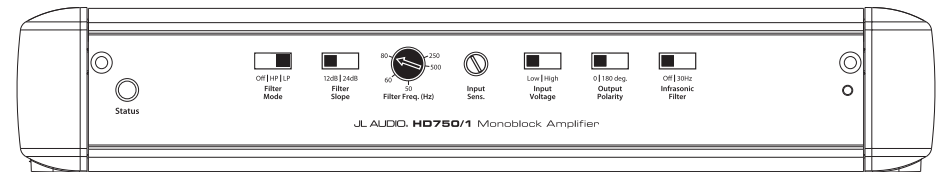
Driver Type: 10TW3-D4

Nominal Impedance: 2.67 Ohms (woofers are wired in parallel)

Continuous Power Handling: 1200 watts

POWER RECOMMENDATION

JL Audio recommends high quality amplifiers such as the JL Audio HD1200/1, HD750/1, 1200/1v3, XD1000/1v2, or the JX1000/1D. The diagram below shows the recommended crossover settings for the HD750/1. If another amplifier is being used, reference this illustration and use similar settings on that amplifier.



All JL Audio amplifiers are very versatile audio components. Please consult the owner's manual for even more detailed information about installing and tuning your amplifier.

CONNECTIONS

Using quality power, signal and speaker wire is essential in ensuring the performance of your Stealthbox®. JL Audio recommends using a 4 AWG power kit such as the XD-PCS4-1B for your Stealthbox® amplifier. Other kits are available should you be using more than one amplifier. Signal wire such as the JL Audio Premium Audio Interconnect Cables should be used to provide signal for both channels of the amplifier. JL Audio recommends using 12AWG speaker wire for subwoofers such as our XC-BCS12-25.

MID/HIGH FREQUENCY DRIVER FITMENT

A variety of JL Audio coaxial and component systems will fit in the factory speaker locations of your vehicle.

Front Speaker Size / Location: 6-1/2" - Front Doors
Fits JL Audio Models: TR650-CXi, TR650-CSi, C2-650x, C2-650, C3-650, C5-650x, C5-650, & ZR650-CSi



Rear Speaker Size / Location: 6" x 9" - Rear Deck
Fits JL Audio Models: TR690-TXi, C2-690tx

JL AUDIO®
Ahead of the Curve™

(954) 443-1100

www.jlaudio.com

All specifications are subject to change without notice. "JL Audio" and the JL Audio logo, "Stealthbox" and the Stealthbox logo are registered trademarks of JL Audio, Inc. "Ahead of the Curve" and its respective logo is a trademark of JL Audio, Inc.
 JLA-SKU# 011381 09.20.2016 • Printed in USA • ©2016 JL Audio, Inc.
 For more detailed information please visit us online at www.jlaudio.com.

