



E-Vision Laser 7500 Series

E-Vision Laser 8500 Series

High Brightness Digital Video Projector

► INSTALLATION AND QUICK-START GUIDE

► CONNECTION GUIDE

► OPERATING GUIDE

► REFERENCE GUIDE



About This Document

Follow the instructions in this manual carefully to ensure safe and long-lasting use of the projector.

Symbols used in this manual

Many pages in this document have a dedicated area for notes. The information in that area is accompanied by the following symbols:

 **WARNING:** this symbol indicates that there is a danger of physical injury to yourself and/or damage to the equipment unless the instructions are closely followed.

 **ELECTRICAL WARNING:** this symbol indicates that there is a danger of electrical shock unless the instructions are closely followed.

 **LASER WARNING:** this symbol indicates that there is a potential hazard of eye exposure to laser radiation unless the instructions are closely followed.

 *NOTE: this symbol indicates that there is some important information that you should read.*

Product revision

Because we at Digital Projection continually strive to improve our products, we may change specifications and designs, and add new features without prior notice.

Legal notice

Trademarks and trade names mentioned in this document remain the property of their respective owners. Digital Projection disclaims any proprietary interest in trademarks and trade names other than its own.

Notes

Laser Information



Caution - use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes

Introduction

Congratulations on your purchase of this Digital Projection product.

Your projector has the following key features:

- Support for most 3D formats.
- HDBaseT® for transmission of uncompressed High Definition Video up to 100 m from the source.
- 3G-SDI with loop-through.
- Edge Blend.
- Blanking control for custom input window sizing.
- Cornerstone, Vertical & Horizontal Keystone, Pincushion & Barrel, and Image Rotation.
- Separate control of screen and source aspect ratio.
- Control via LAN and RS232.
- Motorised lens mount.

A serial number is located on the side of the projector. Record it here:

Notes

CONTENTS

INSTALLATION AND QUICK-START GUIDE	1
WHAT'S IN THE BOX?	3
CONNECTING THE POWER SUPPLY	4
Voltage selection	4
PROJECTOR OVERVIEW	5
Front and rear views	5
Control panel.....	6
Projector indicators	7
REMOTE CONTROL.....	8
Infrared reception.....	11
POSITIONING THE SCREEN AND PROJECTOR.....	12
CHANGING THE LENS.....	13
Inserting a new lens	13
Removing the lens	13
OPERATING THE PROJECTOR.....	14
Switching the projector on.....	14
Switching the projector off.....	14
Selecting an input signal	15
Selecting a test pattern	15
Adjusting the lens.....	16
Adjusting the image.....	16

CONNECTION GUIDE	17
SIGNAL INPUTS	19
Digital inputs and outputs.....	19
Analog inputs and outputs.....	20
EDID on the DVI and VGA inputs.....	21
Using HDMI/DVI switchers with the projector	21
3D connections	22
3D sources up to 60Hz requiring frame doubling and left/right interleaving.....	22
Frame sequential 3D sources up to 120Hz	22
Dual Pipe 3D	22
3D Sync.....	23
3D Sync in	23
3D Sync out	23
CONTROL CONNECTIONS.....	24
LAN connection examples	25
RS232 connection example	26

CONTENTS (continued)

OPERATING GUIDE	27
USING THE MENUS	29
Opening the OSD.....	29
Opening a menu.....	29
Exiting menus and closing the OSD.....	29
Inside a menu.....	30
<i>Accessing sub-menus.....</i>	<i>30</i>
<i>Executing commands.....</i>	<i>30</i>
Editing projector settings.....	31
<i>Using a slider to set a value.....</i>	<i>31</i>
<i>Editing numeric values</i>	<i>31</i>
USING THE PROJECTOR.....	32
Main menu	32
Lens menu	33
<i>Lens Control.....</i>	<i>33</i>
<i>Lens Memory.....</i>	<i>34</i>
Image menu	35
<i>Noise Reduction</i>	<i>36</i>
<i>Position and Phase</i>	<i>36</i>
Color menu.....	37
<i>Color Space</i>	<i>37</i>
<i>Color Mode</i>	<i>38</i>
Geometry menu	43
<i>Aspect Ratio.....</i>	<i>43</i>
<i>Digital Zoom & Shift.....</i>	<i>45</i>
<i>Overscan.....</i>	<i>46</i>
<i>Blanking</i>	<i>47</i>

<i>Keystone</i>	<i>48</i>
<i>4 Corners</i>	<i>50</i>
<i>Rotation</i>	<i>51</i>
<i>Pincushion / Barrel.....</i>	<i>52</i>
Edge Blend menu.....	53
<i>Blend Width.....</i>	<i>54</i>
<i>Black Level Uplift.....</i>	<i>55</i>
3D menu.....	56
<i>3D types.....</i>	<i>57</i>
<i>Some 3D settings explained</i>	<i>58</i>
<i>Frame rate multiplication in 3D images</i>	<i>59</i>
Laser menu	60
Setup menu.....	61
<i>ColorMax Setting</i>	<i>63</i>
<i>Power On/Off.....</i>	<i>64</i>
<i>Clock Adjust</i>	<i>65</i>
<i>OSD Settings.....</i>	<i>66</i>
<i>Memory.....</i>	<i>66</i>
Network menu	67
PIP menu	68
Information menu	69
<i>Signal Format</i>	<i>69</i>
<i>System Status</i>	<i>70</i>
<i>Thermal Status.....</i>	<i>70</i>
<i>Factory Reset</i>	<i>71</i>
POSSIBLE COMBINATIONS OF SETTINGS.....	72

CONTENTS (continued)

REFERENCE GUIDE.....	73
THE DMD™	75
SCREEN REQUIREMENTS	77
Fitting the image to the DMD™	77
WUXGA images displayed full width	77
WUXGA images displayed with a height of 1080 pixels.....	78
WUXGA images displayed full height	79
Diagonal screen sizes	80
Fitting the image to the screen.....	81
Positioning the screen and projector.....	82
POSITIONING THE IMAGE	83
FRAME RATES AND PULLDOWNS EXPLAINED.....	85
Interlaced and progressive scan	85
Frame rates of image sources	85
Pulldowns - conversion into destination formats.....	86
2:3 (normal) pulldown	86
2:3:3:2 (advanced) pulldown.....	87
APPENDIX A: LENS PART NUMBERS.....	88
APPENDIX B: SUPPORTED SIGNAL INPUT MODES	89
2D formats.....	89
3D formats.....	91
APPENDIX C: GLOSSARY OF TERMS	93

This page is intentionally left blank.



E-Vision Laser 7500 Series

E-Vision Laser 8500 Series

High Brightness Digital Video Projector


► INSTALLATION AND QUICK-START GUIDE




IN THIS GUIDE

What's In The Box?	3
Connecting The Power Supply	4
Voltage selection.....	4
Projector Overview	5
Front and rear views.....	5
Control panel.....	6
Projector indicators.....	7
Remote Control	8
Infrared reception.....	11
Positioning The Screen And Projector	12
Changing The Lens	13
Inserting a new lens.....	13
Removing the lens.....	13
Operating The Projector	14
Switching the projector on.....	14
Switching the projector off.....	14
Selecting an input signal.....	15
Selecting a test pattern.....	15
Adjusting the lens.....	16
Adjusting the image.....	16


What's In The Box?

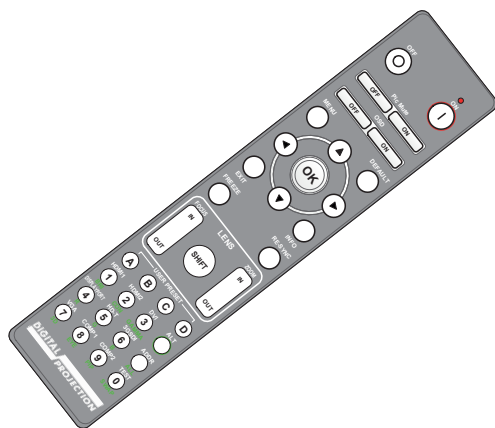


**Remote control
(117-780)**

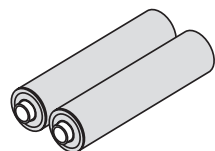


2x AAA batteries

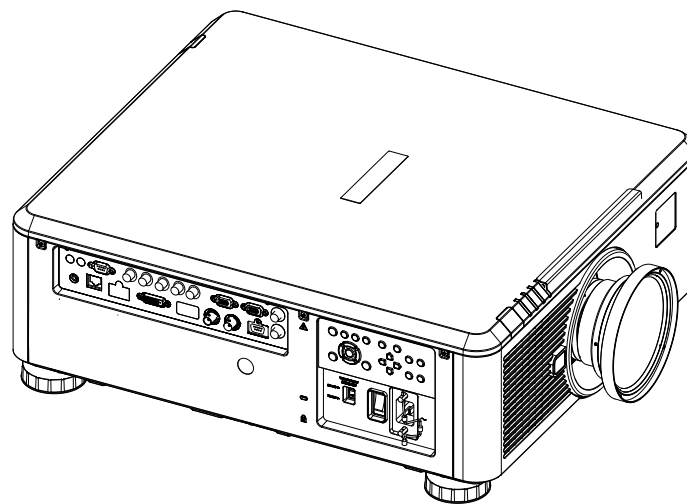


Projector

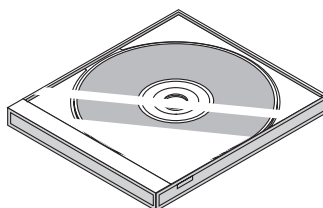


User Manual on disc

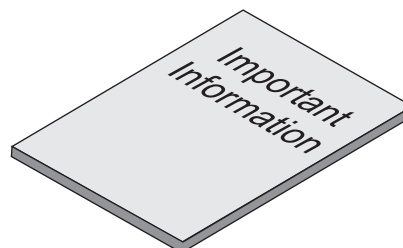


Important Information (117-440)

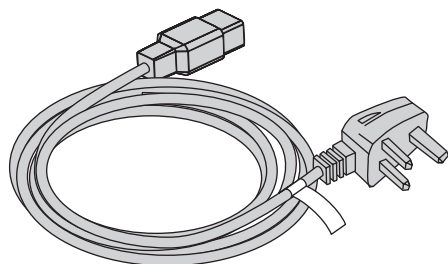

Power cable, United Kingdom

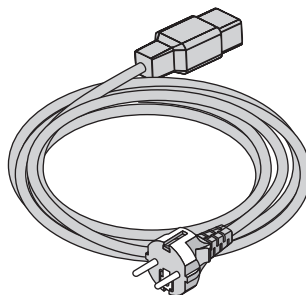

Power cable, Europe

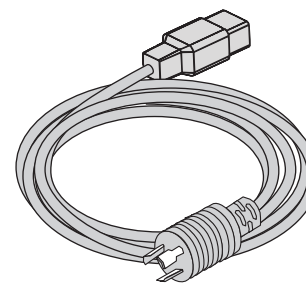


Power cable, North America

Notes

-  Make sure your box contains everything listed. If any pieces are missing, contact your dealer.
-  You should save the original box and packing materials, in case you ever need to ship your projector.
-  The projector is shipped without a lens.
-  Only one power cable - dependent on the destination territory - will be supplied with the projector.

Connecting The Power Supply

Adjust the **VOLTAGE SELECT switch 1** to the required voltage, then firmly push the mains connector into the **socket 2**.

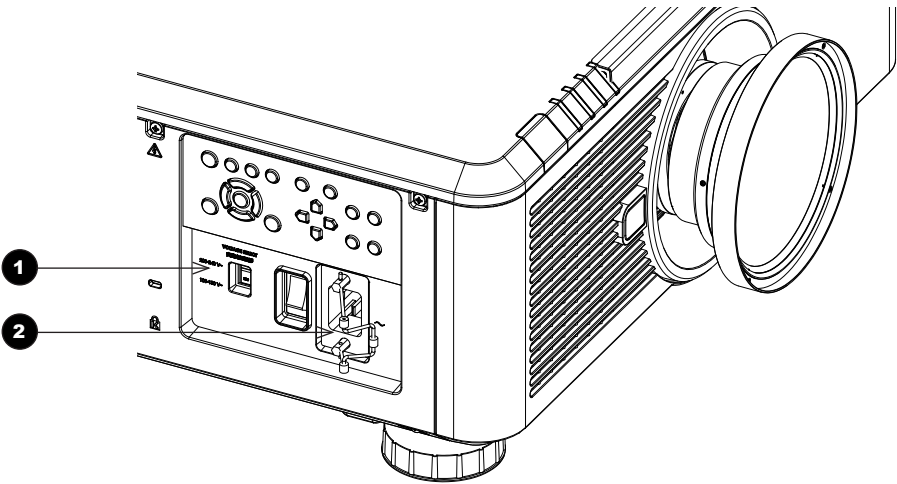

Notes

-  Use only the power cable provided.
-  Ensure that the power outlet includes a ground connection as this equipment **MUST** be earthed.
-  Handle the power cable carefully and avoid sharp bends. Do not use a damaged power cable.

Voltage selection



The VOLTAGE SELECT switch must be set to match the power supply you are using:

Voltage of power supply used	Position of VOLTAGE SELECT switch
AC100V outlet	200 240V~  100 130V~
AC200V (single phase) outlet	200 240V~  100 130V~

Projector Overview

Front and rear views


- 1** Connection panel
- 2** Control panel
- 3** Front infrared window
- 4** Indicators
- 5** Lens mount
- 6** Voltage selector
- 7** Power switch and power connection
- 8** Air inlet
- 9** Air inlets
- 10** Rear infrared window
- 11** Air outlets
- 12** Adjustable feet

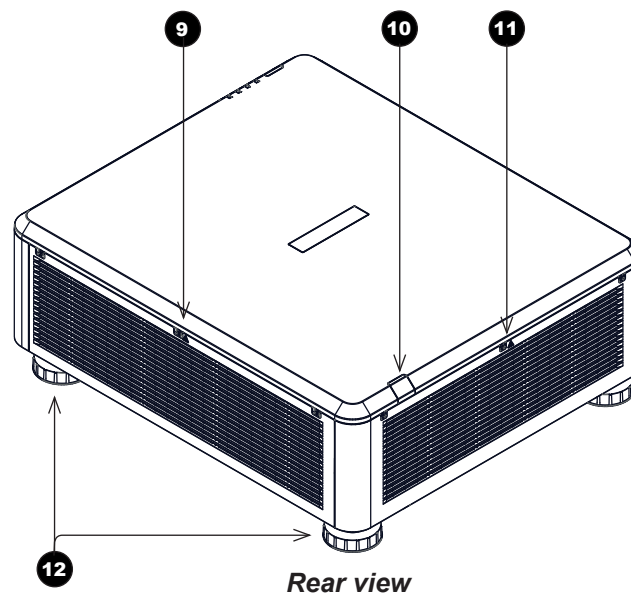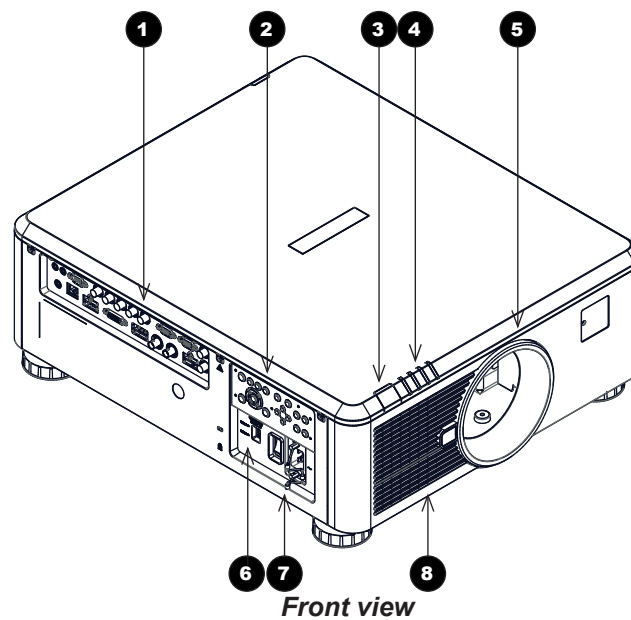

Notes


Control panel

- 1 POWER**
Switches the projector on and off (STANDBY).
- 2 INPUT**
Switches to the next input source.
- 3 AUTO SYNC**
Re-synchronises with the current input signal.
- 4 ASPECT**
Changes the aspect ratio.
- 5 CENTER LENS**
Centers the lens.
- 6 PIC MUTE**
Shows and hides the projected image. When OFF, the light source is completely switched off and the screen is black.
- 7 MENU**
Displays and exits the OSD.
- 8 Arrow buttons & ENTER**
Navigation buttons used to highlight menu entries in the OSD. Press **ENTER** to open or execute the highlighted menu entry.
- 9 EXIT**
Exits the current OSD page and enters the level above.
- 10 LENS SHIFT arrow buttons**
Each of these buttons moves the lens in the specified direction.
- 11 FOCUS plus and minus buttons**
Used to move the focus in and out.
- 12 ZOOM plus and minus buttons**
Used to zoom in and out.

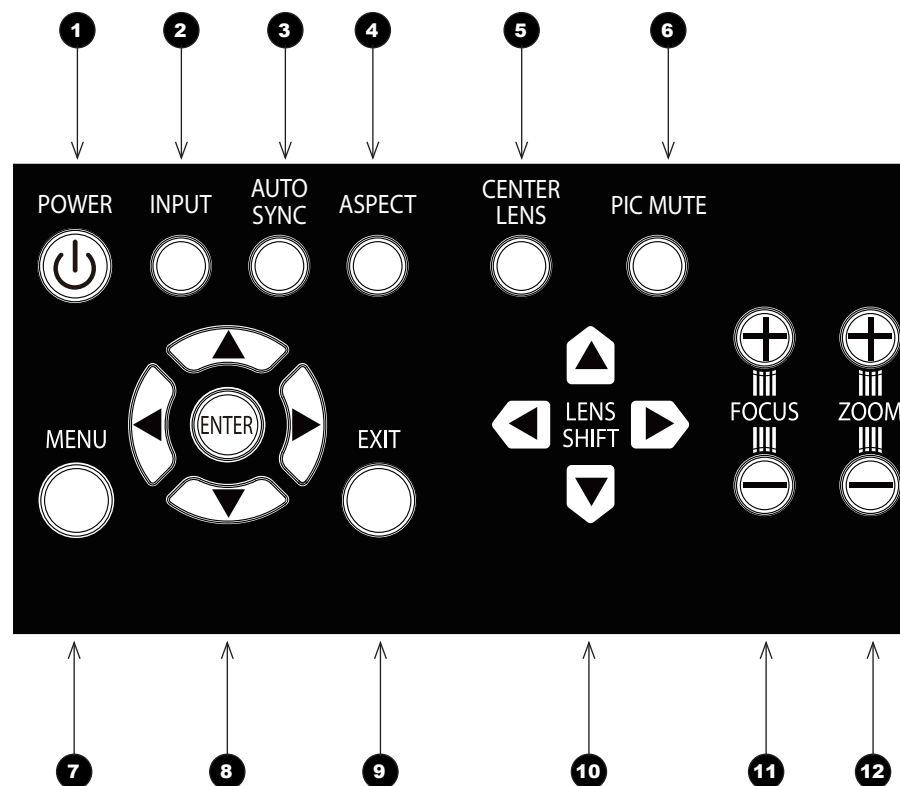**Notes**

Projector indicators

- TEMP. Off = no problem
Flashing red = temperature error
- LIGHT Off = light is switched off
Flashing green = light is preparign to switch on
Flashing red (cycles of six flashes) = light module failure
On, red = light module has reached end of life
On, green = light is switched on
- STATUS Off = no problem
Flashing red (continuously) = cover error
Flashing red (cycles of four flashes) = fan error
On, red = system error
- POWER Off = the projector is switched off
Flashing green = the projector is warming up
Flashing amber = the projector is cooling down
On, red = STANDBY mode
On, green = the projector is switched on

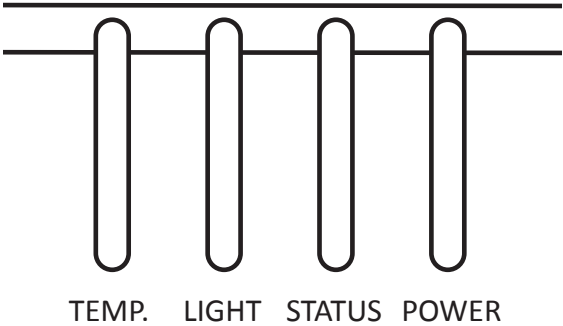


Notes

Remote Control

- 1 Power ON / OFF**
Turns power on and off.
- 2 Pic Mute ON / OFF**
Shows and hides the projected image.
When OFF, the light source is completely switched off and the screen is black.
- 2 OSD ON / OFF**
Enable and disable screen timeout messages and control whether to show the OSD during projection.
- 4 MENU**
Access the OSD. If the OSD is open, press this button to go back to the previous menu.
- 5 Navigation (arrows and OK)**
Navigate through the menus with the arrows, confirm your choice with **OK**.
In lens adjustment modes, the arrows are used to move, zoom or focus the lens. See **11** below.
In lens adjustment modes, or when the OSD is not showing, the **OK** button switches between modes: **Shift Adjustment** and **Zoom / Focus Adjustment**.
- 6 EXIT**
Go up one level in the OSD. When the top level is reached, press to close the OSD.
- 7 FREEZE**
Freeze the current frame.
- 8 DEFAULT**
When editing a parameter, press this button to restore the default value.
- 9 INFO**
Access information about the projector.
- 10 RE-SYNC**
Re-synchronise with the current input signal.


continues on next page...

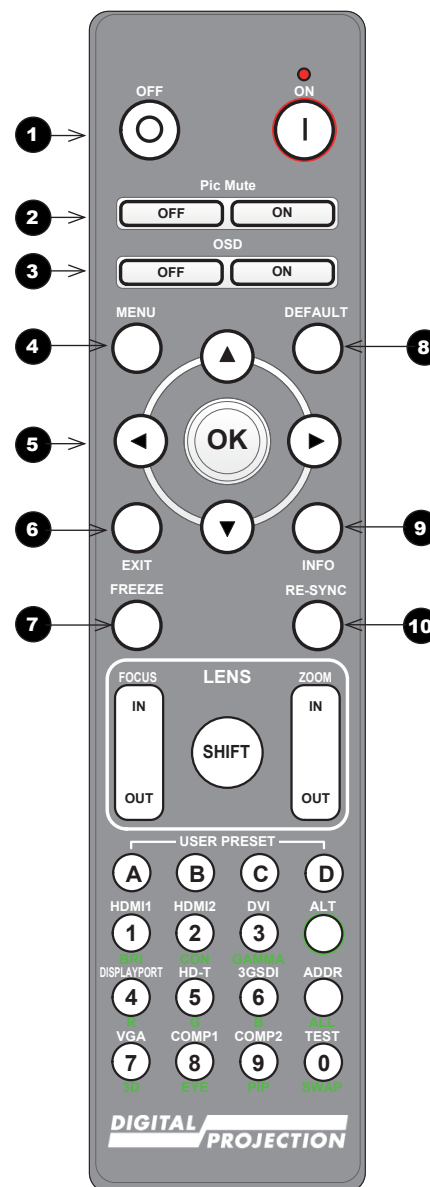

Remote control

Notes

- 11 LENS adjustment**
FOCUS IN / OUT: adjust focus.
SHIFT: press and hold this button, then use the Navigation arrow buttons to move the lens.
ZOOM IN / OUT: adjust zoom.
- 12 USER PRESET A, B, C, D**
 Load user presets.
- 13 ALT**
 Press and hold this button to access alternative functions for all buttons with a green label.
- 14 DVI / GAMMA / numeric input 3**
 Select the DVI input.
 Use with **ALT** to switch to the next **Gamma** value:
 ...1.0, 1.8, 2.0, 2.2, 2.35, 2.5...
- 15 HDMI 2 / CON / numeric input 2**
 Select the HDMI 1 input.
 Use with **ALT** to bring up the **Contrast** control, then adjust the value with the **LEFT** and **RIGHT** arrow buttons.
- 16 HDMI 1 / BRI / numeric input 1**
 Select the HDMI 1 input.
 Use with **ALT** to bring up the **Brightness** control, then adjust the value with the **LEFT** and **RIGHT** arrow buttons.
- 17 TEST / SWAP / numeric input 0**
 Show a test pattern. Press again to show the next test pattern:
 ...Off, White, Black, Red, Green, Blue, CheckerBoard, CrossHatch, V Burst, H Burst, ColorBar...
 When **PIP** mode is on, use this button with **ALT** to swap the main and sub images.

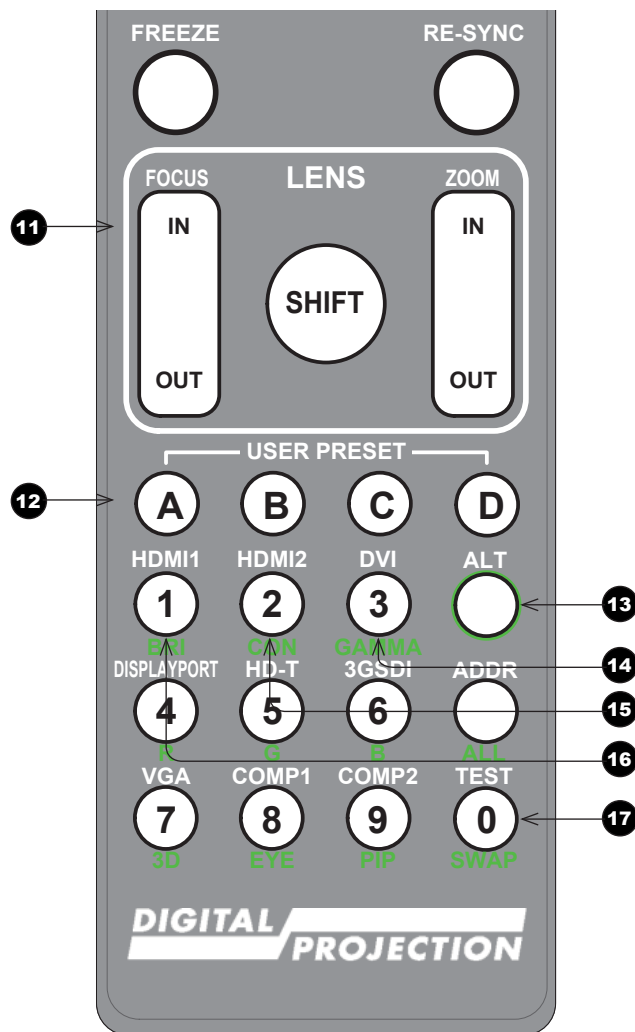


Notes


continues on next page...

Remote control

- 17 DISPLAYPORT / R / numeric input 4**
Select DisplayPort input.
- 18 HD-T / G / numeric input 5**
Select the HDBaseT input.
- 19 3GSDI / B / numeric input 6**
Select the 3G-SDI input.
- 20 VGA / 3D / numeric input 7**
Select the VGA input.
Use with **ALT** to toggle the **3D Format** setting between **Off** and **Auto**.
- 21 COMP1 / EYE / numeric input 8**
Select the Component 1 input.
Use with **ALT** to switch between left and right eye 3D dominance.
- 22 COMP2 / PIP / numeric input 9**
Select the Component 2 input.
Use with **ALT** to switch on **Picture In Picture (PIP)** mode.
- 23 ADDR / ALL (with red indicator at the top)**
Assign and unassign an IR remote address.
To assign an address:
1. Press and hold this button until the indicator starts flashing.
 2. Release this button and while the indicator is still flashing, enter a two-digit address using the numeric input buttons. The indicator will flash three times quickly to confirm the change.
- To unassign an address and return to the default address 00,**
- Press and hold **ALT** and this button simultaneously until the indicator flashes to confirm the change.

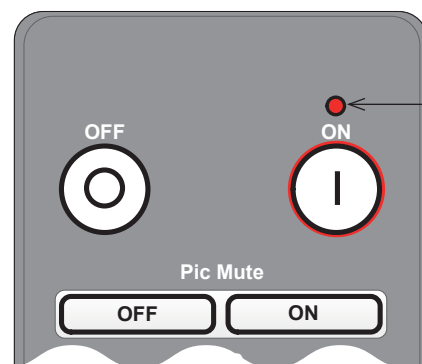

Remote control top

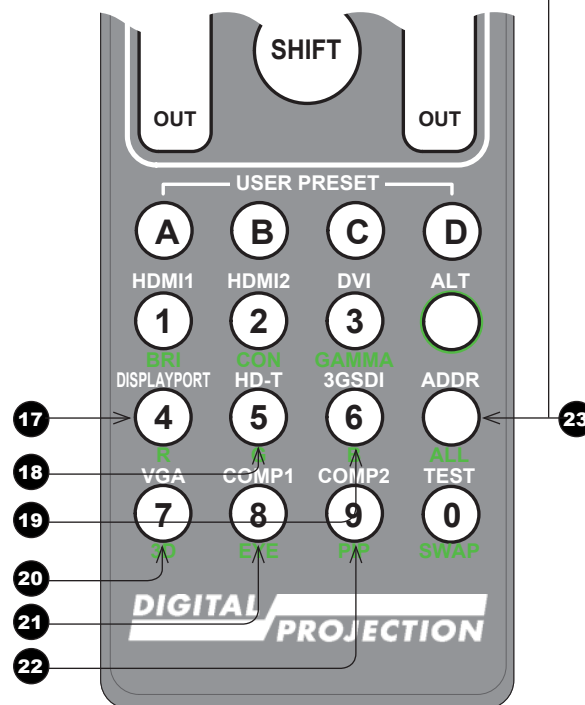


Remote control bottom

Notes

Infrared reception

The projector has infrared sensors at the front and back.

The angle of acceptance is 40°. Make sure that the remote control is within the angle of acceptance when trying to control the projector.

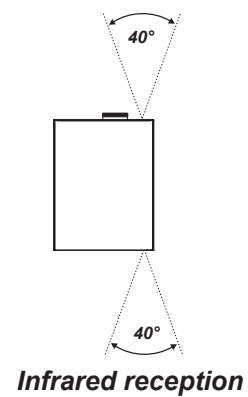
**Notes**

Positioning The Screen And Projector

1. Install the screen, ensuring that it is in the best position for viewing by your audience.
2. Mount the projector, ensuring that it is at a suitable distance from the screen for the image to fill the screen. Set the adjustable feet so that the projector is level, and perpendicular to the screen.

The drawing below shows the positions of the feet for table mounting, and the fixing holes for ceiling mounting.

- 1 Four adjustable feet**
- 2 Six M4 holes for ceiling mount**
The screws should not penetrate more than 15 mm into the body of the projector.

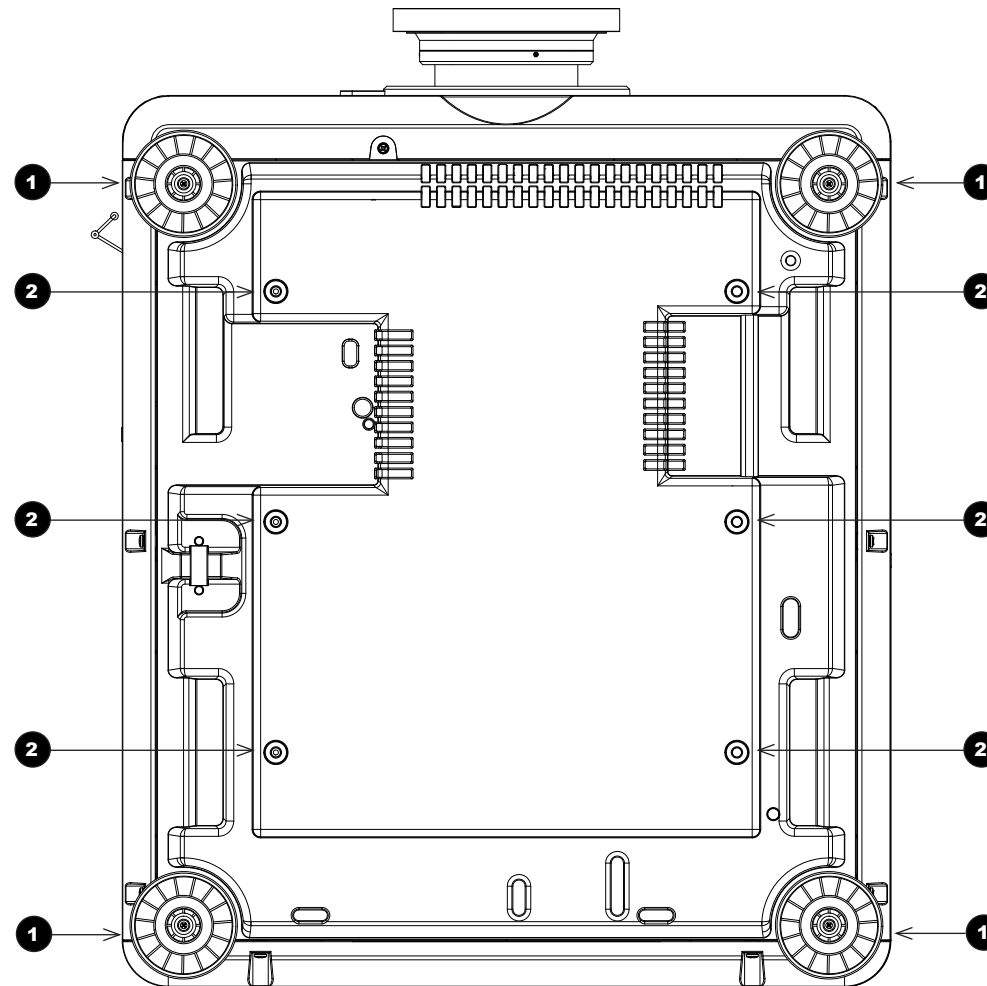


Notes

-  **Always allow the projector to cool for 5 minutes before disconnecting the power or moving the projector.**
-  **Ensure that there is at least 50 cm (19.7 in) of space between the ventilation outlets and any wall, and 30 cm (11.8 in) on all other sides.**
-  **Do not stack more than 3 projectors.**

Changing The Lens


Inserting a new lens

1. Remove the front and rear lens caps.
2. Position the lens so that the labels are at the top, and gently insert it all the way into the lens mount.
3. Push the lens in firmly and turn it clockwise until it clicks into place.

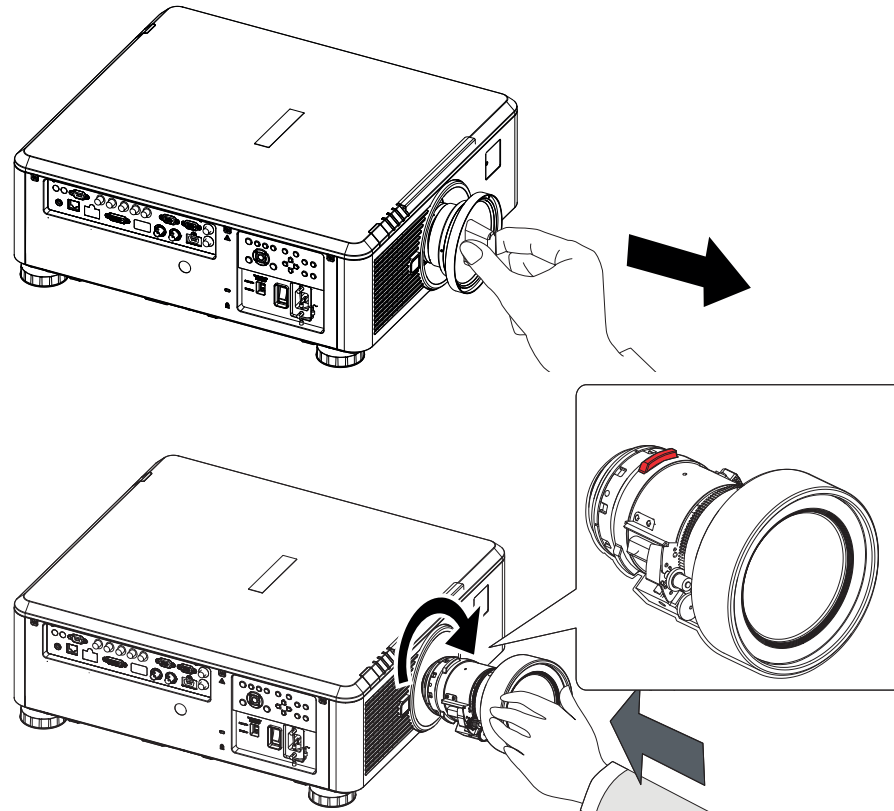

Removing the lens

1. Push in the lens release lever, and turn the lens anti-clockwise.
2. Remove the lens..

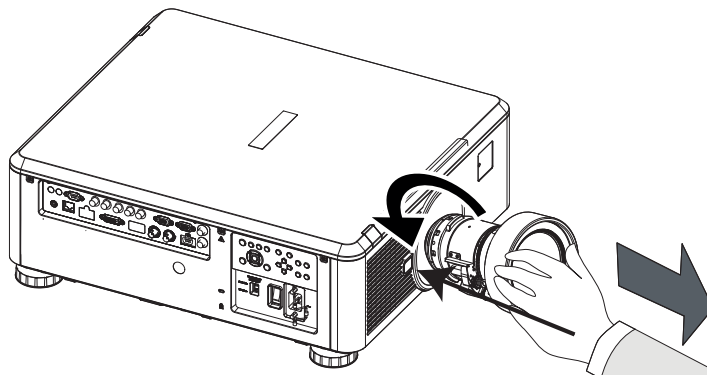

Notes



Before changing the lens, always make sure the projector is switched off and fully disconnected from its power supply.



When changing the lens, avoid using excessive force as this may damage the equipment.



The lens is shipped separately.



Take care to preserve the original lens packaging and protective caps for future use.



The projector will not power on without the lens fitted.

Operating The Projector

Switching the projector on

1. Ensure a lens is fitted. Connect the power cable between the mains supply and the projector. (See **Connecting the power supply** above.) Switch on at the switch next to the power connector.
2. The **POWER** indicator lights red to signal that the projector is in STANDBY mode. Press one of the following buttons:
 - On the remote control, the **ON** button
 - On the projector control panel, the **POWER** button.

The fans begin working, then the **POWER** indicator begins flashing green. When the flashing stops, the **POWER** and **LIGHT** indicators both light steady green. The projector is switched on.

Switching the projector off

1. Press **OFF** on the remote control or **POWER** on the control panel, then press again to confirm your choice.

The **POWER** indicator on the control panel will start flashing amber, the system will go out and the cooling fans will run for a short time until the **POWER** indicator goes steady red to indicate that the projector has entered STANDBY mode.
2. If you need to switch the projector off completely, switch off at the mains power switch next to the power connector and then disconnect the power cable from the projector.

Notes



See also [Connecting The Power Supply](#) earlier in this guide.



The self-test is running when all the LEDs on the control panel are lit.



Use only the power cable provided.



Ensure that the power outlet includes a ground connection as this equipment **MUST** be earthed.



Handle the power cable carefully and avoid sharp bends. Do not use a damaged power cable.

Selecting an input signal

1. Connect one or more image sources to the projector.
2. Select the input you want to display:
 - Press one of the input buttons on the remote control.
 - Alternatively, open the On-screen display (OSD) by pressing **MENU**. Highlight **Input** from the main menu, press **ENTER/OK** and then select an input signal using the **UP ▲** and **DOWN ▼** arrow buttons. Press **ENTER/OK** to confirm your choice.

Selecting a test pattern

To display a test pattern:

- Press **TEST** on the remote control.
Change the test pattern using the **LEFT ◀** and **RIGHT ▶** arrow buttons. Test patterns are displayed in the following order:
White, Black, Red, Green, Blue, CheckerBoard, CrossHatch, V Burst, H Burst, ColorBar, Screen Layout, Off
- Alternatively, open the OSD by pressing **MENU**. Highlight **Test Patterns** from the main menu, then select a test pattern using the **LEFT** and **RIGHT** arrow buttons.

After the final test pattern, the projector exits test pattern mode and returns to the main image. To view test patterns again, you need to press **TEST** again. If you wish to exit the test patterns before you reach the final one,

- press **TEST** or **EXIT** at any time.

Notes



For full details of how to use the controls and the menu system, see the [Operating Guide](#).

Adjusting the lens

The lens can be adjusted using the **Lens** menu, or using the lens buttons on the remote control.

Lens menu

The **Lens** menu provides access to the **Lens Control** setting and the **Lens Center** command.

Lens Control allows **Zoom**, **Focus** and **Shift** adjustment using the arrow buttons. The setting operates in **Zoom/Focus Adjustment** and **Shift Adjustment** mode.

Press **ENTER/SELECT** to switch between the two modes.

Remote control

Use the remote control to adjust zoom, focus and shift directly, without opening a menu:

- **OK** enters lens control, then switches between **Zoom/Focus Adjustment** and **Shift Adjustment**.
- **EXIT** exits lens control and opens the **Lens** menu.
- **MENU** exits lens control and returns to the main image.
- The arrow buttons adjust zoom, focus and shift as indicated on the screen.

Adjusting the image

Orientation

- This can be set from the **Setup** menu.

Highlight **Orientation** and choose from **Front Tabletop**, **Front Ceiling**, **Rear Tabletop**, **Rear Ceiling** and **Auto-front**.

Keystone

- This can be set from the **Geometry** menu.

Picture

- Settings such as **Gamma**, **Brightness**, **Contrast**, **Saturation**, **Hue** and **Sharpness** can be set from the **Image** menu.

Notes



For full details of how to adjust the lens using the remote control, see [Remote Control](#) earlier in this guide.

Setup menu

Geometry menu

Image menu



E-Vision Laser 7500 Series

E-Vision Laser 8500 Series

High Brightness Digital Video Projector

► CONNECTION GUIDE




IN THIS GUIDE

Signal Inputs	19
Digital inputs and outputs.....	19
Analog inputs and outputs.....	20
EDID on the DVI and VGA inputs.....	21
Using HDMI/DVI switchers with the projector.....	21
3D connections	22
3D sources up to 60Hz requiring frame doubling and left/right interleaving	22
Frame sequential 3D sources up to 120Hz.....	22
Dual Pipe 3D.....	22
3D Sync	23
3D Sync in.....	23
3D Sync out	23
Control Connections	24
LAN connection examples	25
RS232 connection example	26

Signal Inputs

Digital inputs and outputs

- 1 HDBaseT**
Receives digital signal from HDBaseT-compliant devices.
- 2 HDMI 1**
HDMI 1.4a input. Connect an **HDMI** cable to the connector.
- 3 DVI-D**
This input can receive digital signal from a compatible source.
Supports sources up to 1920x1200 resolution, 24-60 Hz. Supports HDCP.
- 4 DisplayPort**
DisplayPort 1.1a input. Connect a DisplayPort cable to the connector.
Supports sources up to 1920x1200 resolution, 24-120 Hz. Supports HDCP.
- 5 3G-SDI in**
- 6 3G-SDI out**
Connect a 3G-SDI cable to distribute the 3G-SDI signal to another projector.
- 7 HDMI II**
HDMI 1.4 input. Connect an **HDMI** cable to the connector.

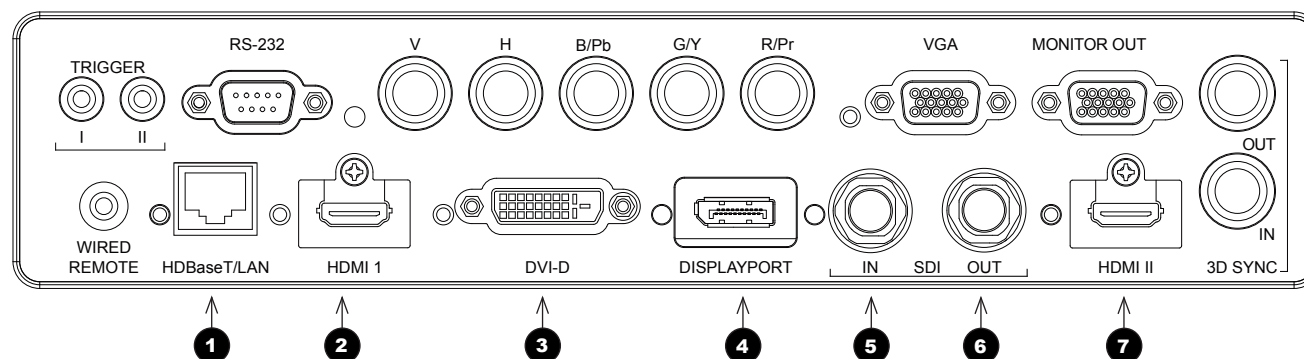

Notes

 For simultaneous HDBaseT and LAN connectivity, a third-party distribution product can be utilised to combine HDBaseT video stream with LAN connection for delivery to the projector.

 While the projector can receive 100/120Hz and display 3D at 100/120Hz, video processing is limited to 60Hz.

Analog inputs and outputs

1

Component

RGBHV, RGsB or RGBS

- Set **Color Space** in the **Color** menu to **Auto** or **RGB-Video**.

YPbPr or YCbCr

Set **Color Space** in the **Color** menu to **YPbPr** or **YCbCr**.

2


VGA

This input receives analog signals from a computer. When using this input, it is best to use a fully wired VGA cable to connect the source to the projector. This will allow the source to determine the projector's capabilities via DDC and show an optimized image. Such cables can be identified as they have a blue connector shell.

3

Monitor Out

Connect an analog monitor (VGA) cable to the 15-pin D-type to output the signal received on the VGA input.

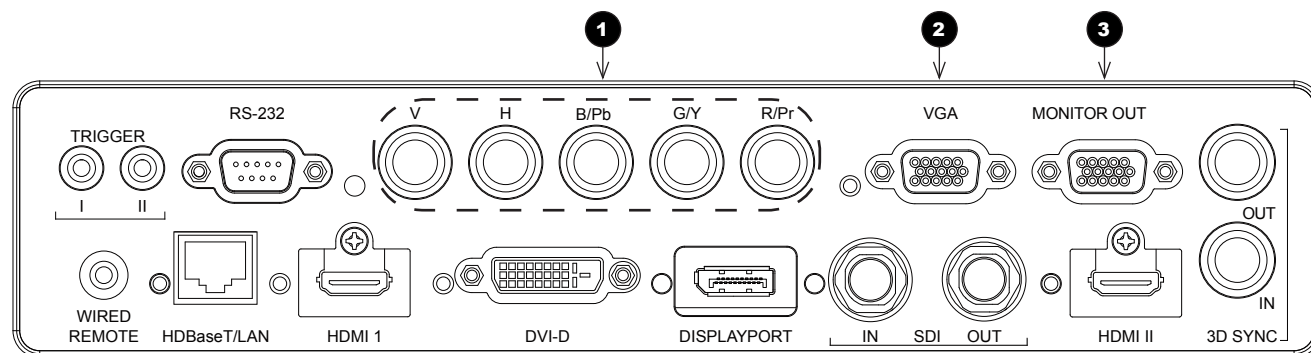

Notes

EDID on the DVI and VGA inputs


If you are using a computer DVI card or another source that obeys the EDID protocol, the source will automatically configure itself to suit the projector.

Otherwise refer to the documentation supplied with the source to manually set the resolution to the DMD™ resolution of the projector or the nearest suitable setting. Switch off the source, connect to the projector, then switch the source back on again.

Using HDMI/DVI switchers with the projector

When using an HDMI/DVI source switcher with the projector, it is important to set the switcher so that it passes the projector EDID through to the source devices. If this is not done, the projector may not be able to lock to the source or display the source correctly as its video output timings may not be compatible with those of the projector. Sometimes this is called transparent, pass-through or clone mode. See your switcher's manual for information on how to set this mode.

Notes

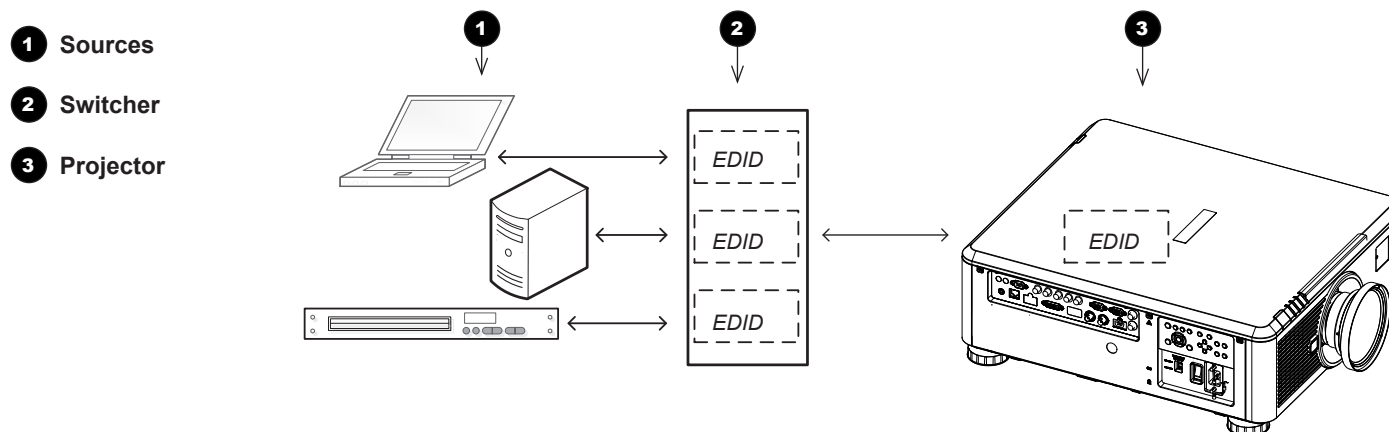

The EDIDs in the switcher should be the same as the one in the projector.

3D connections

3D sources up to 60Hz requiring frame doubling and left/right interleaving

1. Connect to either of the following inputs on the connection panel:
 - HDMI 1
 - HDMI 2
 - HDBaseT
2. Set **3D Format** in the **3D** menu to match the format of the incoming signal. Choose from **Auto**, **Side by Side (Half)** and **Top and Bottom**.

The **Frame Packing** format is automatically detected by the projector.


Frame sequential 3D sources up to 120Hz

- Connect to the DisplayPort input.

The **Frame Sequential** format is automatically detected by the projector and is supported on the DisplayPort input only.

Dual Pipe 3D

1. Connect the left eye output to the **HDMI 1** socket and the right eye output to the **HDMI 2** socket.
2. Set **3D Format** in the **3D** menu to **Dual-Pipe**.

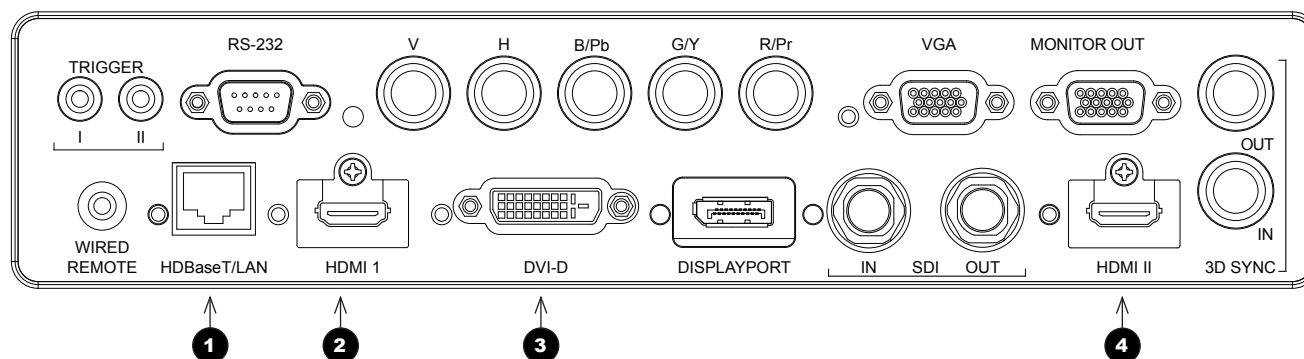

- 1** HDBaseT
- 2** HDMI 1 / Dual Pipe Left
- 3** DVI
- 4** HDMI 2 / Dual Pipe RIGHT

Notes



While the projector can receive 100/120Hz and display 3D at 100/120Hz, video processing is limited to 60Hz.

This also applies to Dual Pipe 3D at 60 Hz per input.

3D Sync

3D Sync in



Sync input signal.

- Connect the 3D sync from your graphics card or server.

3D Sync out

Sync output signal. This may be affected by the **Sync Offset** setting in the **3D Control** menu.

Connect this to your IR emitter or ZScreen.

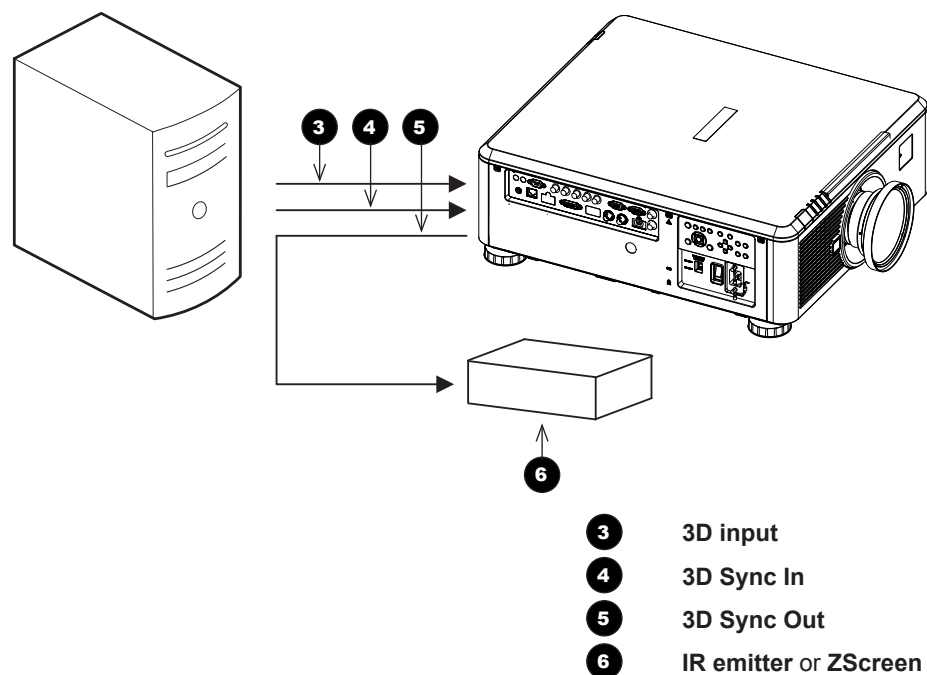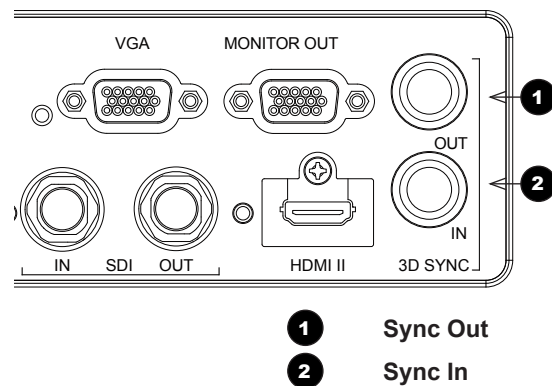

Notes

Control Connections

1 Trigger 1 & Trigger 2

The Trigger outputs are activated by one of the three following conditions, as set in the **Setup** menu:

- Screen trigger: can be connected to an electrically operated screen, automatically deploying the screen when the projector starts up, and retracting the screen when the projector shuts down.
- Aspect ratio trigger: can be used to control screen shuttering for different aspect ratios.
- RS232 trigger: can be used to control the screen or screen shuttering on receipt of an RS232 command

2 RS232


- All of the projector's features can be controlled via a serial connection, using commands described in the **Protocol Guide**.
- Use a straight-through cable to connect directly to a computer.

4 Wired Remote

The remote control can be connected using a standard 3.5 mm mini jack cable (tip-ring-sleeve, or TRS).

5 HDBaseT/LAN

The projector's features can be controlled via a LAN connection, using Digital Projection's **Projector Controller** application or a terminal-emulation program.

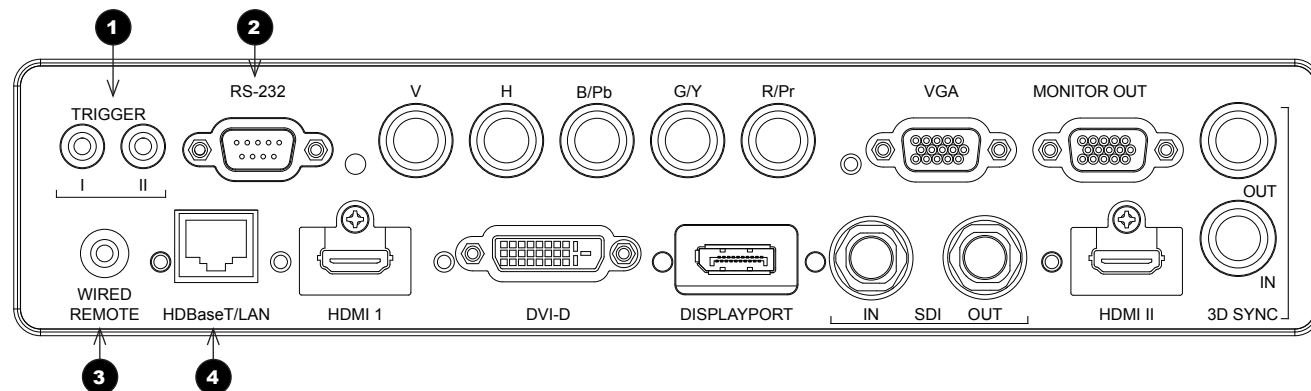

Notes

 For a list of all commands used to control the projector via LAN, see the **Protocol Guide**.

 Only one remote connection (RS232 or LAN) should be used at any one time.




 With a LAN connection the projector can serve a web page offering basic projector controls.

 **Projector Controller** is available for download, free of charge, from the Digital Projection website.

 For simultaneous HDBaseT and LAN connectivity, a third-party distribution product can be utilised to combine HDBaseT video stream with LAN connection for delivery to the projector.

LAN connection examples

The projector's features can be controlled via a LAN connection, using Digital Projection's **Projector Controller** application or a terminal-emulation program

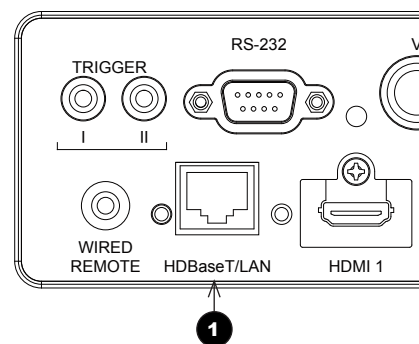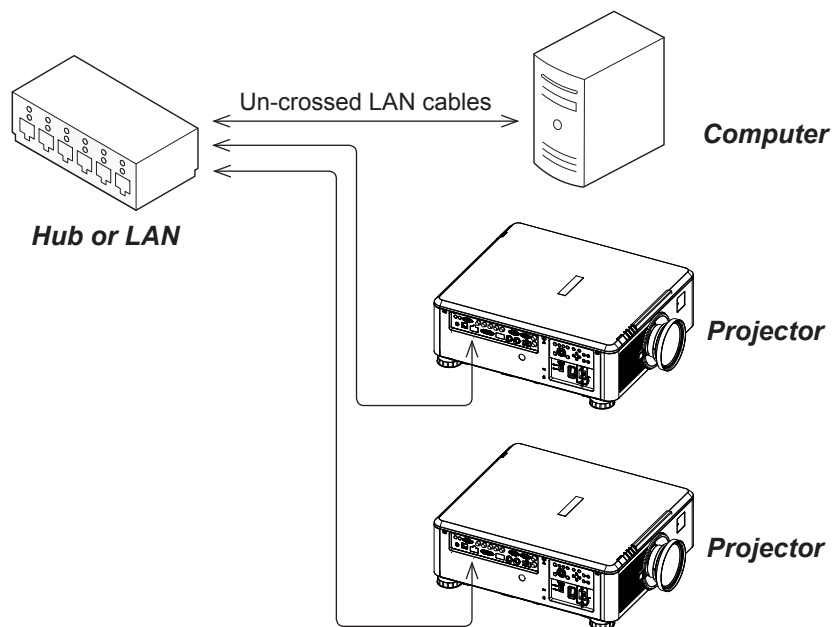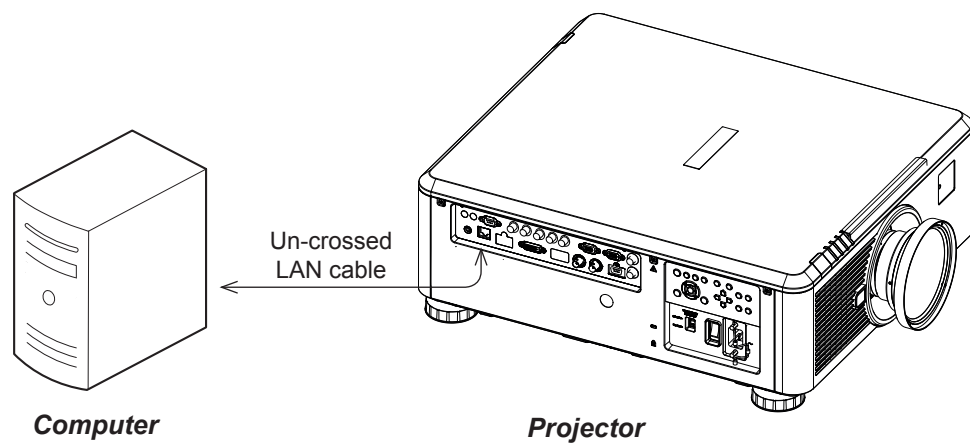



1 LAN

Notes

-  With a LAN connection the projector can serve a web page offering basic projector controls.
-  **Projector Controller** is available for download, free of charge, from the Digital Projection website.
-  For simultaneous HDBaseT and LAN connectivity, a third-party distribution product can be utilised to combine HDBaseT video stream with LAN connection for delivery to the projector.

RS232 connection example

All of the projector's features can be controlled via a serial connection, using commands described in the **Protocol Guide**.

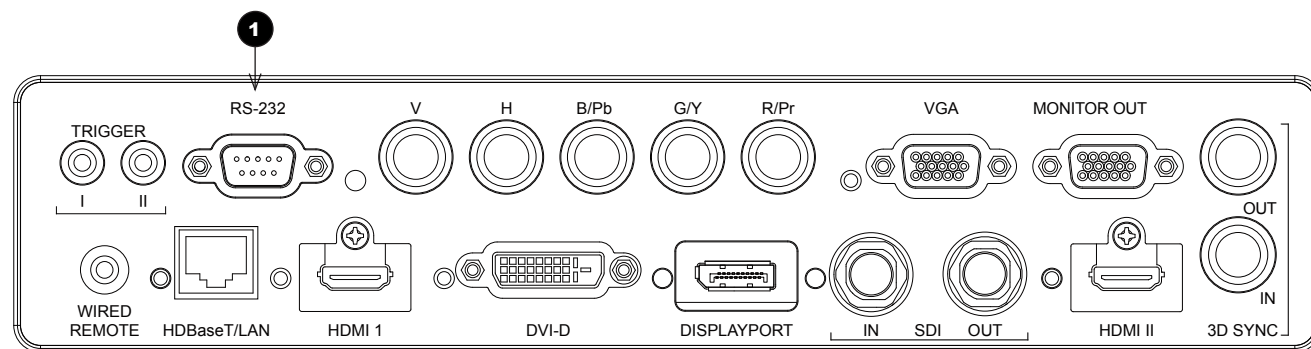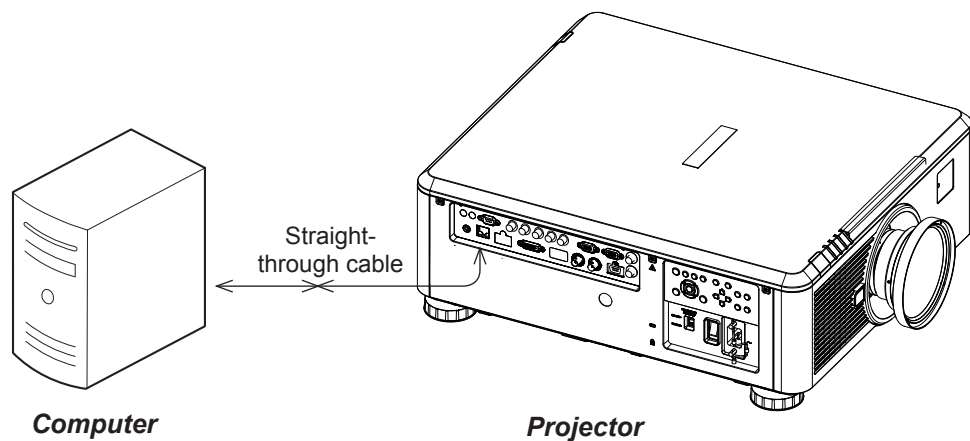

1 RS232

Notes

 The **Protocol Guide** is available separately.



E-Vision Laser 7500 Series

E-Vision Laser 8500 Series

High Brightness Digital Video Projector

▶ OPERATING GUIDE



IN THIS GUIDE

Using The Menus.....	29		
Opening the OSD	29		
Opening a menu	29		
Exiting menus and closing the OSD	29		
Inside a menu	30		
Accessing sub-menus	30		
Executing commands.....	30		
Editing projector settings.....	31		
Using a slider to set a value	31		
Editing numeric values	31		
Using The Projector	32		
Main menu	32		
Lens menu	33		
Lens Control.....	33		
Lens Memory	34		
Image menu	35		
Noise Reduction.....	36		
Position and Phase	36		
Color menu	37		
Color Space	37		
Color Mode	38		
Geometry menu	43		
Aspect Ratio.....	43		
Digital Zoom & Shift	45		
Overscan.....	46		
Blanking	47		
Keystone	48		
4 Corners	50		
Rotation.....	51		
		Pincushion / Barrel.....	52
		Edge Blend menu.....	53
		Blend Width.....	54
		Black Level Uplift	55
		3D menu	56
		3D types	57
		Some 3D settings explained	58
		Frame rate multiplication in 3D images.....	59
		Laser menu	60
		Setup menu.....	61
		ColorMax Setting	63
		Power On/Off	64
		Clock Adjust	65
		OSD Settings	66
		Memory	66
		Network menu	67
		PIP menu	68
		Information menu.....	69
		Signal Format.....	69
		System Status	70
		Thermal Status.....	70
		Factory Reset.....	71
		Possible Combinations Of Settings	72

Using The Menu

Opening the OSD

Access the various menus using either the projector control panel or the remote control. On either device,

- press the **MENU** button.

The on-screen display (OSD) opens showing the list of available menus.

Opening a menu

Move up and down the list using the **UP▲** and **DOWN▼** arrow buttons. To open a menu,

- press **ENTER** on the control panel or **OK** on the remote control.

This guide refers to the above two buttons as **ENTER/OK**.

Exiting menus and closing the OSD


To go back to the previous page,

- press **EXIT**.


When you reach the top level, pressing **EXIT** will close the OSD.

To close the OSD from any page,


- press **MENU**.

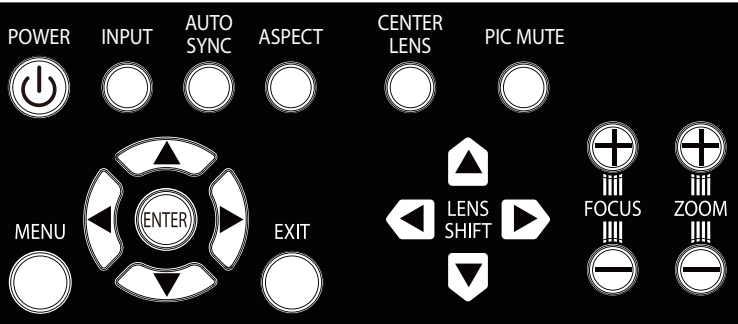


Projector control panel

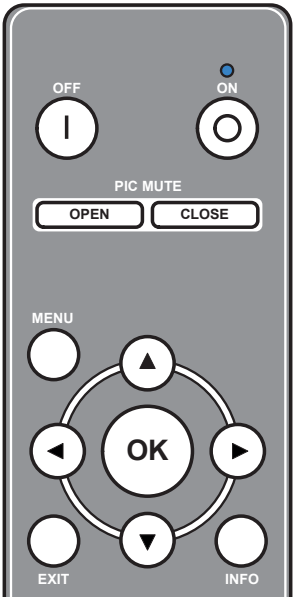

Remote control

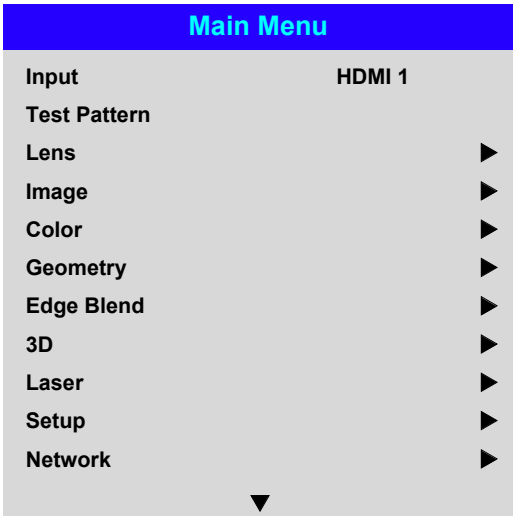

On-screen display (OSD): top level menus

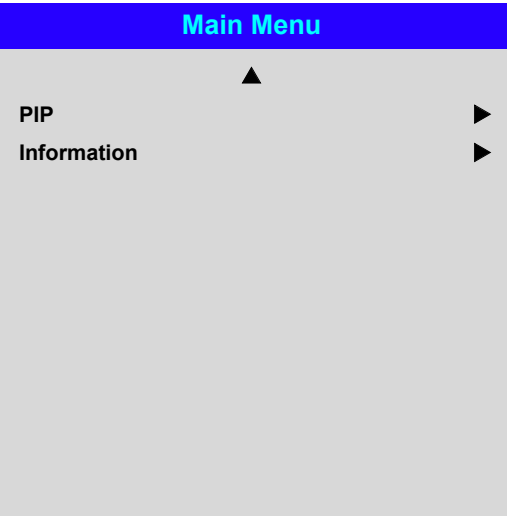

Notes

Inside a menu

When you open a menu, the page consists of the following elements:

- Title bar at the top
Shows which menu you have accessed.
- Highlighted item
- Available and unavailable items
Unavailable items appear a pale gray color. Whether an item is available may depend on other settings.
- The text or symbol to the right of an item shows whether the item:
 - has a value that can be changed (the current value is shown)
 - opens a sub-menu (an arrow button ► is displayed)
 - executes a command (the space to the right of the item is blank).

Accessing sub-menus

Use the **UP ▲** and **DOWN ▼** arrow buttons to highlight the sub-menu, then press **ENTER/OK**.

Executing commands

If the item contains a command, highlighting it reveals an **OK** button.

Press **ENTER/OK** to execute the highlighted command.

You may be asked for confirmation. Use the **ENTER/OK** to confirm, or **EXIT** to cancel.

Menu Name	
Highlighted Item	Value
Menu Item	Value
Unavailable Item	Value
Slider	Value
Sub-menu	►
Command	

Inside a menu

Menu Name	
Menu Item	Value
Highlighted Command	OK

Highlighted command

Command Name
WARNING All [Menu] values will be lost.
Press OK to confirm Press Exit to cancel

Confirmation dialog

Notes



The highlighted item has green background.

Editing projector settings

If the highlighted menu item contains a list of values to choose from, you can change the value by doing the following:

- 1. Highlight the menu item and press **ENTER/OK**.
- 2. In the list of values that opens, use the **UP ▲** and **DOWN ▼** arrow buttons to highlight a value, then press **ENTER/OK** again to select the highlighted value.

Using a slider to set a value

Some parameters open a slider. To set such a parameter:

- 1. Press the **LEFT ◀** or **RIGHT ▶** arrow button, or **ENTER/OK**.
The arrow buttons will open the slider and adjust the value at the same time. **ENTER/OK** will open the slider without altering the initial value.
- 2. Use the **LEFT ◀** and **RIGHT ▶** arrow buttons to move the slider.
- 3. When ready, press **EXIT** to exit the slider and return to the menu, or press **MENU** to exit the slider without showing the menu again.

Editing numeric values

Some parameters take numeric values without using sliders - for example, color matching values or IP addresses.

- 1. Use the **UP ▲** and **DOWN ▼** arrow buttons to highlight the row containing the numeric field you wish to edit.
- 2. Press **ENTER/OK** to enter edit mode. A numeric field in edit mode is white text on blue background.
- 3. In edit mode:
 - Use the **UP ▲** arrow button to increase the numeric value.
 - Use the **DOWN ▼** arrow button to decrease the numeric value.
- 4. Use the **LEFT ◀** and **RIGHT ▶** arrow buttons to edit the next or previous numeric fields within the same row.
- 5. Once ready, press **ENTER/OK** to exit edit mode.

Menu Name	
Highlighted Item	Current Value
Menu Item	Highlighted Value
Menu Item	Value
	Value
	Value

List of values

Parameter	Value

Slider

Data		
Row	x: 0.658	y: 0.339
Highlighted Row	x: 0.315	y: 0.662
Row	x: 0.146	y: 0.043
Row	x: 0.276	y: 0.283

Numeric values

Notes



Some menu items may be unavailable due to settings in other menus. Unavailable menu items appear gray.

Using The Projector

Main menu

- **Input**
Press **ENTER/OK** to open the list of available inputs.

Use the **UP ▲** and **DOWN ▼** arrow buttons to select an input from the list, then press **ENTER/OK** to confirm your choice.

Press **EXIT** to return to the main menu.
- **Test Pattern**
Choose from:



...Off, White, Black, Red, Green, Blue, CheckerBoard, CrossHatch, V Burst, H Burst, ColorBar...

Use the **LEFT ◀** and **RIGHT ▶** arrow buttons to switch between values.
- **Lens, Image, Color, Geometry, Edge Blend, 3D, Laser, Setup and Network**
Press **ENTER/OK** to open these menus and access various settings.

Press the **DOWN ▼** arrow at the bottom of the page to access additional menus:

- **PIP and Information**
Press **ENTER/OK** to open these menus and access various settings.

Press the **UP ▲** arrow to return to the previous page.

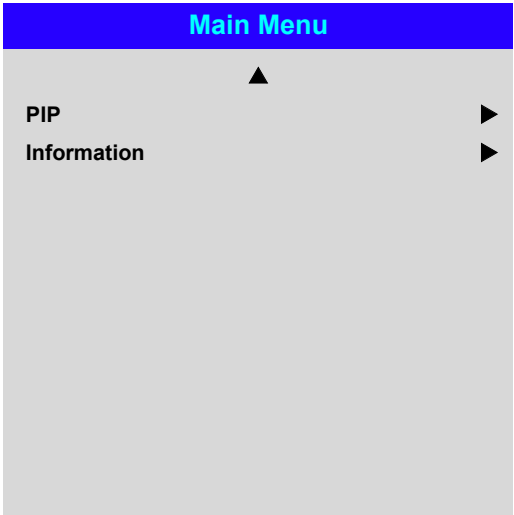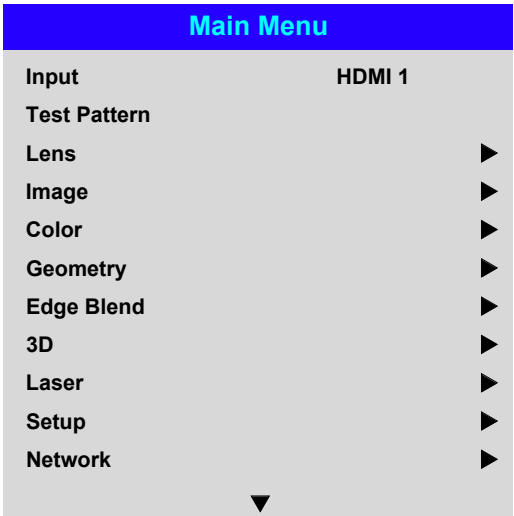

Main menu, page 1 and 2

Notes

-  See [Signal Inputs](#) in the **Connection Guide** for further information about the available inputs and connections.
-  Selecting a test pattern hides the OSD. Press **EXIT** to hide the test pattern, and then press **MENU** to show the OSD.

Lens menu

- **Lens Lock**
When this feature is **On**, all other **Lens** menu items are disabled.
- **Lens Control**
Opens a sub-menu, see below.
- **Center Lens**
Centers the lens.
- **Lens Type**
Choose a UST or a non-UST lens.
- **Lens Memory**
Opens a sub-menu, see next page.




Lens Control

Lens Control settings operate in **Zoom/Focus Adjustment** and **Shift Adjustment** mode. Press **ENTER/OK** to switch between modes.

When in **Zoom/Focus Adjustment** mode:

- Use the **UP ▲** and **DOWN ▼** arrow buttons to adjust **Zoom**.
- Use the **LEFT ◀** and **RIGHT ▶** arrow buttons to adjust **Focus**.

When in **Shift Adjustment** mode, use the arrow buttons to adjust **Shift**.

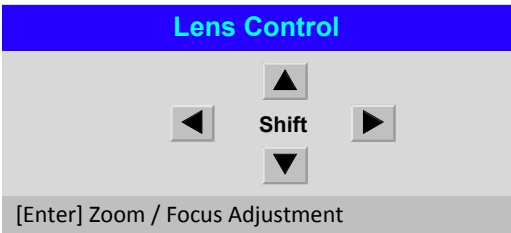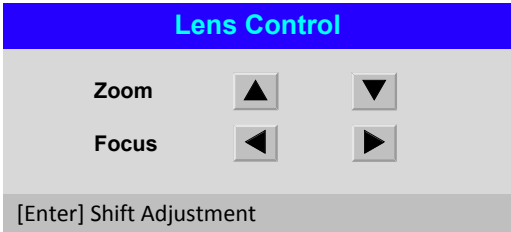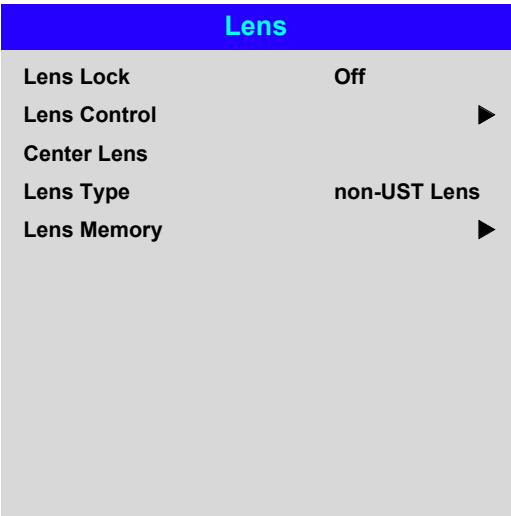

Notes


Lens menu continued from previous page

Lens Memory

This menu allows you to load, save and delete up to ten lens presets, containing position, zoom, focus and shift adjustment information.

For example, if using different screen sizes and aspect ratios, you can save zoom, focus and positioning for each screen size and aspect ratio in a dedicated preset.

Use **Clear Memory** to delete a memory preset if you need to save a new combination of lens settings in its place. Overwriting a saved memory preset is not possible.

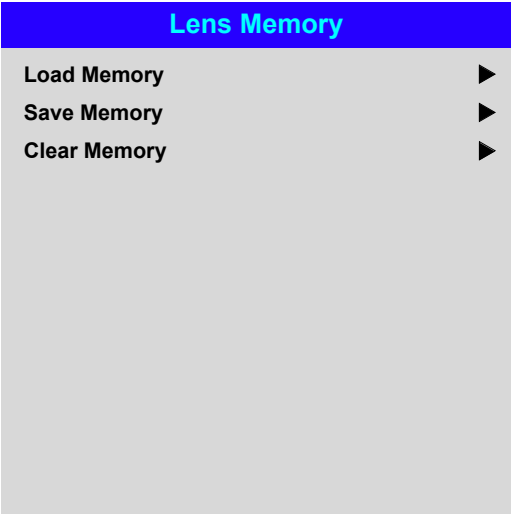

Notes

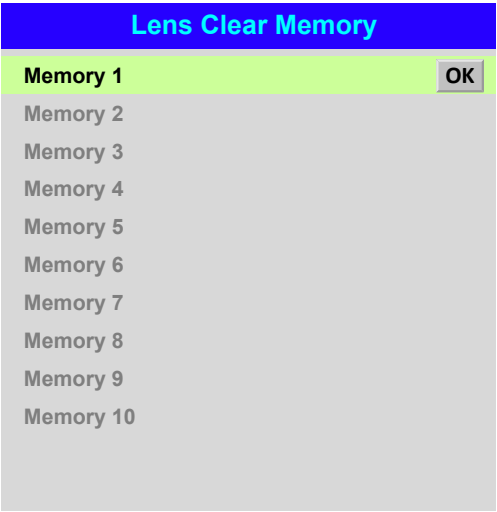
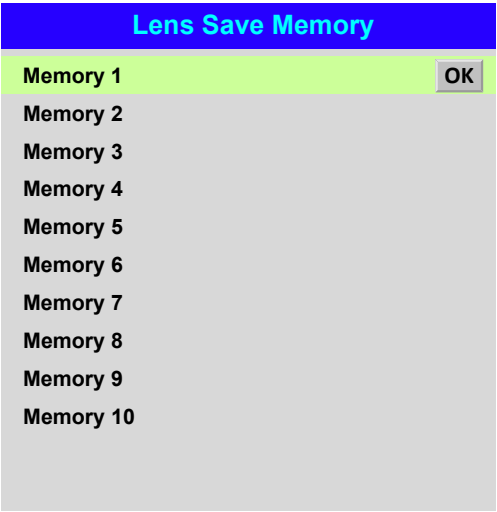
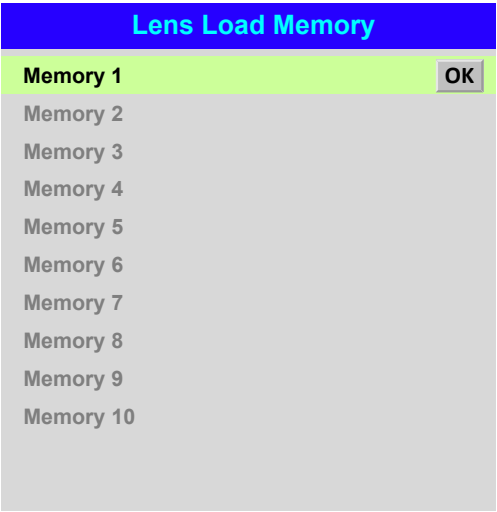


Image menu

- Picture Mode**
Choose from **High Bright**, **Presentation** and **Video**.
Use a different setting depending the type of input source.
Press **ENTER/SELECT** to open the list.
Use the **UP ▲** and **DOWN ▼** arrow buttons to select a picture mode from the list, then press **ENTER/OK** to confirm your choice.
Press **EXIT** to return to the main menu.
- Dynamic Black**
Set to **On** to allow for increased contrast in darker scenes by modulating the light source.
- Gamma**
Choose a de-gamma curve from **1.0**, **1.8**, **2.0**, **2.2**, **2.35**, **2.5**, **S-Curve** and **DICOM**.
Used correctly, the **Gamma** setting can improve contrast while maintaining good details for blacks and whites.
If excess ambient light washes out the image and it is difficult to see details in dark areas, lower the **Gamma** setting to compensate. This improves contrast while maintaining good details for blacks. Conversely, if the image is washed out and unnatural, with excessive detail in black areas, increase the setting.
S-Curve is an enhanced mid-tone gamma.
DICOM is a simulated DICOM display, which can be used for training applications.
- Brightness, Contrast, Saturation, Hue, Sharpness**
Highlight the setting you wish to edit, and then press **ENTER/OK**, or the **LEFT ◀** or **RIGHT ▶** arrow button to open the slider.
Use the **LEFT ◀** and **RIGHT ▶** arrow buttons to adjust the slider.
Press **EXIT** to close the slider and return to the menu, or **MENU** to close the slider and return to the projected image.
- Noise Reduction, Position and Phase**
These items open sub-menus, see next page.
- Freeze**
Freezes the current frame.
- Resync**
Press **ENTER/OK** to force the projector to resynchronise with the current input.

Image	
Picture Mode	High Bright
Dynamic Black	Off
Gamma	2.2
Brightness	100 
Contrast	100 
Saturation	100 
Hue	100 
Sharpness	10 
Noise Reduction	
Position and Phase	
Freeze	
Resync	

Brightness	100 
------------	---


Notes

 Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.


 **Noise Reduction and Position and Phase** are only available when the projector is connected to an analog VGA source.

*Image menu continued from previous page***Noise Reduction**

- **Temporal**
A time-based filter that removes the noise on the luminance component.
- **Block**
This filter helps reduce block noise, which appears like small blocks in the image and is caused by MPEG compression.
- **Mosquito**
This filter helps reduce mosquito noise, which appears around the edges of the image and is caused by the image compression algorithm.
- **Horizontal, Vertical**
These filters soften the image.
- **Reset**

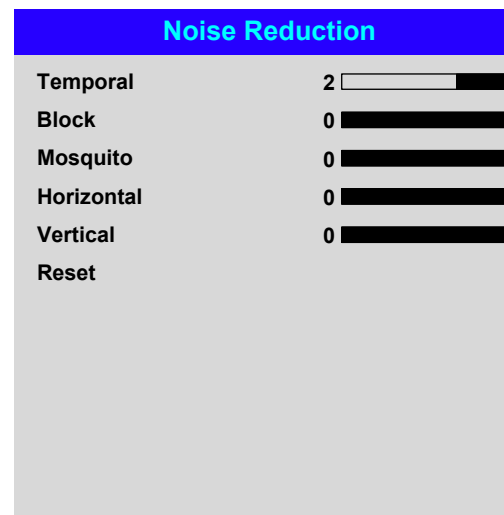**Position and Phase**

- **V Position and H Position**
Set the sliders as required.
 - **Phase**
Adjusts the phase of the pixel sampling clock relative to the incoming signal. Adjust the phase if noise is visible.
 - **Tracking**
Adjusts the frequency of the pixel sampling clock. Flicker or vertical banding indicate poor tracking.
 - **Sync Level**
Adjusts the voltage level of the signal detection circuitry. Adjust if the projector loses sync during scenes where the signal drops below black.
- Highlight the setting you wish to edit, and then press **ENTER/OK**, or the **LEFT** ◀ or **RIGHT** ▶ arrow button to open the slider.
- Use the **LEFT** ◀ and **RIGHT** ▶ arrow buttons to adjust the slider.
- Press **EXIT** to close the slider and return to the menu, or **MENU** to exit both the slider and the menu.

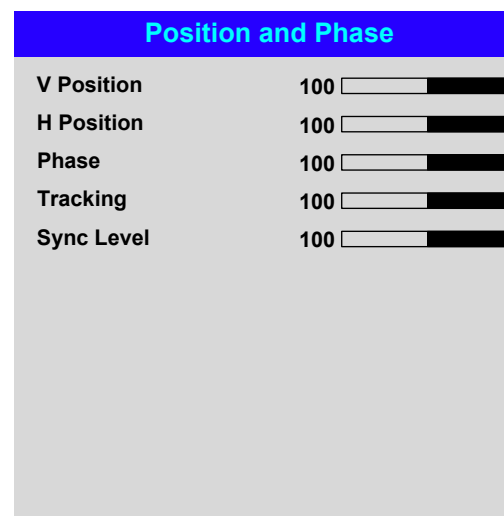**Notes**

Some of the settings within the **Position and Phase** sub-menu, **Phase, Tracking and Sync Level**, affect only VGA input source. These settings are not available if the projector is using a different source.

Adjust the **Phase** after adjusting **Tracking**.

Color menu

Color Space

In most cases, the **Auto** setting determines the correct colorspace to use. If it does not, you can choose a specific colorspace:

Choose from **Auto**, **YPbPr**, **YCbCr**, **RGB PC** and **RGB Video**.

Color	
Color Space	Auto
Color Mode	ColorMax
ColorMax	Peak
Manual Color Matching	▶
Color Temperature	Native
Gains and Lifts	▶

Color	
Color Space	Auto
Color Mode	Auto
ColorMax	YPbPr
Manual Color Matching	YCbCr
Color Temperature	RGB PC
Gains and Lifts	RGB Video

Notes

Color Mode

The projector can work in the following color modes: **ColorMax**, **Manual Color Matching**, **Color Temperature** and **Gains and Lifts**.

ColorMax

- 1. Set **Color Mode** to **ColorMax**.
- 2. Navigate to the **ColorMax** setting. Choose from **HDTV**, **Peak**, **User 1** and **User 2**.

User 1 and **User 2** are user-defined color gamuts set via the **Setup > ColorMax** menu.

Color	
Color Space	Auto
Color Mode	ColorMax
ColorMax	ColorMax
Manual Color Match	Manual Color Matching
Color Temperature	Color Temperature
Gains and Lifts	Lifts and Gains

Color	
Color Space	Auto
Color Mode	ColorMax
ColorMax	Peak
Manual Color Matching	HDTV
Color Temperature	Peak
Gains and Lifts	User 1
	User 2

Notes

 Only one color mode can be selected at a time. Settings used by the other color modes are disabled.

 See [Setup menu](#) for further information about setting up the **User 1** and **User 2** color gamuts.

Color menu continued from previous page

Manual Color Matching

- 1. Set **Color Mode** to **Manual Color Matching**.
- 2. Open the **Manual Color Matching** submenu.

Here you can do the following:

- Switch **Auto Test Pattern** **On** and **Off**.
- Adjust **Hue**, **Saturation** and **Gain** settings for each individual color to improve the color balance of the projected image.
- Adjust white balance RGB values.
- Reset all values.

Manual Color Matching

Auto Test Pattern

Off

Red

Green

Blue

Yellow

Cyan

Magenta

White Balance

Reset

Manual Color Matching — Red

Hue

100

Saturation

100

Gain

100

Manual Color Matching — White

Red

100

Green

100

Blue

100

Notes




For more details about the **Hue**, **Saturation** and **Gain** settings, see [Color matching parameters explained](#) further in this guide.

Color menu continued from previous page**Color matching parameters explained**

The levels of hue, saturation and gain in the **Manual Color Matching** menu change the color values in the following ways:

- 1 Hue**
Specifies the position of each color (*red, yellow, green, cyan, blue* and *magenta*) relative to its neighboring colors.
- 2 Saturation**
Specifies the level of white in each color (i.e. how "pale" each color is).
- 3 Gain**
Controls the amount of light that goes into each color, i.e. the lowest gain would produce black.

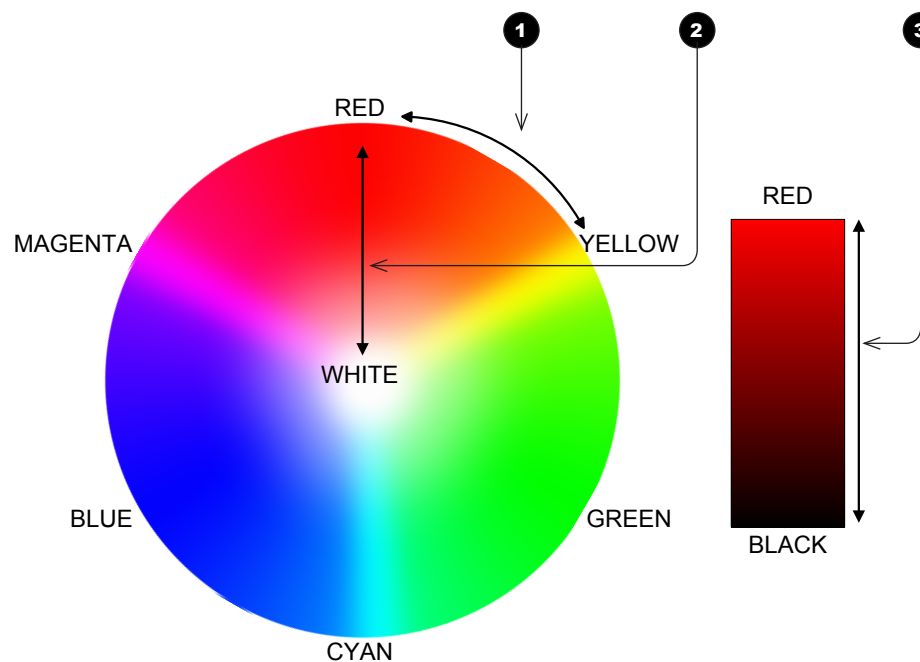**Notes**

Color menu continued from previous page**Color Temperature**

1. Set **Color Mode** to **Color Temperature**.
2. Navigate to the **Color Temperature** setting. Choose a value from **3200K** (warmer) to **9300K** (cooler) or **Native** (no correction).

Color	
Color Space	Auto
Color Mode	Color Temperature
ColorMax	Peak
Manual Color Matching	▶
Color Temperature	Native
Gains and Lifts	3200K
	5400K
	6500K
	7500K
	9300K
	Native

Notes

Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Color menu continued from previous page

Gains and Lifts

Lifts allow you to adjust black levels of individual colors, while gains adjust the bright part of the scale.

Set the sliders as required.

Gains and Lifts

Red Lift

100

Green Lift

100

Blue Lift

100

Red Gain

100

Green Gain

100

Blue Gain

100

Reset

Notes

Geometry menu

This menu allows you to compensate for image distortions caused by an unusual projection angle or irregular screen surface.

Geometry	
Aspect Ratio	Source
Digital Zoom & Shift	▶
Overscan	Off
Blanking	▶
Keystone	▶
4 Corners	▶
Rotation	▶
Pincushion / Barrel	▶
Custom Warp	Off

Notes



Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Aspect Ratio

This feature defines the aspect ratio of the source. Use the Screen Setting feature (Setup menu) to define the screen aspect ratio.

If you choose a preset aspect ratio from here, it will give you the best fit for your selection.

Choose from:

- **5:4**
- **4:3**
- **16:10**
- **16:9**
- **1.88**
- **2.35**
- **TheaterScope**
- **Source**
- **Unscaled**




See next page for further information about the TheaterScope aspect ratio.


Theaterscope setting

The **TheaterScope** setting is used in combination with an anamorphic lens to restore 2.35:1 images packed into a 16:9 frame. Such images are projected with black lines at the top and bottom of the 16:9 screen to make up for the difference in aspect ratios.


Without an anamorphic lens and without the TheaterScope setting applied, a 16:9 source containing a 2.35:1 image looks like this:

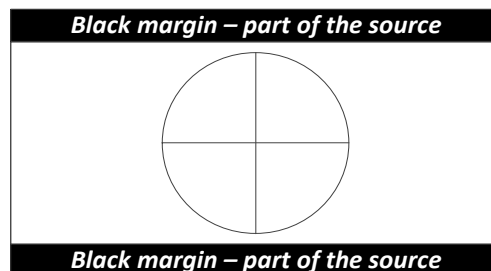

If we change the setting to **TheaterScope**, the black lines will disappear but the image will stretch vertically to reach the top and bottom of the DMD™:

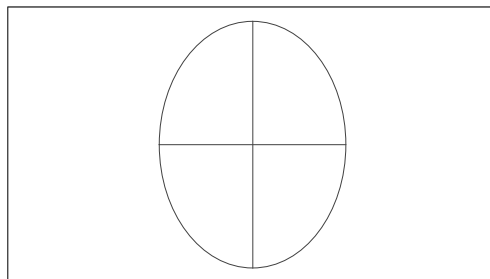

An anamorphic lens will stretch the image horizontally, restoring the original 2.35 ratio:

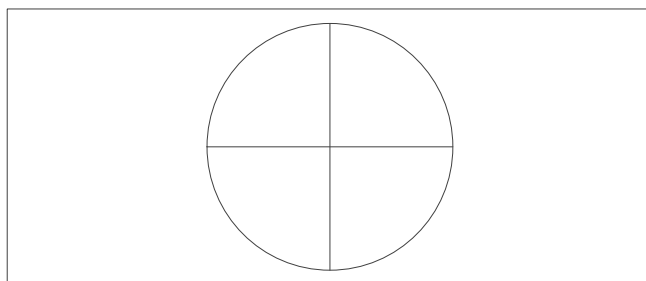**Notes**

TheaterScope is used with an anamorphic lens.




If you use TheaterScope, set your screen aspect ratio to 16:9.

.Geometry menu continued from previous page

Digital Zoom & Shift

Digital zooming enlarges a section of the image, while the area outside the enlarged section is cropped out to preserve the overall image size.

- **Digital Zoom** defines the level of zoom that needs to be applied. If **Digital Zoom** is set to **0**, then the other settings in the menu will be disabled.
- **Digital Pan** and **Digital Scan** specify the area that is being enlarged:
 - **Digital Pan** adjusts the horizontal coordinates.
 - **Digital Scan** adjusts the vertical coordinates.

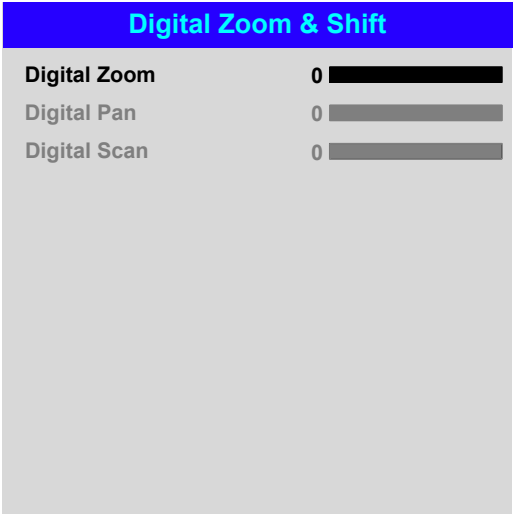

Notes



Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Geometry menu continued from previous page

Overscan

Use this setting to compensate for noisy or badly defined image edges.

Crop removes unwanted artifacts from the edges of your image by cropping the edges.

Zoom increases the size of the image to force the edges off-screen.

Geometry	
Aspect Ratio	Source
Digital Zoom & Shift	▶
Overscan	Off
Blanking	Off
Keystone	Crop
4 Corners	Zoom
Rotation	▶
Pincushion / Barrel	▶
Custom Warp	Off

Notes

 Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.


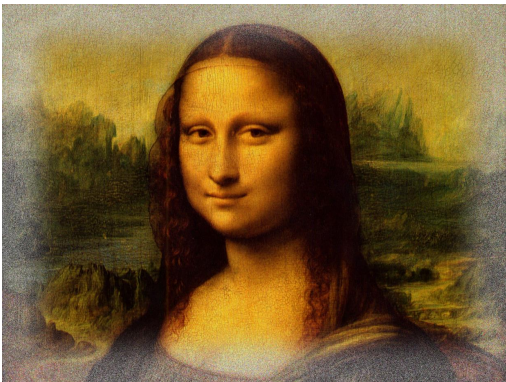


Image with noisy edges

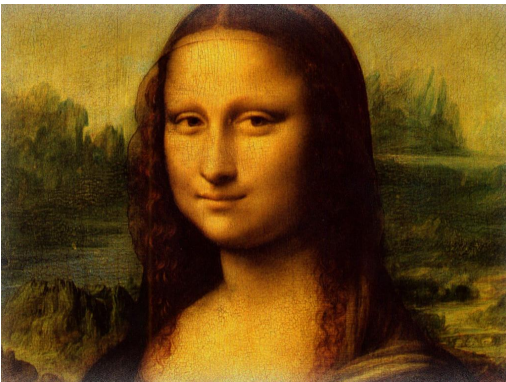

Overscanned image

Geometry menu continued from previous page

Blanking

Use this feature to:

- fit an odd-sized screen;
- cut off timecode dots in the top line of a picture;
- cut off subtitles, etc.

Select the edge you wish to blank and use the **LEFT** ◀ and **RIGHT** ▶ arrow buttons to determine the amount of correction.

Use the **Reset** command to restore blanked edges.


Blanking	
Top	0
Bottom	0
Left	0
Right	0
Reset	

Notes

 Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Geometry menu continued from previous page**Keystone**



Use this setting to compensate for any distortion caused by the projector being in a different horizontal or vertical plane to the screen.

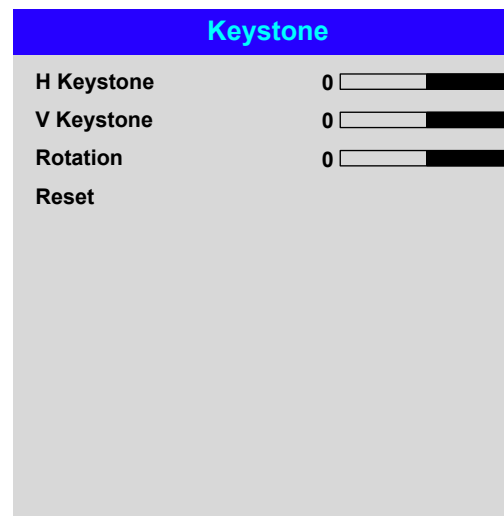**Notes**

Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.


Keystone example

- 1 The projector is positioned at an angle
- 2 The resulting image is distorted
- 3 The image is corrected when Keystone is applied

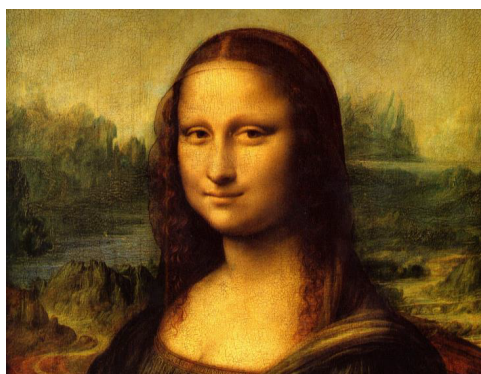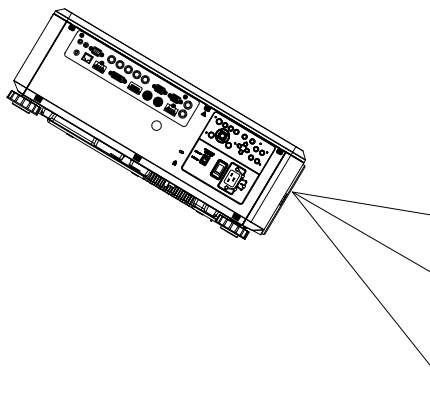

Geometry menu continued from previous page**Keystone settings**

- 1 Projector to the left**
The projector is positioned to the left of the screen.
To correct, apply a positive **Horizontal Keystone** value using the **RIGHT** arrow button.
- 2 Projector to the right**
The projector is positioned to the right of the screen.
To correct, apply a negative **Horizontal Keystone** value using the **LEFT** arrow button.
- 3 Projector high**
The projector is positioned above the screen at a downward angle.
To correct, apply a negative **Vertical Keystone** value using the **DOWN** arrow button.
- 4 Projector low**
The projector is positioned below the screen at an upward angle.
To correct, apply a positive **Vertical Keystone** value using the **UP** arrow button.
- 5 Projector straight**
The projector is directly opposite the screen at a right angle both horizontally and vertically.
No correction is needed.

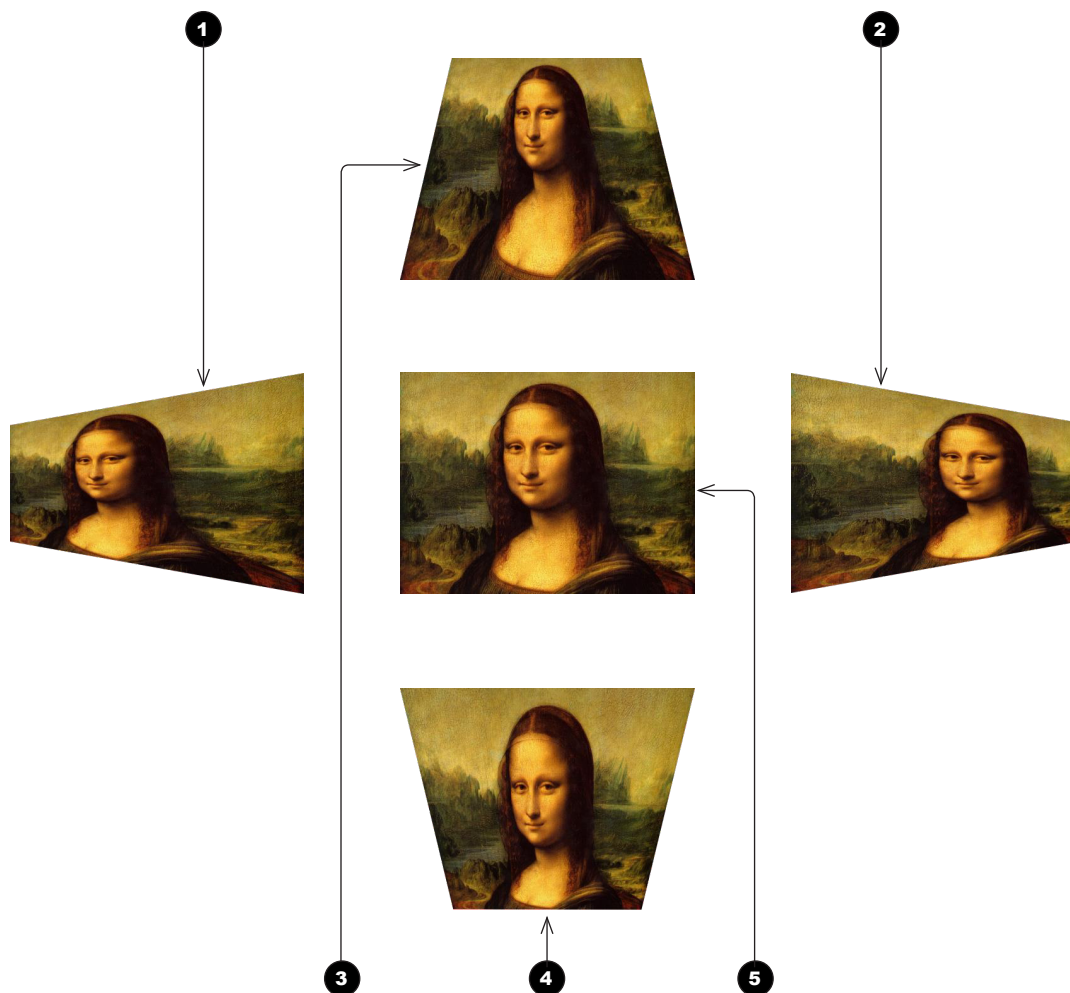**Horizontal and vertical keystone corrections****Notes**

Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.


Geometry menu continued from previous page

4 Corners

For each corner, apply horizontal and / or vertical correction as necessary to restore the rectangular shape of the image.

Top Right Corner example

In this illustration, the top right corner requires both horizontal and vertical correction.

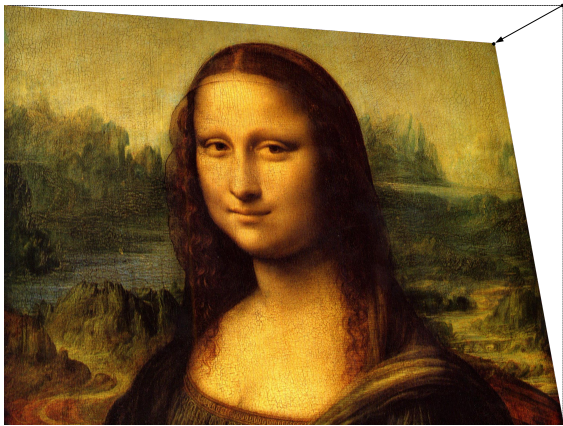

Top Right Corner correction

4 Corners

Top Left Corner

▶

Top Right Corner

▶

Bottom Left Corner

▶

Bottom Right Corner

▶

Reset

Top Right Corner Adjustment

Top Right Corner x

◀ 0 ▶

Top Right Corner y

▲ 0 ▼

Notes

- 

Corner corrections provide a simple setup for awkward installations and irregular shaped screens that may distort the image. To apply a similar (but less flexible) correction, while preserving the original aspect ratio of the image, use the **Keystone** menu.
- 



Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Geometry menu continued from previous page**Rotation**

Use this feature for example to correct a mounting error causing the image not to be level with the screen.

Rotation example

- 1 DMD™ area**
The DMD™ is not rotated. It still covers the area that would be occupied by the image without correction.
- 2 Rotated image**
The image is smaller than the surrounding DMD™ area. It is scaled in order to remain within the DMD™ area.
- 3 Angle of rotation**
The angle equals a quarter of the **Rotation** setting.
In this example the angle is 5°, therefore **Rotation = 20**.

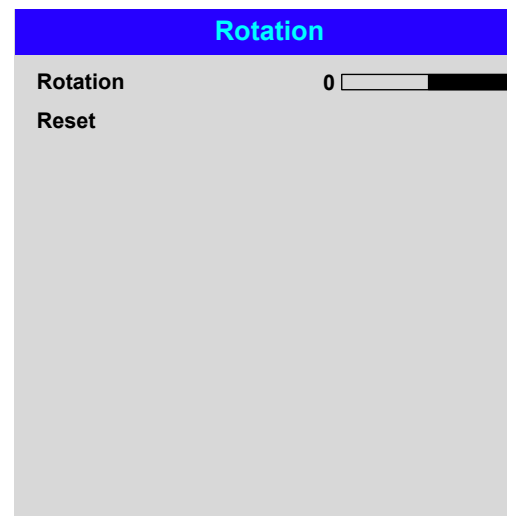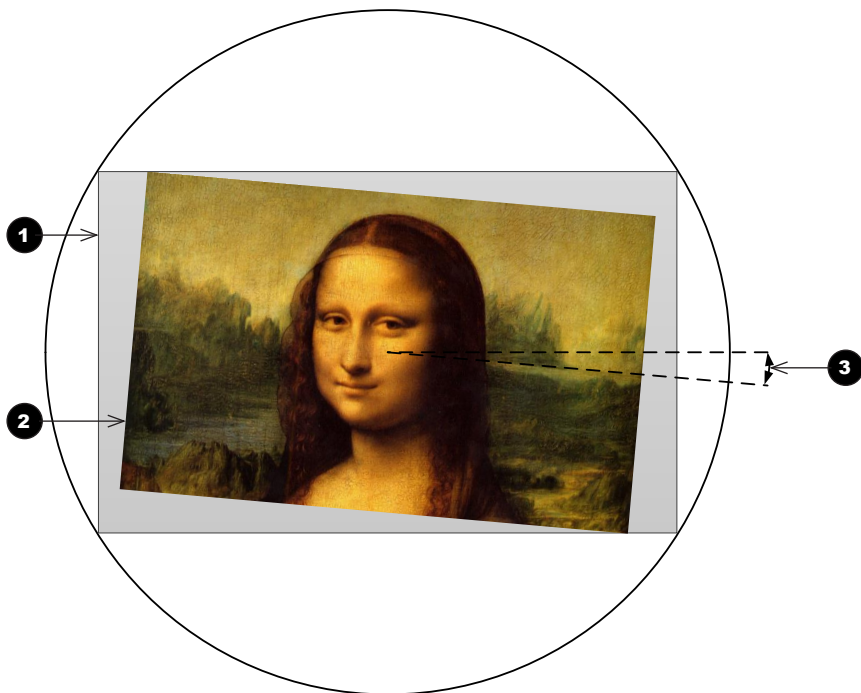**Notes**


Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Geometry menu continued from previous page**Pincushion / Barrel**

Pincushion or barrel distortions are the result of poor or incorrect tensioning of the screen or using a surface that is not flat.

Use the **Pincushion / Barrel** control to compensate electronically for such distortions.


You can also use this menu to make simple panoramic screen corrections without using external processors.

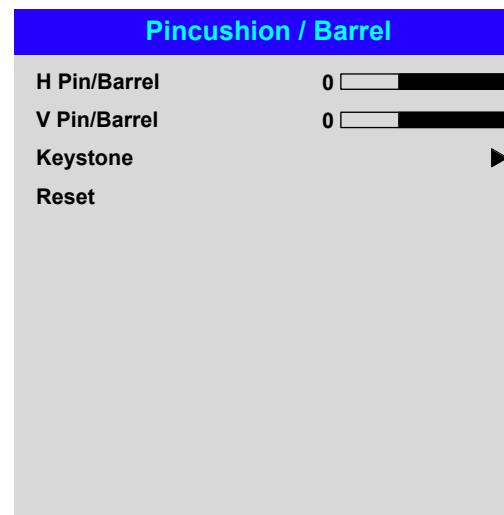**Notes**


Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Pincushion / Barrel example

The illustration shows pincushion and barrel correction applied both horizontally and vertically, in equal measures.

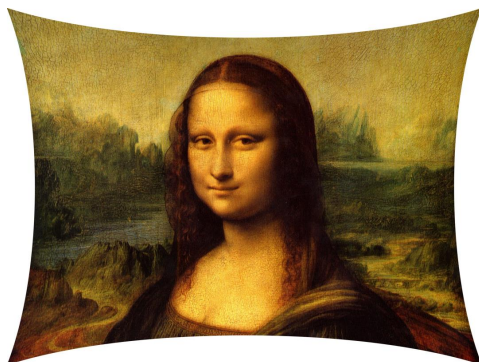

Pincushion

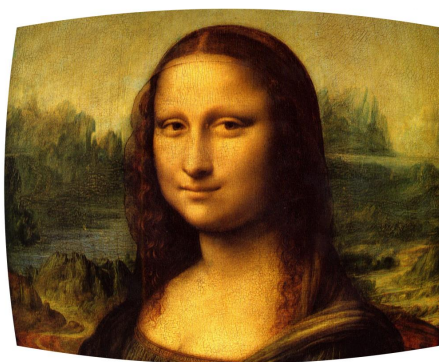

Barrel

Edge Blend menu

Use this menu to blend together images from an array of two or more projectors.

The feature feathers the light output of the projector within the edges that overlap with other projectors in the array: as a result, the overlapping edges are evenly lit and easily blend in with the rest of the image.

- **Edge Blend**
Enable and disable **Edge Blend**
- **Align Pattern**
Add markers to the image showing the edges of the blend area and making the overlaps more visible to help adjust the physical position of the projectors in the array.
- **Blend Width**
Determine the width of the blended regions.
- **Black Level Uplift**
Adjust black levels to compensate if the blended regions appear brighter than the rest of the image.
- **Reset**
Reset all **Edge Blend** settings to their factory default values.

Edge Blend	
Edge Blend	On
Align Pattern	Off
Blend Width	▶
Black Level Uplift	▶
Reset	


Notes

-  When **Edge Blend** is set to **Off**, all other edge blend settings are disabled.
-  The picture in the blend region needs to be delivered to all overlapping projectors, which may require a special setup of the source.
-  Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Edge Blend menu continued from previous page

Blend Width

Use the **LEFT** ◀ and **RIGHT** ▶ arrow buttons to set the width of the blended regions:

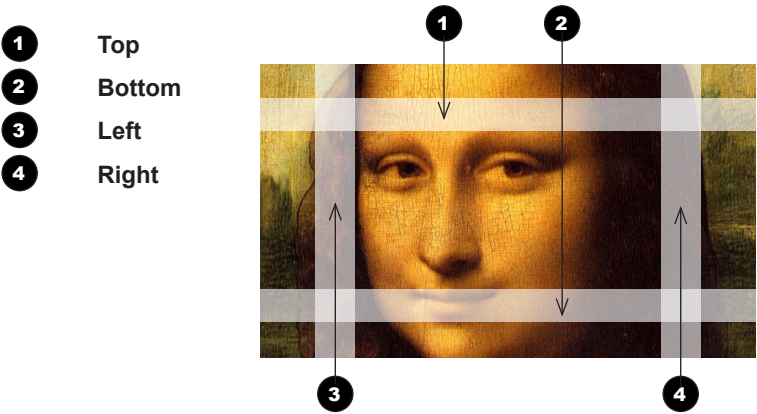

Blend Width		
Top	0	
Bottom	0	
Left	0	
Right	0	

Notes

 Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Edge Blend menu continued from previous page**Black Level Uplift**


Black in the blended regions appears less dark than in the rest of the image. To compensate for this, use this menu to raise the black levels of the rest of the image:

- Set **All** to the required amount of black level correction. This will apply equal correction to the black levels of all colors.
- If necessary, use the individual color sliders (**Red**, **Green** and **Blue**) for fine adjustment.

You may experience artifacts at the edges where the blended region of one projector overlaps the **pond of mirrors** of its neighbor. In the example below, the blended image comes from **two projectors**, **1** and **2**. Both images have black level uplift applied; as a result, **artifacts 3** and **4** have emerged at the edges where the black level uplift region of one projector overlaps the pond of mirrors of the other.

To remove the artifacts, you need to slightly reduce the size of the black level uplift region of each projector so it does not overlap the pond of mirrors of the other projector.

- Depending on your array, use **Top**, **Bottom**, **Left** and/or **Right** to reduce the black level uplift size. In the example below, use the **Right** slider of the **projector on the left 1** to remove the **artifact on the right 4**, and the **Left** slider of the **projector on the right 2** to remove the **artifact on the left 3**.

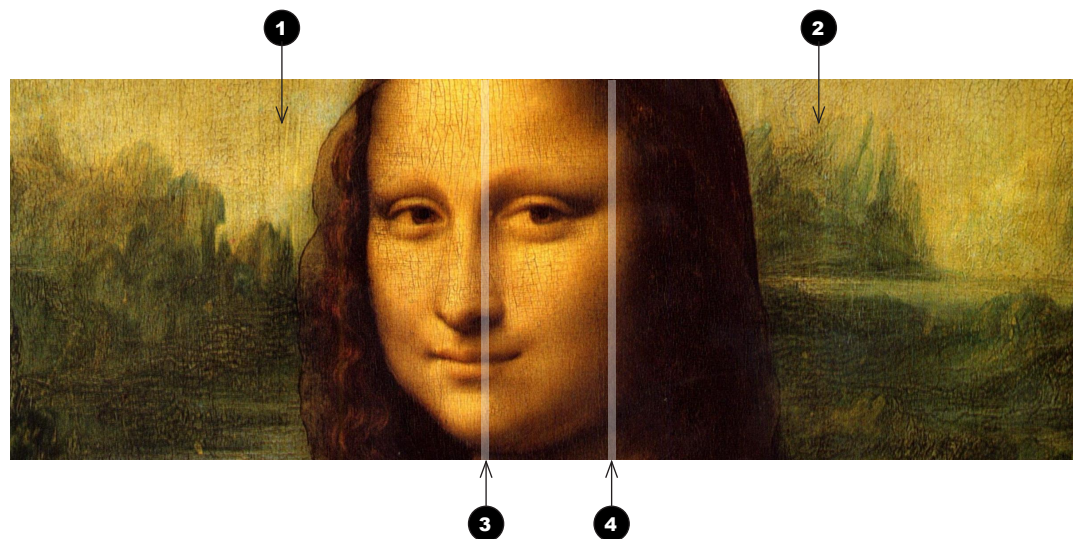**Black Level Uplift**

Top	0	
Bottom	0	
Left	0	
Right	0	
All	0	
Red	0	
Green	0	
Blue	0	

Notes

Enable **Align Pattern** from the **Edge Blend** menu to see the black level uplift area.



Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

3D menu

Use this menu to enable, disable and set up 3D input, as follows:

- **3D Format** — **Off**, **Auto**, **Side by Side (Half)**, **Top and Bottom**, **Dual Pipe** and **Frame Sequential**.
- **DLP Link** — **Off** / **On**.
DLP Link On emits a sync pulse for the 3D glasses via the projected image.
DLP Link Off will send the sync pulse to the sync out connector to use with an external third party emitter.
- **Eye Swap** — **Normal** and **Reverse** (set to **Reverse** if the left- and right-eye images are displayed in the wrong order)
- **Dark Time** — **0.65 ms**, **1.3 ms** and **1.95 ms**. Set to reduce the effect of images overlapping while the glasses are switching.

3D Sync

- **Offset** — use the **LEFT** ◀ and **RIGHT** ▶ arrow buttons to compensate for signal processing delays in the projector.
- **Reference** — **External**, **Internal** and **Auto**.

3D	
3D Format	Auto
DLP Link	Off
Eye Swap	Normal
Dark Time	1.95 ms
3D Sync	
Offset	100 
Reference	Internal

Notes

-  For further information about supported 3D formats, see [3D connections](#) in the **Connection Guide**.
-  If **3D Format** is set to **Off**, all other 3D settings will be unavailable.
-  Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.
-  **Frame Sequential** is supported on the HDMI, DVI-D and DisplayPort inputs only.
-  3D video is only possible on the HDMI, HDBaseT, DisplayPort and DVI inputs.
-  The **Frame Packing** format is automatically detected by the projector.
-  See also [3D types](#) and [Some 3D settings explained](#) further in this guide.

3D menu continued from previous page**3D types**

In most situations you can use the **Auto** setting to have the projector automatically detect the format. Otherwise, consider the notes below to help you set up the 3D input manually.

The following 3D formats are supported:

- **Dual Pipe (LEFT and RIGHT)**

The left and right eye images are delivered on two separate HDMI links, which the projector will interleave for 3D display.

- **Frame Packing**

This format will be detected, re-synchronised, frame-multiplied and displayed at 96 Hz with the left eye / right eye dominance automatically extracted from the video data. You need to optimize **Dark Time** and **Sync Delay** manually to suit your chosen switching glasses.






- **Top and Bottom**

Sets the projector to reformat the video frames and map them to the display with the left eye / right eye dominance automatically extracted from the video data. You need to optimize **Dark Time** and **Sync Delay** manually to suit your chosen switching glasses.

- **Side by Side (Half):** interlaced and progressive, 50 and 60Hz


The side-by-side image will be de-interlaced (if appropriate), resized and then sequentially displayed at 100 or 120 Hz. The left eye / right eye dominance will be automatically extracted from the video data, however you will need to optimize **Dark Time** and **Sync Delay** manually to suit your chosen switching glasses.

Dark Time and **Sync Delay** need to be set only once, to optimize the image for the glasses in use.

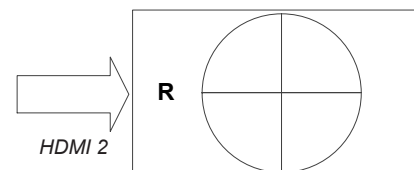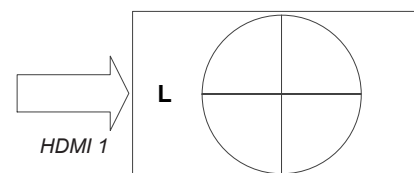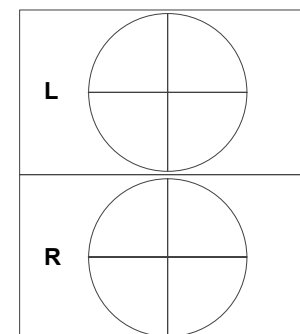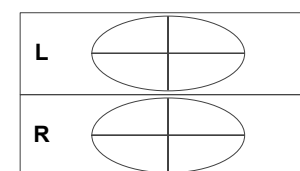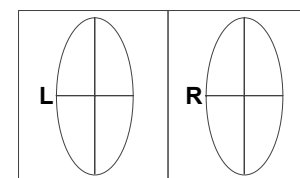**Dual Pipe****Frame Packing****Top-and-Bottom****Side-by-Side (Half)****Notes**



3D menu continued from previous page**Some 3D settings explained****Dark Time**

Ghosting can be caused by the left and right images overlapping during the time that the ZScreen or 3D glasses are switching. **Dark Time** allows you to minimize this effect.

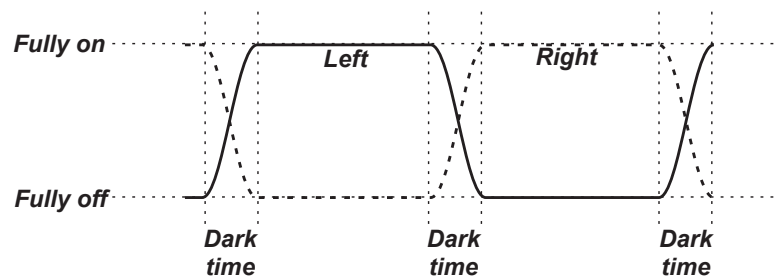**Eye Swap**


The outgoing 3D frames are in pairs - the dominant frame being presented first. You can determine which frame should be the dominant one.

By convention the default setting is **Left**.

Dominance Left**Dominance Right****Sync Delay**

The sync signal from the 3D server will be in phase with the frames generated by its graphics card. However, to compensate for processing delays in the projector,

Sync Delay introduces a delay to the sync output signal sent to the ZScreen or 3D glasses.

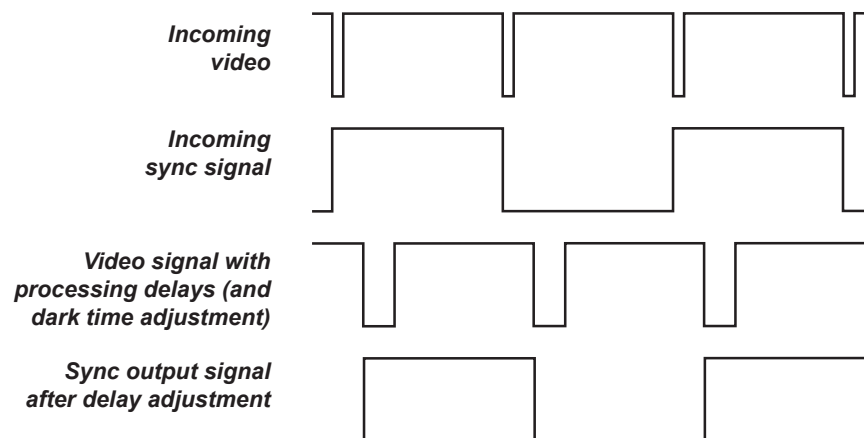**Notes**

In order to achieve maximum light output and a smooth grayscale, whilst eliminating ghosting, the following procedure is recommended:


1. Set **Dark Time** to a value appropriate to the glasses or ZScreen, say 1.3 ms or 1.95 ms.
2. Adjust **Sync Offset** time to eliminate ghosting and achieve a smooth grayscale.
3. Repeat steps 1 and 2 until the best result is obtained.

3D menu continued from previous page

Frame rate multiplication in 3D images

When displaying a low frame rate 3D video, the projector multiplies the frame rate to obtain a flicker-free image. For example, a 60Hz frame rate is doubled to 120 Hz, or a 48 Hz frame rate is tripled to 144 Hz.

Frame rate multiplication is an automatic process. It occurs in the background and cannot be modified by the user.

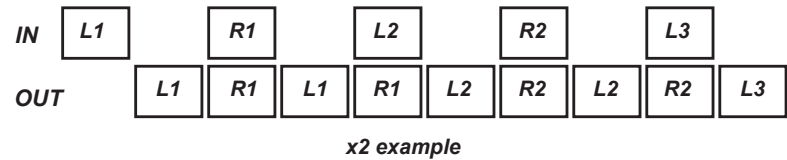


Notes

Laser menu

- **Power Mode**
 - **Eco** will automatically set the laser power to 80%.
 - **Normal** will set the power to 100%.
 - Set to **Custom** if you wish to adjust the power manually.
- **Power Level**

This setting is only available if **Power Mode** is set to **Custom**.

Choose a value between 20 and 100, ranging from 20% to 100% laser power.

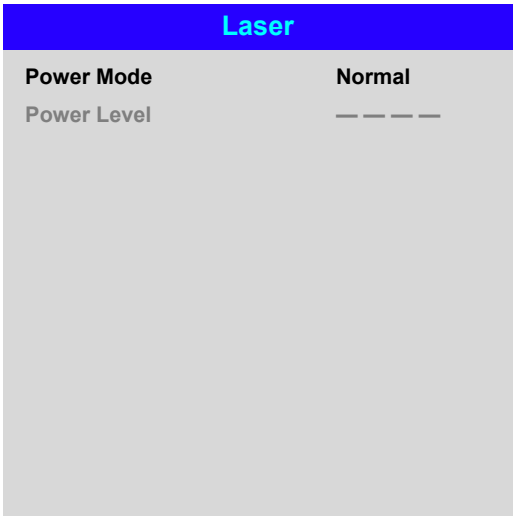

Notes

Setup menu

- **Orientation**
Choose from **Front Tabletop**, **Front Ceiling**, **Rear Tabletop**, **Rear Ceiling** and **Auto-front**.
- **Cooling Condition**
Choose from **Table**, **Ceiling**, **Freetilt** and **Auto**.
- **High Altitude**
Choose from **On** and **Auto**.
- **Screen Setting**
Choose from **16:10**, **16:9** and **4:3**.
- **ColorMax**
Set up user-defined color gamut values.
- **Power On/Off**
Access the submenu to set up automatic projector power on and power off.
- **Clock Adjust**
Access the submenu to set current date and local time.
- **Startup Logo**
Set this to **On** if you want the DP logo to show when the projector is first switched on.
- **Blank Screen**
Choose from **Logo**, **Black**, **Blue** and **White**.
- **Trigger1** and **Trigger 2**
Choose from **Screen**, **5:4**, **4:3**, **16:10**, **16:9**, **1.88**, **2.35**, **TheaterScope**, **Source**, **Unscaled** or **RS232** to determine what will cause each trigger output to activate.

Highlight the **DOWN ▼** arrow at the bottom of the page and press **ENTER/OK** to navigate to the second **Setup** menu page.

Setup	
Orientation	Auto-front
Cooling Condition	Auto
High Altitude	Auto
Screen Setting	16:10
ColorMax	▶
Power On/Off	▶
Clock Adjust	▶
Startup Logo	On
Blank Screen	Logo
Trigger-1	Off
Trigger-2	Off
▼	

Notes

 **Auto-front** automatically detects the projector's position and sets the orientation accordingly.

Setup menu continued from previous page


- **Auto Source**
If this setting is **On**, the projector will automatically search for an active input source.
- **Infrared Remote**
Set to **Off** if you wish to disable the remote control.
- **IR Code**
The projector and the remote control need a matching IR code: a two-digit number between **00** and **99**.

The default IR code is **00**. This is also a master code, which, if assigned to a remote, will work regardless of the value assigned to the projector.

To assign an IR code for the projector:
 1. Select **IR Code**.
 2. Use the **UP ▲** and **DOWN ▼** arrow buttons to change the values.**To assign an IR code for the remote:**
 1. Press and hold the **ADDR** button on the remote until the indicator starts flashing.
 2. Release the **ADDR** button and while the indicator is still flashing, enter a two-digit address using the numeric input buttons. The indicator will flash three times quickly to confirm the change.
- **IR Code Reset**
Use this command to unassign an IR code from the projector. This will revert the **IR Code** value to 00.

To unassign an IR code from the remote control,
 - Press and hold **ALT** and **ADDR** simultaneously until the indicator flashes to confirm the change.
- **OSD Settings**
Access this submenu to adjust the appearance and position of the on-screen display.
- **Memory**
Access this submenu to save up to four presets containing custom combinations of image settings, or to recall a saved preset.

Highlight the **UP ▲** arrow at the top of the page and press **ENTER/OK** to go back to the first **Setup** menu page.

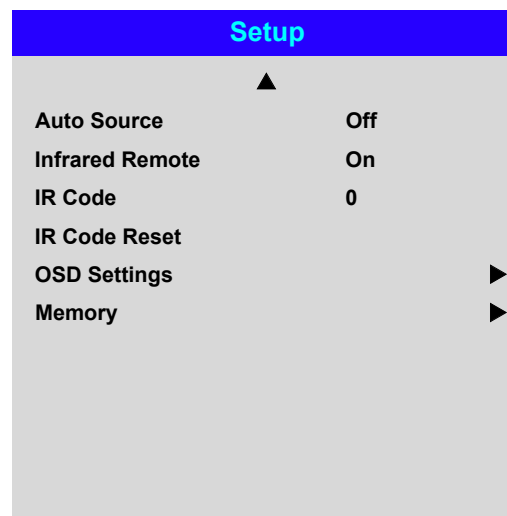**Notes**

If you turn the remote control off, you can only turn it back on again from the control panel or via the **Projector Controller** application.

The **Projector Controller** software is available for download from the Digital Projection website, free of charge.



A wired remote control will also be disabled if **Infrared Remote** is set to **Off**.

Color menu continued from previous page**ColorMax Setting**

ColorMax Setting permits seven point color matching of red, green, blue, yellow, cyan, magenta and white.

You can enter your own gamut values here, or edit values you have imported using the **Projector Controller** software.

Defining your own colorspace with individual x and y coordinates for each color enables you to match not only the whites but each individual color as well.

Highlight the submenu you wish to open and press **ENTER/OK** to confirm your choice.

Measured Data / Target Data

1. Use the **UP ▲** and **DOWN ▼** arrow buttons to highlight a color, then use the **LEFT ◀** and **RIGHT ▶** arrow buttons to navigate to the **x** or **y** coordinate.
2. Use the **UP ▲** and **DOWN ▼** arrow buttons to increase and decrease the value, respectively.
3. Exit edit mode:
 - press **ENTER/OK**, if you want to save the edited values.
 - press **EXIT**, if you do not wish to save the edited values
4. If necessary, highlight another color and repeat the procedure.

Measured Data			
Red	x: 0.658	y: 0.339	
Green	x: 0.315	y: 0.662	
Blue	x: 0.146	y: 0.043	
White	x: 0.276	y: 0.283	

ColorMax Setting			
Measured Data			▶
Target Data – User 1			▶
Target Data – User 2			▶
Reset			

Target Data – User 1			
Red	x: 0.640	y: 0.390	
Green	x: 0.300	y: 0.600	
Blue	x: 0.150	y: 0.060	
Yellow	x: 0.419	y: 0.505	
Cyan	x: 0.225	y: 0.329	
Magenta	x: 0.321	y: 0.154	
White	x: 0.285	y: 0.302	

Notes

The **Projector Controller** software is available for download from the Digital Projection website, free of charge.



This tool is best used in conjunction with a specialized light meter (a photo spectrometer) to measure color parameters within a particular installation. However, the preloaded generic factory default data set is designed to give more than satisfactory results.

Setup menu continued from previous page**Power On/Off**

- Auto Power Off**

Set this to On if you want the projector to go into STANDBY mode when no input source is detected for 20 minutes.

- Auto Power On**

Set this to **On** if you want the projector to start up immediately when the mains is connected.

Set this to **Off** if you want the projector to go into STANDBY mode when the mains is connected. In this case, the projector will not start up until the **POWER** button is pressed on the control panel or the **ON** button is pressed on the remote control.



- Scheduled on/off**

Access this submenu to create a weekly schedule for automatic on and off times:

- Set a schedule:

- Use the **UP ▲** and **DOWN ▼** arrow buttons to highlight a row, then press **ENTER/OK** to enable edit mode.
- Within a row, navigate with the **LEFT ◀** and **RIGHT ▶** arrow buttons. Set values with the **UP ▲** and **DOWN ▼** arrow buttons.
- To exit edit mode, press **ENTER/OK**. Alternatively, press **EXIT** if you don't want the changes to take effect. Move to another row using the **UP ▲** and **DOWN ▼** arrow buttons.

- To enable the schedule, set **Schedule** to **On**.

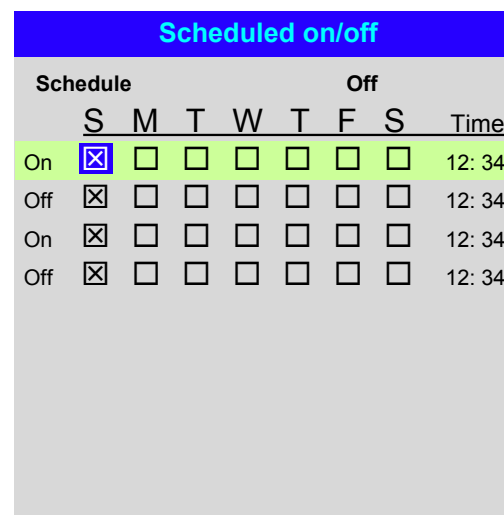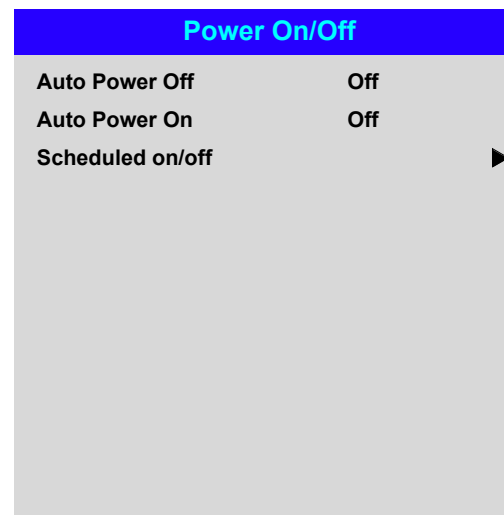**Notes**

Setup menu continued from previous page

Clock Adjust

Use this menu to set date (in **dd:MM:yyyy** format), time (in **HH:mm** format) and time zone.

The date and time set here will affect any schedule created within the **Power On/Off** menu.

Clock Adjust	
Date (dd:MM:yyyy)	20:11:2015
Time (HH:mm)	14:00
Time Zone	UTC 0

Notes

*Setup menu continued from previous page***OSD Settings**

- **Language** sets the OSD language.
- **Menu Position** determines where the OSD should appear on the screen when activated.
- **Menu Transparency** sets OSD transparency between **0%** (no transparency), **25%**, **50%** and **75%**.
- **Time Out** determines how long the OSD should remain on screen if no buttons are pressed. Choose **Always On** to disable this feature.
- **Message Box** determines whether projector status messages should appear on the screen.

Memory

The current image settings can be saved as a preset, which you can recall later. The default settings can be recalled at any time as well.

Up to four custom presets can be stored for each input.

The following settings are saved in a preset:

- From the **Image** menu — **Gamma**, **Brightness**, **Contrast**, **Saturation**, **Hue**, **Sharpness** and **Noise Reduction**
- From the **Color** menu — **Color Space**, **Color Mode**, **ColorMax**, **Color Temperature**, **Dynamic Black**, **RGB Lift** and **RGB Gain**
- From the **Geometry** menu — **Aspect Ratio** and **Overscan**

To recall a saved preset:

- Select **Recall Memory** and press **ENTER/OK**, then select a preset from **Preset A** to **Preset D**. Select **Default** to load factory default values.

To save a preset:

- Select **Save Settings** and press **ENTER/OK**, then choose from **Preset A**, **Preset B**, **Preset C** and **Preset D**.

OSD Settings

Language	English
Menu Position	Center
Menu Transparency	0
Time Out	30 Seconds
Message Box	On

Memory

Recall Memory	Default
Save Settings	Preset A

Notes

Presets from one input cannot be applied to another input.

Network menu

- **Network Mode**

Choose between **Projector Control** and **Service**.

- **Standby Power**

If this setting is **On**, the LAN socket remains active when the projector is in STANDBY mode. If the setting is **Off**, the LAN socket is disabled when the projector is in STANDBY mode.

- **DHCP, IP, Subnet Mask, Gateway, DNS**

Set **DHCP** to **On** if the IP address is to be assigned by a DHCP server, or **Off** if it is to be set here.

If **DHCP** is **On**, it will not be possible to edit **IP Address**, **Subnet Mask**, **Gateway** or **DNS**.

If **DHCP** is set to **Off**, edit **IP Address**, **Subnet Mask**, **Gateway** and **DNS** as required.

- **MAC**

This field is read-only.

- **AMX**

Switch on or off.

Network

Network Mode	Projector Control
Standby Power	Off
DHCP	Off
IP	192 . 168 . 000 . 100
Subnet Mask	255 . 255 . 255 . 000
Gateway	000 . 000 . 000 . 000
DNS	000 . 000 . 000 . 000
MAC	00: 18: 27: 2d: f2: 06
AMX	Off

Notes

PIP menu

- **PIP**

Turn PIP on and off.

- **Source**

Select an input source for the PIP image.

Any combinations are possible between main and PIP input source, as long as the two inputs are **not** from the same group:

Group 1	Group 2
HDMI 1	HDMI 2
DVI	VGA
DisplayPort	COMP
HDBaseT	3G-SDI

- **Position**

Set the location of the PIP image on the screen. Choose from **Top-Left**, **Top-Right**, **Bottom-Left**, **Bottom-Right** and **PBP**.

PIP	
PIP	Off
Source	HDMI1
Position	Top-Left

Notes

Some settings may be unavailable depending on other settings. For more information, see [Possible Combinations Of Settings](#) further in this guide.

Information menu

This menu gives information about software and hardware configuration, input source and laser operating times. It also allows you to restore the factory default settings.

Signal Format

Information	
Model Name	E-Vision Laser 8500
Serial Number	X000XXXXX0000
Software Version 1	MD03-SE10-FE09
Software Version 2	LE07-14-RE04-3092
Active / PIP Source	HDMI2 / DVI
Signal Format	▶
Laser Hours	00041 HRS
System Status	▶
Thermal Status	▶
Factory Reset	

Signal Format	
Active Source	
Timing	1080p/60Hz
H Refresh	67.500 KHz
V Refresh	60.00 Hz
Pixel Clock	148.500 MHz
PIP Source	
Timing	576p/50Hz
H Refresh	31.250 KHz
V Refresh	50.00 Hz
Pixel Clock	27.0 MHz

Notes

*Information menu continued from previous page***System Status**

System Status	
Atmospheric Pressure	98988 Pa (116 m)
AC Voltage	160V – 264V
Ceiling Mode	0
Tilt Angle	4 deg
Portrait Angle	0 deg
Altitude Mode	Low
Laser Power	100%

Thermal Status

Thermal Status	
Inlet 1/2 Temp.	24 / 34 (C)
DMD Temp.	38 (C)
Laser 1/2 Temp.	49 / 42 (C)
Outside Temp.	32 (C)
Fan 1-3 Speed	1399 / 1402 / 1391
Fan 4-6 Speed	1410 / 1200 / 1205
Fan 7-9 Speed	1211 / 1407 / 1410
Fan 10-12 Speed	0 / 3005 / 3007
Fan 13-15 Speed	2986 / 2984 / 2984
Fan 16 Speed	3020 / NA / NA
Water Pump Speed	3506

Notes

Information menu continued from previous page

Factory Reset

To restore the factory default settings:

- 1. Navigate to **Factory Reset** and press **ENTER/OK**.
- 2. When prompted, press **ENTER/OK** to confirm your choice, or press **EXIT** to cancel.

Information

Model Name	E-Vision Laser 8500
Serial Number	X000XXXXX0000
Software Version 1	MD03-SE10-FE09

Factory Reset

WARNING
All user settings will be lost!

Press OK to confirm
Press Exit to cancel

Thermal Status ▶

Factory Reset OK

Notes

Possible Combinations Of Settings

Some OSD settings cannot be used in combination with others. The table below shows the possible combinations.

A tick (✓) means that the combination is possible. A cross (✕) means applying the new setting is impossible if the existing setting is being used. A number sign (#) means applying the new setting will disable the existing one.

New Setting Existing Setting	3D	Warp / Geometry	Blending	Picture Mode	Color Temp.	Overscan	Aspect Ratio	Digital Zoom	PIP	Dynamic Black
3D	✕	✓	✓	✕	✕	✕	✓	✕	✕	✕
Warp / Geometry	✓	✕	✓	✓	✓	✓	✓	✓	✓	✓
Blending	✓	✓	✕	✓	✓	✓	✓	✓	✓	✕
Picture Mode	#	✓	✓	✕	✓	✓	✓	✓	✓	✓
Color Temp.	#	✓	✓	✓	✕	✓	✓	✓	✓	✓
Overscan	#	✓	✓	✓	✓	✕	✓	✓	✓	✓
Aspect Ratio	✓	✓	✓	✓	✓	✓	✕	✓	✓	✓
Digital Zoom	#	✓	✓	✓	✓	✓	✓	✕	✓	✓
PIP	#	✓	✓	✓	✓	✓	✓	✓	✕	✓
Dynamic Black	#	✓	#	✓	✓	✓	✓	✓	✓	✕

Notes



E-Vision Laser 7500 Series

E-Vision Laser 8500 Series

High Brightness Digital Video Projector

► REFERENCE GUIDE




IN THIS GUIDE

The DMD™	75
Screen Requirements	77
Fitting the image to the DMD™	77
WUXGA images displayed full width.....	77
WUXGA images displayed with a height of 1080 pixels	78
WUXGA images displayed full height	79
Diagonal screen sizes.....	80
Fitting the image to the screen	81
Positioning the screen and projector.....	82
Positioning The Image	83
Frame Rates And Pulldowns Explained	85
Interlaced and progressive scan	85
Frame rates of image sources	85
Pulldowns - conversion into destination formats	86
2:3 (normal) pulldown	86
2:3:3:2 (advanced) pulldown	87
Appendix A: Lens Part Numbers	88
Appendix B: Supported Signal Input Modes	89
2D formats	89
3D formats	91
Appendix C: Glossary Of Terms	93

The DMD™


A DMD™ (Digital Micromirror Device™) is a true digital light modulator which utilises an array of up to 2.3 million moving aluminium mirrors, with each one representing a pixel in the final projected image. The outermost micromirrors in the array remain inactive (**pond of mirrors**) and are not used in constructing the image.

- 1 Casing
- 2 Light shield
- 3 Pond of mirrors
- 4 Array

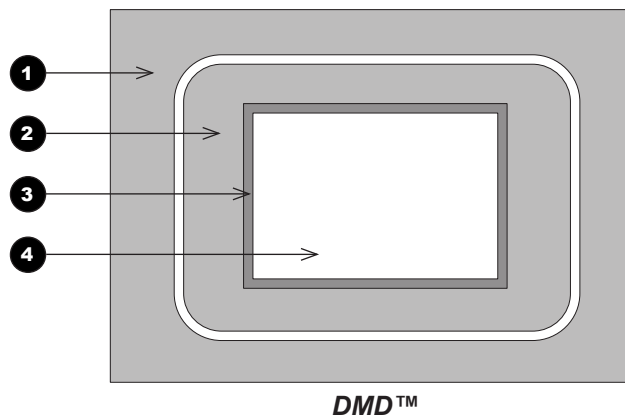

Each mirror element is suspended over address electrodes by a torsion hinge between two posts.


- 1 Support posts
- 2 Mirror element
- 3 Torsion hinges
- 4 Offset address electrode

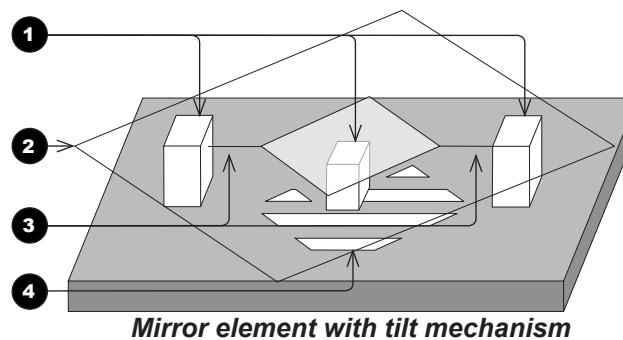

Notes


Depending on the voltage polarity applied, each mirror will either tilt to the left to produce a bright pixel or to the right for a dark pixel. When light is applied to the complete DMD™, only the light redirected from a mirror tilting to the left is projected.

- ➊ Projection lens
- ➋ Incoming light from the illumination module
- ➌ Mirror element tilted to the right
- ➍ Mirror element tilted to the left
- ➎ Reflected light, left tilt
- ➏ Light dump
- ➐ Reflected light, right tilt

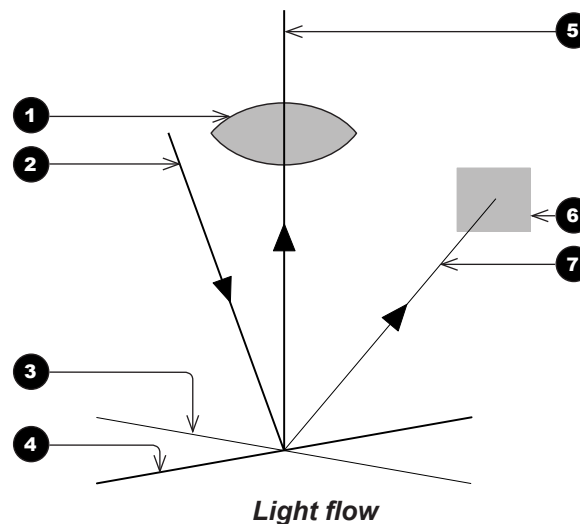

The projector optically filters white light from the illumination module into its constituent red, green and blue. Each color illuminates a separate DMD™ whose modulated output is then recombined with the other two to form the projected full color image.

- ➊ Illumination module
- ➋ Optical filtering of light into red, green and blue
- ➌ Projection lens
- ➍ DMD™ devices
- ➎ Full color image displayed on screen

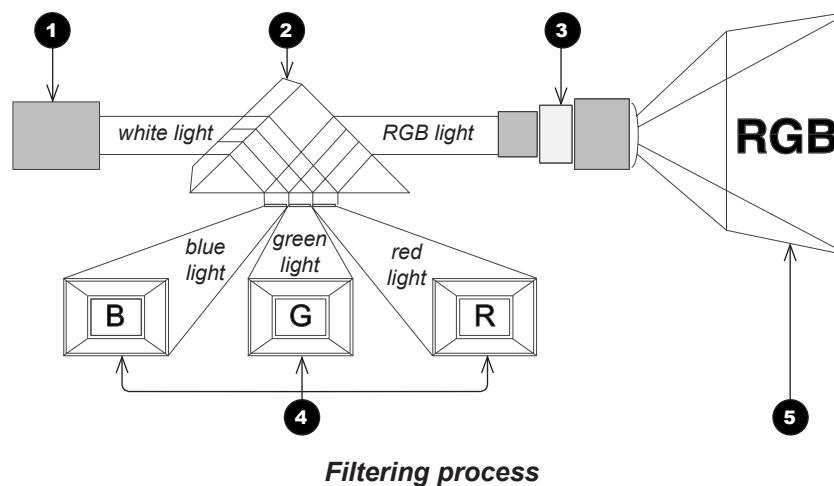


Notes

Screen Requirements

Fitting the image to the DMD™


If the source image supplied to the projector is smaller than the DMD™ resolution, the image will not fill the DMD™. The following examples show how a number of common formats may be displayed, depending on your DMD™ resolution.

WUXGA images displayed full width

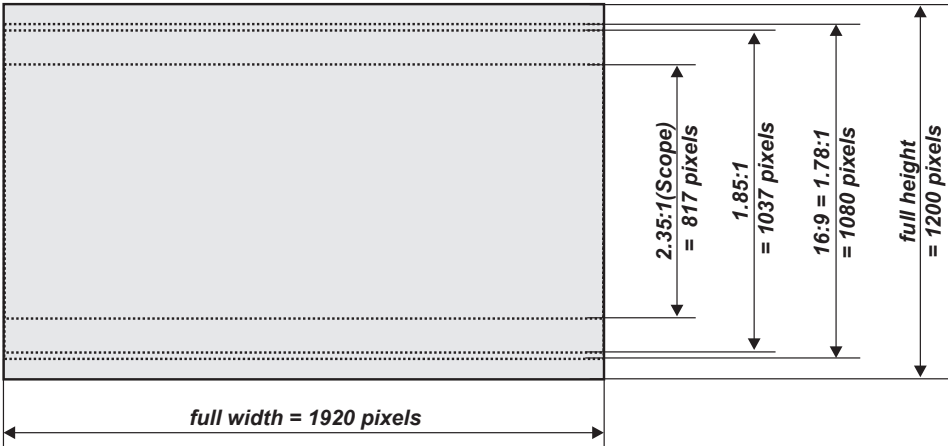


Notes

WUXGA images displayed with a height of 1080 pixels

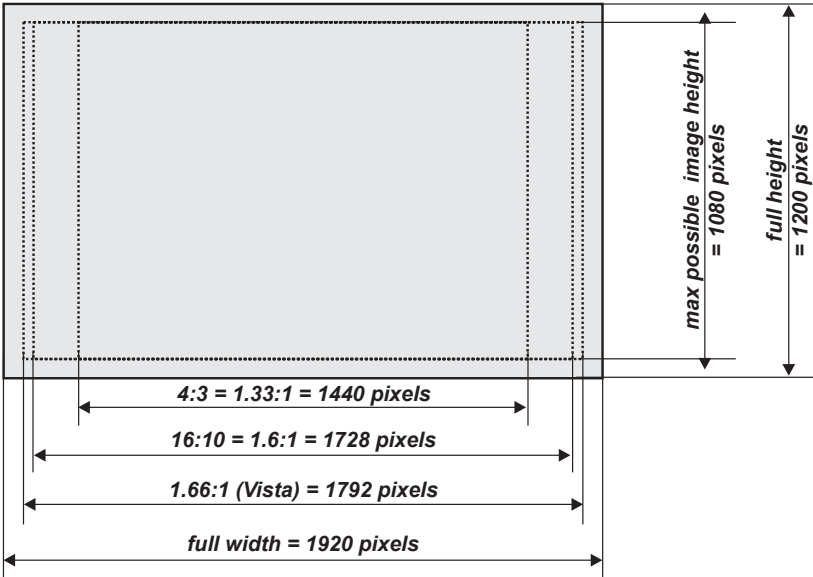

Notes

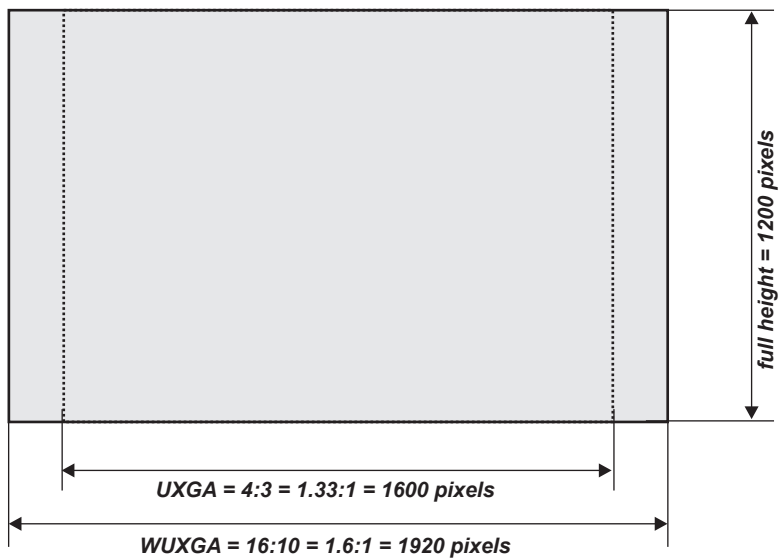WUXGA images displayed full height**Notes**

Only WUXGA or UXGA images can fill the full height of the DMD™, using all 1200 pixels without scaling.

Diagonal screen sizes

Screen sizes are sometimes specified by their diagonal size (D). When dealing with large screens and projection distances at different aspect ratios, it is more convenient to measure screen width (W) and height (H).

The example calculations below show how to convert diagonal sizes into width and height, at various aspect ratios.

2.35:1 (Scope)

$$W = D \times 0.92 \quad H = D \times 0.39$$

1.85:1

$$W = D \times 0.88 \quad H = D \times 0.47$$

16:9 = 1.78:1


$$W = D \times 0.87 \quad H = D \times 0.49$$

1.66:1 (Vista)

$$W = D \times 0.86 \quad H = D \times 0.52$$

16:10 = 1.6:1 (native aspect ratio for WUXGA projectors)

$$W = D \times 0.85 \quad H = D \times 0.53$$

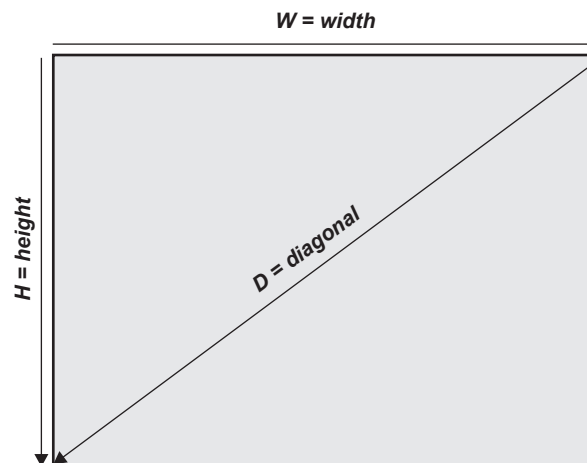**Notes**

Fitting the image to the screen

It is important that your screen is of sufficient height and width to display images at all the aspect ratios you are planning to use.

Use the conversion chart to check that you are able to display the full image on your screen. If you have insufficient height or width, you will have to reduce the overall image size in order to display the full image on your screen.

1 4:3 = 1.33:1

$$W = H \times 1.33, H = W \times 0.75$$

2 16:10 = 1.6:1

(native aspect ratio for WUXGA projectors)

$$W = H \times 1.6, H = W \times 0.625$$

3 1.66:1 (Vista)

$$W = H \times 1.66, H = W \times 0.6$$

4 16:9 = 1.78:1


$$W = H \times 1.78, H = W \times 0.56$$

5 1.85:1 (Flat)

$$W = H \times 1.85, H = W \times 0.54$$

6 2.35:1 (Scope)

$$W = H \times 2.35, H = W \times 0.426$$


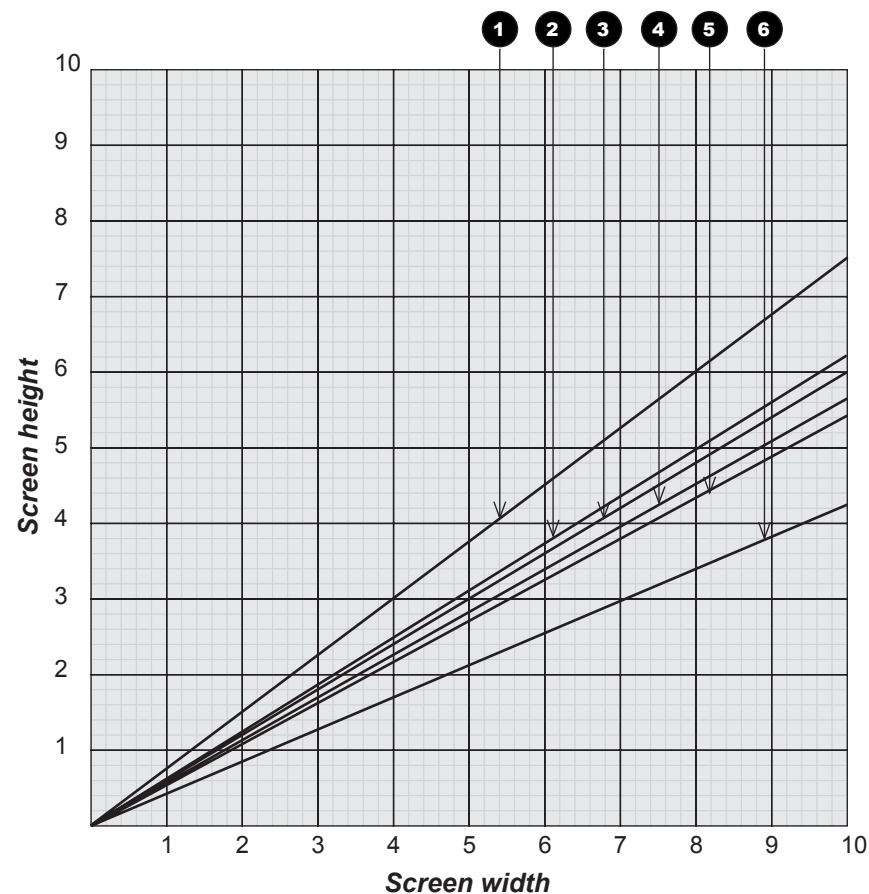


Notes

Positioning the screen and projector

For optimum viewing, the screen should be a flat surface perpendicular to the floor. The bottom of the screen should be 1.2 m (4 feet) above the floor and the front row of the audience should not have to look up more than 30° to see the top of the screen.

The distance between the front row of the audience and the screen should be at least twice the screen height and the distance between the back row and the screen should be a maximum of 8 times the screen height. The screen viewing area should be within a 60° range from the face of the screen.

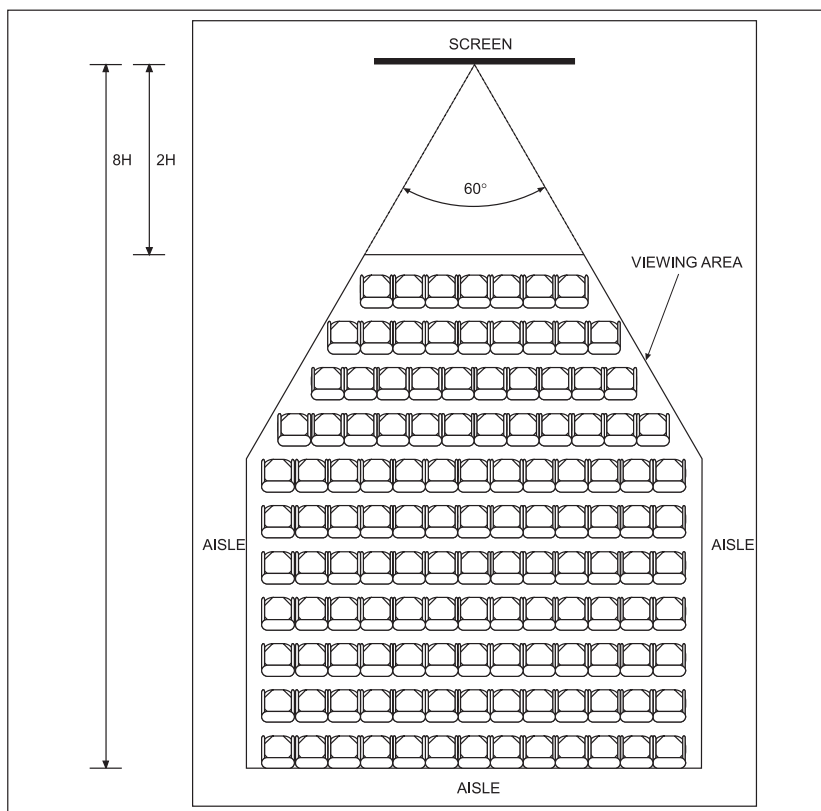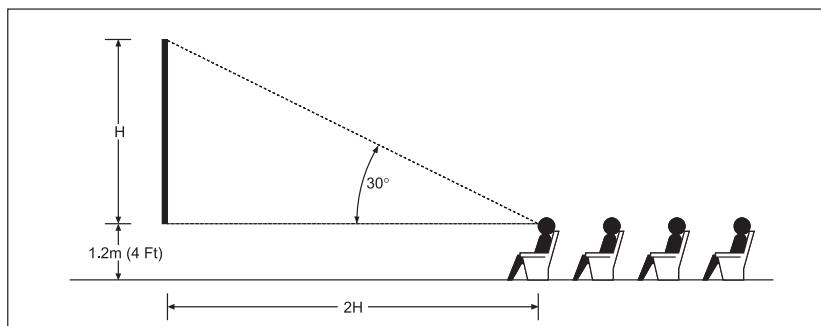

Notes



The projector should be installed as close to the power outlet as possible.

The power connection should be easily accessible, so that it can be disconnected in an emergency.

Ensure that there is at least 30 cm (12 in) of space between the ventilation outlets and any wall, and 10 cm (4 in) on all other sides.

Do not install the projector close to anything that might be affected by its operational heat, for instance, polystyrene ceiling tiles, curtains etc.






The image can be flipped for rear projection (see [Setup menu](#) in the **Operating Guide**) and displayed without the need for extra mirrors or equipment.

However, you must ensure that there is sufficient distance behind the screen for the projector to be correctly located.

Rear installation is generally more complicated and advice should be sought from your local dealer before attempting it.

Positioning The Image


The normal position for the projector is at the centre of the screen. However, you can set the projector above or below the centre, or to one side, and adjust the image using the **Lens shift** feature (known as **rising and falling front**) to maintain a geometrically correct image.

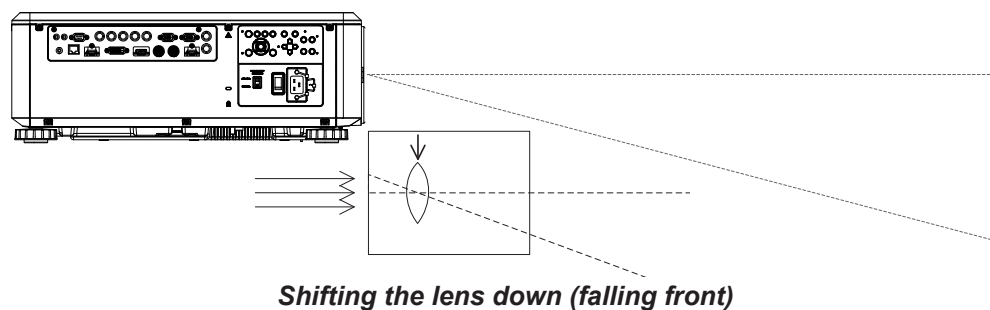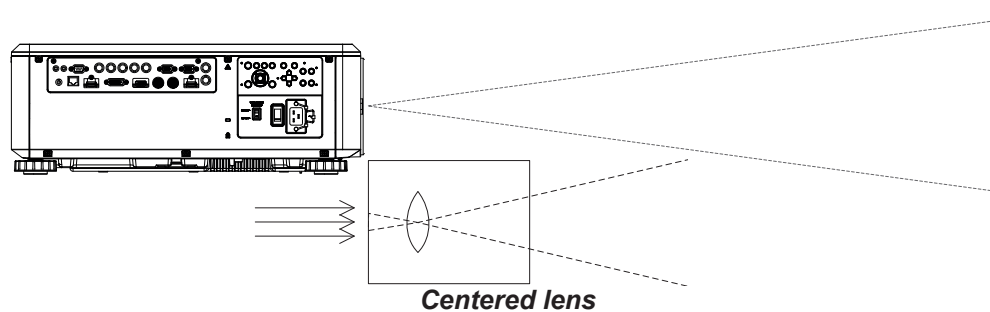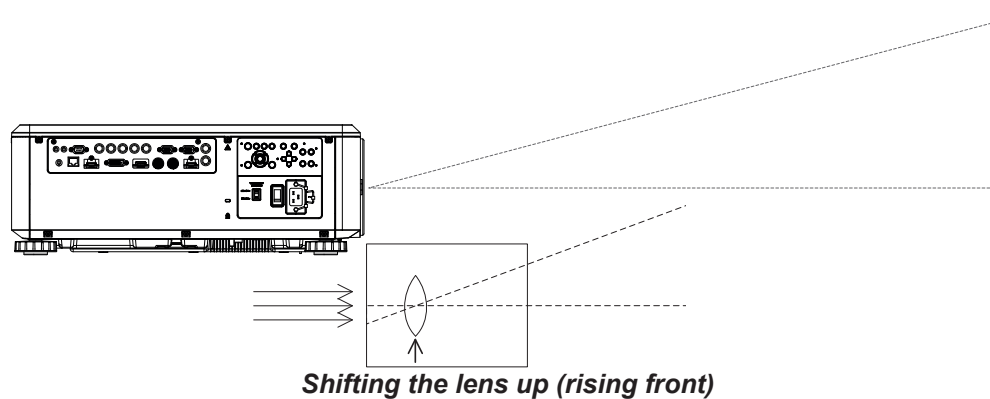


Notes

Any single adjustment outside the ranges specified on the following page may result in an unacceptable level of distortion, particularly at the corners of the image, due to the image passing through the periphery of the lens optics.

If the lens is to be shifted in two directions combined, the maximum range without distortion will be somewhat less, as can be seen in the illustrations below.

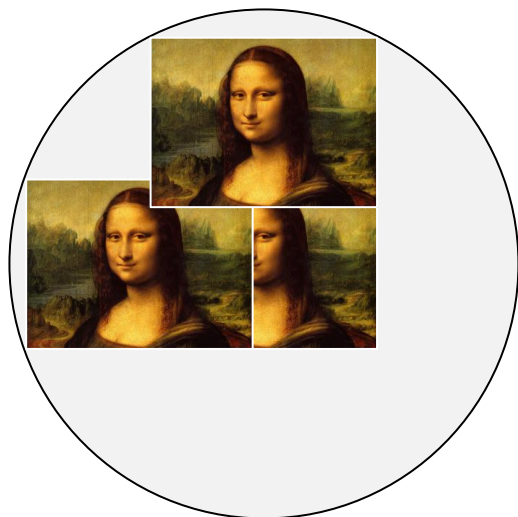

Full horizontal or vertical shift

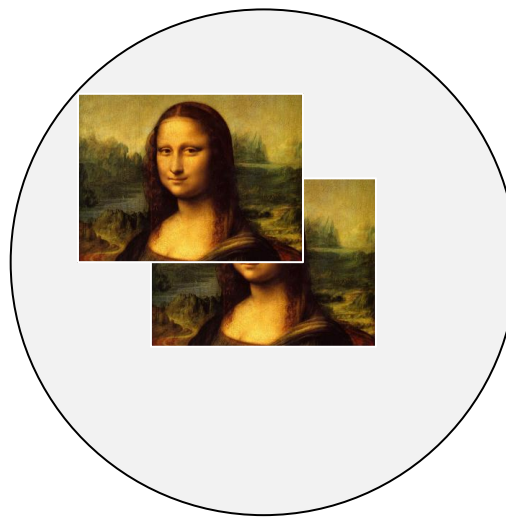

Combined shift is reduced

Notes

Frame Rates And Pulldowns Explained

Interlaced and progressive scan

A **progressive scan** is a method of updating the image by drawing all the lines of each frame in a sequence. In contrast, **interlaced video** alternately scans odd and even lines. In old analog TV interlacing was commonly used as a way of doubling the refresh rate without consuming extra bandwidth.

The following artifacts are common with interlaced video:

- edge tear (combing)

The image lands between two fields and blurs. This is commonly observed when viewing rapid lateral movement.

- aliasing (stair-stepping)

The texture of the image becomes populated with unrealistic patterns. Aliasing occurs because of differences between the original frame rate and the destination format.

- twitter

The image shimmers, for example when showing rolling credits. This happens when the image contains thin horizontal lines that only appear in one field.

Frame rates of image sources

Original analog films are made at 24 fps and the whole frame is projected at once. To eliminate flicker and create an impression of continuous movement, the projector blades divide the images so that the viewer sees 48 frames per second.

Interlaced video scans odd lines, then even. Two fields are blended into one image. NTSC video (60i) is 29.97 fps, or 59.94 fields per second.

24p video is progressive but without the benefit of projector blades dividing the images, so it looks jumpier on playback than film. 24p is the optimal format for projects that are finished on film.

30p is optimal for projects finished on video. It has fewer strobing issues than 24p in video playback.


Notes

Pulldowns - conversion into destination formats

Pulldowns are a method of converting a 24p source into a different destination format by adding extra frames to the source.

2:3 (normal) pulldown

This method is used to convert a 24p source (film) into a 60i destination (NTSC video) by adding two extra fields for every four frames, effectively increasing the frame rate to 30 fps. The frame is split into fields and then two fields are repeated for every four original frames as shown in the illustration below.

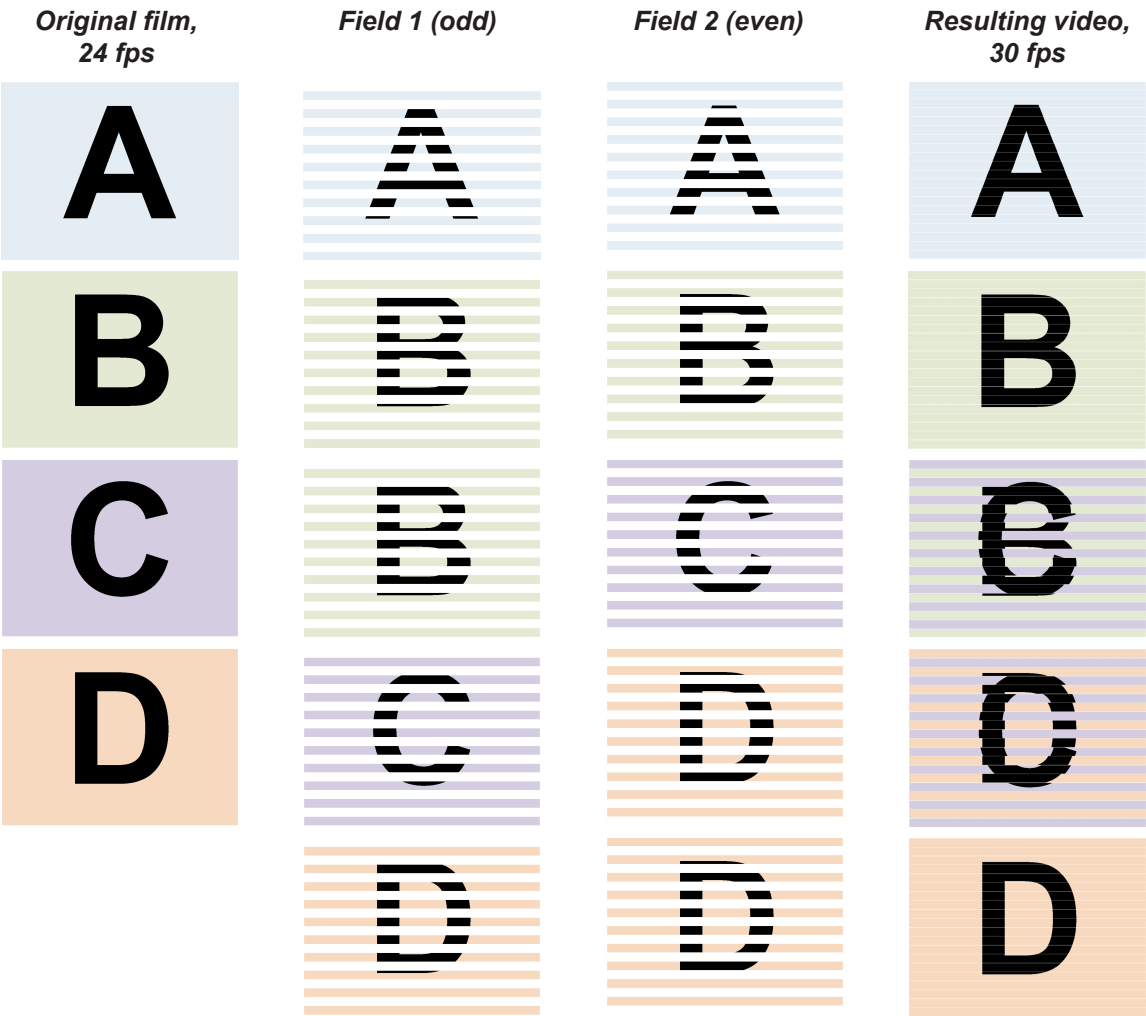


Notes

2:3:3:2 (advanced) pulldown

This method is very similar to the normal pulldown. Unlike the normal pulldown method, the resulting 30 fps video sequence contains only one frame containing fields from two different source frames.

The advantage of this method is that it is easier to reverse, if necessary.

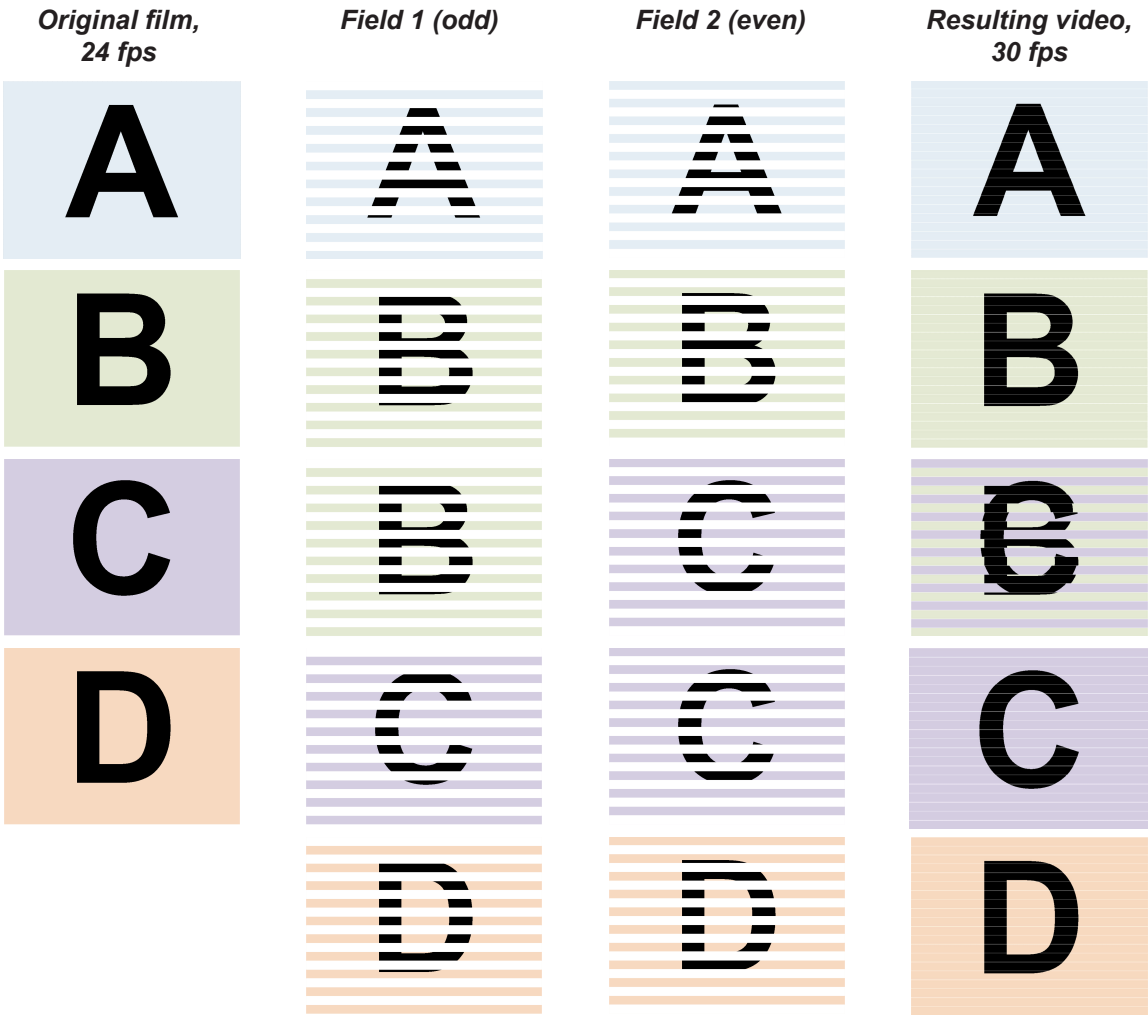

Notes

 The projector will use advanced pulldown on suitable video material, wherever possible.

Appendix A: Lens Part Numbers

Throw ratios	Part number	Focus range	Lens shift	Lens extension
0.38 : 1 fixed (UST)	117-341	0.82 m - 2.71 m	none	292.5 mm
0.75 - 0.93 : 1 zoom	115-339	1.02 m - 12.7 m	V: 0.5 (U) 0 (D) frame H: 0.1 (L) 0.1 (R) frame	59.4 mm
0.76 : 1 fixed	112-499	0.81 m - 5.08 m	none	30 mm
1.25 - 1.79 : 1 zoom	112-500	1.33 m - 11.73 m	V: 0.5 (U) 0 (D) frame H: 0.1 (L) 0.1 (R) frame	36.5 mm
1.72 - 2.27 : 1 zoom	112-501	1.83 m - 14.9 m	V: 0.5 (U) 0 (D) frame H: 0.1 (L) 0.1 (R) frame	10.8 mm
2.22 - 3.67 : 1 zoom	112-502	2.36 m - 24.2 m	V: 0.5 (U) 0 (D) frame H: 0.1 (L) 0.1 (R) frame	29.9 mm
3.58 - 5.38 : 1 zoom	112-503	3.8 m - 35.35 m	V: 0.5 (U) 0 (D) frame H: 0.1 (L) 0.1 (R) frame	46.7 mm
5.31 - 8.26 : 1 zoom	112-504	5.59 m - 54.8 m	V: 0.5 (U) 0 (D) frame H: 0.1 (L) 0.1 (R) frame	87.3 mm

Notes



Throw distance calculations are based on the distance from the outer end of the lens, which will vary from lens to lens.



The 0.38 : 1 fixed lens has no adjustable shift value. However, the lens has an inherent offset depending on image size. See the UST documentation published separately on the Digital Projection website.^f

Appendix B: Supported Signal Input Modes

2D formats

Standard	Resolution	Horizontal Frequency (kHz)	Frame Rate (Hz)	PCLK (MHz)	Component / 5BNC	VGA - RGBHV	5BNC - RGBHV	DisplayPort / DVI-D	HDMI / HD-BaseT				HD/SDI/3G	Remark
									RGB	YUV 8-bit	YUV 10-bit	YUV 12-bit		
PC	640x480	31.469	59.94	25.175		X	X	X	X					VESA DMT
	640x480	37.500	74.99	31.500		X	X	X	X					VESA DMT
	640x480	43.269	85	36.000		X	X	X	X					VESA DMT
	800x600	37.879	60.32	40.000		X	X	X	X					VESA DMT
	800x600	46.875	75	49.500		X	X	X	X					VESA DMT
	800x600	53.674	85.06	56.250		X	X	X	X					VESA DMT
	848x480	23.674	47.95	25.000		X	X	X	X					VESA CVT
	848x480	31.020	60	33.750		X	X	X	X					VESA DMT
	1024*768	48.363	60	65.000		X	X	X	X					VESA DMT
	1024*768	60.023	75	78.750		X	X	X	X					VESA DMT
	1024*768	68.677	85	94.500		X	X	X	X					VESA DMT
	1280x720	35.531	47.95	57.987		X	X	X	X					VESA GTF
	1280x1024	63.981	60.02	108.000		X	X	X	X					VESA DMT
	1280x1024	79.976	75.02	135.000		X	X	X	X					VESA DMT
	1280x1024	91.146	85.02	157.500		X	X	X	X					VESA DMT
	1600x1200	75.000	60	162.000		X	X	X	X					VESA DMT
	1920x1080	53.225	47.95	135.403		X	X	X	X					VESA CVT
	1680x1050	65.290	60	146.250		X	X	X	X					VESA DMT
	1920x1200 RB	61.816	50	158.250		X	X	X	X					VESA CVT
	1920x1200 RB	74.038	60	154.000		X	X	X	X					VESA CVT
	1400X1050	65.317	60	121.750		X	X	X	X					VESA DMT
	1366 x 768	47.712	60	85.500		X	X	X	X					VESA DMT

Notes

Standard	Resolution	Horizontal Frequency (kHz)	Frame Rate (Hz)	PCLK (MHz)	Component / 5BNC	VGA - RGBHV	5BNC - RGBHV	DisplayPort / DVI-D	HDMI / HD-BaseT				HD/SDI/3G	Remark
									RGB	YUV 8-bit	YUV 10-bit	YUV 12-bit		
PC (continued)	1440 x 900	55.935	60	106.500		X	X	X	X					VESA DMT
	1280 x 768	47.776	60	79.500		X	X	X	X					VESA DMT
	1280 x 800	49.702	60	83.500		X	X	X	X					VESA DMT
	1280 x 960	60.000	60	108.000		X	X	X	X					VESA DMT
Apple Mac	640x480	35.000	66.67	30.240		X	X	X	X					Apple MAC
	832x624	49.720	74.54	57.280		X	X	X	X					Apple MAC
SDTV	480i	15.734	59.94	13.500	X								X	
	1440x480i	31.468	60	27.000					X	X	X	X		
	1440x576i	31.250	50	27.000					X	X	X	X		
	576i	15.625	50	13.500	X								X	
EDTV	480p	31.469	59.94	27.000	X	X	X	X	X	X	X	X		
	576p	31.250	50	27.000	X	X	X	X	X	X	X	X		
HDTV	1035i	33.750	60	74.250	X	X	X	X	X	X	X	X	X	
	1080i	28.125	50	74.250	X	X	X	X	X	X	X	X	X	
	1080i	33.716	59.94	74.176	X	X	X	X	X	X	X	X	X	
	1080i	33.750	60	74.250	X	X	X	X	X	X	X	X	X	
	720p	37.500	50	74.250	X	X	X	X	X	X	X	X	X	
	720p	44.955	59.94	74.176	X	X	X	X	X	X	X	X	X	
	720p	45.000	60	74.250	X	X	X	X	X	X	X	X	X	
	1080p	26.973	23.98	74.176	X	X	X	X	X	X	X	X	X	
	1080p	27.000	24	74.250	X	X	X	X	X	X	X	X	X	
	1080p	28.125	25	74.250	X	X	X	X	X	X	X	X	X	
	1080p	33.716	29.97	74.176	X	X	X	X	X	X	X	X	x	
	1080p	33.750	30	74.250	X	X	X	X	X	X	X	X	X	
	1080p	56.250	50	148.500	X	X	X	X	X	X	X	X	X	

Notes

Standard	Resolution	Horizontal Frequency (kHz)	Frame Rate (Hz)	PCLK (MHz)	Component / 5BNC	VGA - RGBHV	5BNC - RGBHV	DisplayPort / DVI-D	HDMI / HD-BaseT				HD/SDI/3G	Remark
									RGB	YUV 8-bit	YUV 10-bit	YUV 12-bit		
HDTV (continued)	1080p	67.433	59.94	148.352	X	X	X	X	X	X	X	X	X	
	1080p	67.5	60	148.500	X	X	X	X	X	X	X	X	X	
PsF formats	1080sf	33.75	30	74.250									X	
	1080sf	28.125	25	74.250										

3D formats

Standard	Resolution	V-Freq (Hz)	V-Total	H-Freq (kHz)	HDMI1/2	DisplayPort / DVI-D	HB Dual-pipe HDMI (*1)	HB DisplayPort (*1)	Remarks
720p50 Frame Packing	1280x720	50.00	1470	37.50	✓				*3
720p59 Frame Packing	1280x720	59.94	1470	44.96	✓				*3
720p60 Frame Packing	1280x720	60.00	1470	45.00	✓				*3
720p50 Top-and-Bottom	1280x720	50.00	750	37.50	✓	✓			*3
720p59 Top-and-Bottom	1280x720	59.94	750	44.96	✓	✓			*3
720p60 Top-and-Bottom	1280x720	60.00	750	45.00	✓	✓			*3
1080p23 Frame Packing	1920x1080	23.98	2205	26.97	✓				
1080p24 Frame Packing	1920x1080	24.00	2205	27.00	✓				
1080i50 Side-by-Side (Half)	1920x1080	50.00	1125	56.25	✓	✓			*3
1080i59 Side-by-Side (Half)	1920x1080	59.94	1125	67.43	✓	✓			*3
1080i60 Side-by-Side (Half)	1920x1080	60.00	1125	67.50	✓	✓			*3

Notes



Remarks:

*1: HB(High Bandwidth) mode without warping/blending.

*2: 8-bit / color.

*3: Frame drop at scaler and frame doubling at formatter. Sources greater than 60 fps are processed at half the frame rate, then frame doubled.

Standard	Resolution	V-Freq (Hz)	V-Total	H-Freq (kHz)
1080p50 Side-by-Side (Half)	1920x1080	50.00	1125	56.25
1080p59 Side-by-Side (Half)	1920x1080	59.94	1125	67.43
1080p60 Side-by-Side (Half)	1920x1080	60.00	1125	67.50
1080p50 Top-and-Bottom	1920x1080	50.00	1125	56.25
1080p59 Top-and-Bottom	1920x1080	59.94	1125	67.43
1080p60 Top-and-Bottom	1920x1080	60.00	1125	67.50
1080p50 Frame Sequential	1920x1080	50.00	1125	56.25
1080p59 Frame Sequential	1920x1080	59.94	1125	67.43
1080p60 Frame Sequential	1920x1080	60.00	1125	67.50
1080p100 Frame Sequential	1920x1080	100.00	1125	112.50
1080p120 Frame Sequential	1920x1080	120.00	1125	135.00
WUXGA_100_RB Frame Sequential	1920x1200	100.00	1258	125.72
WUXGA_120_RB Frame Sequential	1920x1200	120.00	1271	152.40
1080p23 Dual Pipe	1920x1080	23.98	1125	26.97
1080p24 Dual Pipe	1920x1080	24.00	1125	27.00
1080p25 Dual Pipe	1920x1080	25.00	1125	28.13
1080p30 Dual Pipe	1920x1080	30.00	1125	33.75
1080p50 Dual Pipe	1920x1080	50.00	1125	56.25
1080p59 Dual Pipe	1920x1080	59.94	1125	67.43
1080p60 Dual Pipe	1920x1080	60.00	1125	67.50
WUXGA_60_RB Dual Pipe	1920x1200	60.00	1235	74.04

HDMI1/2	DisplayPort / DVI-D	HB Dual-pipe HDMI (*1)	HB DisplayPort (*1)	Remarks
✓	✓			*3
✓	✓			*3
✓	✓			*3
✓	✓			*3
✓	✓			*3
✓	✓			*3
✓	✓			*3
✓	✓			*3
			✓	*2, *3
			✓	*2, *3
			✓	*3
			✓	*2, *3
		✓		
		✓		
		✓		
		✓		
		✓		*3
		✓		*3
		✓		*3
		✓		*3

Notes**Remarks:**

*1: HB(High Bandwidth) mode without warping/blending.

*2: 8-bit / color.

*3: Frame drop at scaler and frame doubling at formatter. Sources greater than 60 fps are processed at half the frame rate, then frame doubled.

Appendix C: Glossary Of Terms

1080p

An [HDTV resolution](#) which corresponds to 1920 x 1080 [pixels](#) (a widescreen [aspect ratio](#) of 16:9).

3D active glasses

Wireless battery-powered glasses with LCD shutters. Synchronization information is communicated to the glasses by means of an infrared (IR) or radio frequency (RF) emitter which is connected to the Sync Out terminal on the projector. IR or RF pulses are transmitted by the emitter to signal when the left eye and right eye images are being displayed. The glasses incorporate a sensor which detects the emitter's signal and synchronises the left and right eye shutters with the projected image.

3D passive glasses

Passive glasses do not require a power source to work. Light with left-hand polarisation can pass through the left lens and light with right-hand polarisation can pass through the right-hand lens. These glasses are used in conjunction with another device which polarizes the image, such as a [ZScreen](#).

Adjust lines

A pattern applied to the image where its edge is to be blended with another image. Adjust lines are used to position the projectors in the array during the [edge blend](#) process.

Anamorphic lens

A special lens which, when used with the [TheaterScope aspect ratio](#), allows watching 2.35:1 content packed in a 16:9 source.

Aperture

The opening of the lens that determines the angle through which light travels to come into focus.

Notes

Aspect ratio

The proportional relationship between the width and the height of the projected image. It is represented by two numbers separated by a colon, indicating the ratio of image width and height respectively: for example, 16:9 or 2.35:1.

Not to be confused with [resolution](#).

Blanking (projection)

The ability to intentionally turn off, that is, set to black, areas around the edges of the projected image. It is sometimes referred to as “curtains” since it can be used to blank an area of image that literally falls on the curtains at the side of the screen in a movie theater. Usually no image resizing or geometric correction takes place and the “blanked” part of the image is lost.

Not to be confused with horizontal and vertical [blanking \(video signal\)](#).

Blanking (video signal)

The section of the video signal where there is no active video data.

Not to be confused with [blanking \(projection\)](#).

Blend region

The area of the image that is to overlap with another image in an [edge blend](#) setup. Sometimes called *overlapping region*.

Brightness (electronic control)

A control which adds a fixed intensity value to every [pixel](#) in the display, moving the entire range of displayed intensities up or down, and is used to set the black point in the image (see [Contrast](#)). In [Component Video](#) signals, brightness is the same as [luminance](#).

Brightness (optical)

Describes how ‘bright’ an image that is projected onto a screen appears to an observer.

C

See [Chrominance](#).

Notes

Chrominance

Also known as '**C**', this is the component, or pair of components, of a **Component Video** signal which describes **color difference** information.

Color difference

In **Component Video** signals, the difference between specified colors and the **luminance** component. Color difference is zero for monochrome images.

Color gamut

The spectrum of color available to be displayed.

Color temperature

The position along the black body curve on the chromaticity diagram, normally quoted in Kelvin. It takes into account the preset values for color balance in the service set-up to take up the variations in the prism. The projector allows you to adjust this temperature (i.e. adjust the picture color temperature).

Component video

A three-wire or four-wire video interface that carries the signal split into its basic **RGB** components or **luminance (brightness)** and two-**color-difference** signals (**YUV**) and **synchronization** signals.

Contrast (electronic control)

The adjustment of the white point of the image without affecting the black point. This increases the intensity range of the displayed image.

Contrast (optical)

The intensity difference between the darkest and lightest areas of the screen.

Cr, Cb

Color difference signals used with '**Y**' for digital **Component Video** inputs. They provide information about the signal color. Not to be confused with **Pr, Pb**.

Notes

Crop

Remove part of the projected image.

Alternatively, fit an image into a frame with a different [aspect ratio](#) by removing part of the image. The image is resized so that either its length or its width equals the length or width of the frame, while the other dimension has moved outside the frame; the excess area is then cut out.

Dark time

The time inserted between [frames](#) when using [3D active glasses](#), to avoid [ghosting](#) caused by switching time between left and right eye.

DDC (Display Data Channel)

A communications link between the source and projector. DDC is used on the HDMI, DVI and VGA inputs. The link is used by the source to read the [EDID](#) stored in the projector.

Deinterlacing

The process of converting [interlaced](#) video signals into [progressive](#) ones.

DHCP (Dynamic Host Configuration Protocol)

A network protocol that is used to configure network devices so that they can communicate on an IP network, for example by allocating an IP address.

DMD™ (Digital Micromirror Device™)

The optical tool that transforms the electronic signal from the input source into an optical image projected on the screen. The DMD™ of a projector has a fixed [resolution](#), which affects the [aspect ratio](#) of the projected image.

A Digital Micromirror Device™ (DMD™) consists of moving microscopic mirrors. Each mirror, which acts as a [pixel](#), is suspended between two posts by a thin torsion hinge. It can be tilted to produce either a bright or dark pixel.

Edge blend

A method of creating a combined image by blending the adjoining edges of two or more individual images.

Notes

Edge tear

An artifact observed in [interlaced video](#) where the screen appears to be split horizontally. Edge tears appear when the video feed is out of sync with the refresh rate of the display device.

EDID (Extended Display Identification Data)

Information stored in the projector that can be read by the source.

EDID is used on the HDMI, DVI and VGA inputs, allowing the source to automatically configure to the optimum display settings.

EDTV (Enhanced Definition Television)

A [progressive](#) digital television system with a lower resolution than [HDTV](#).

Field

In [interlaced video](#), a part of the image [frame](#) that is scanned separately. A field is a collection of either all the odd lines or all the even lines within the frame.

Frame

One of the many still images displayed in a sequence to create a moving picture. A frame is made of horizontal lines of [pixels](#). For example, a 1920x1080 frame consists of 1080 lines, each containing 1920 pixels. In analog video frames are scanned one at a time ([progressive scanning](#)) or split into [fields](#) for each field to be scanned separately ([interlaced video](#)).

Frame rate

The number of [frames](#) shown per second (fps). In TV and video, a frame rate is the rate at which the display device scans the screen to “draw” the frame.

Frame rate multiplication

To stop low [frame rate](#) 3D images from flickering, frame rate multiplication can be used, which increases the displayed frame rate by two or three times.

Notes

Gamma

A nonlinear operation used to code and decode [luminance](#). It originates from the Cathode Ray Tube technology used in legacy television sets.

Ghosting

An artifact in 3D image viewing. Ghosting occurs when an image intended for one eye is partially seen by the other eye.

Ghosting can be removed by optimizing the [dark time](#) and sync delay.

HDCP (High-bandwidth Digital Content Protection)

An encryption scheme used to protect video content.

HDTV (High Definition Television)

A television system with a higher [resolution](#) than [SDTV](#) and [EDTV](#). It can be transmitted in various formats, notably [1080p](#) and 720p.

Hertz (Hz)

Cycles per second.

Horizontal Scan Rate

The rate at which the lines of the incoming signal are refreshed. The rate is set by the horizontal [synchronization](#) from the source and measured in [Hertz](#).

Hs + Vs

Horizontal and vertical [synchronization](#).

Hue

The graduation (red/green balance) of color (applicable to [NTSC](#)).

Notes

Interlacing

A method of updating the image. The screen is divided in two [fields](#), one containing every odd horizontal line, the other one containing the even lines. The fields are then alternately updated. In analog TV interlacing was commonly used as a way of doubling the refresh rate without consuming extra bandwidth.

Interleaving

The alternation between left and right eye images when displaying 3D.

LED (Light Emitting Diode)

An electronic component that emits light.

Letterboxing

Black margins at the top and bottom of the image. Letterboxing appears when a wider image is packed into a narrower [frame](#) without changing the original [aspect ratio](#).

Lumen

A photometric unit of radiant power. For projectors, it is normally used to specify the total amount of emitted visible light.

Luminance

Also known as '[Y](#)', this is the part of a [Component Video](#) signal which affects the brightness, i.e. the black and white part.

Noise

Electrical interference displayed on the screen.

NTSC (National Television Standards Committee)

The United States standard for television - 525 lines transmitted at 60 [interlaced fields](#) per second.

Notes

OSD (on-screen display)

The projector menus allowing you to adjust various settings.

Overlapping region

See [blend region](#).

PAL (Phase Alternate Line)

The television system used in the UK, Australia and other countries - 625 lines transmitted at 50 [interlaced fields](#) per second.

Pillarboxing

Black margins at the left and right of the image. Pillarboxing appears when a narrower image is packed into a wider [frame](#) without changing the [aspect ratio](#).

Pixel

Short for *Picture Element*. The most basic unit of an image. Pixels are arranged in lines and columns. Each pixel corresponds to a micromirror within the [DMD™](#); resolutions reflect the number of pixels per line by the number of lines. For example, a [1080p](#) projector contains 1080 lines, each consisting of 1920 pixels.

Pond of mirrors

Area around the periphery of the [DMD™](#) containing inactive mirrors. The pond of mirrors may cause artifacts, for example during the [edge blending](#) process.

Pr, Pb

[Color difference](#) signals used with 'Y' for analog [Component Video](#) inputs. They provide information about the signal color. Not to be confused with [Cr, Cb](#).

Primary colors

Three colors any two of which cannot be mixed to produce the third. In additive color television systems the primary colors are red, green and blue.

Notes

Progressive scanning

A method of updating the image in which the lines of each [frame](#) are drawn in a sequence, without [interlacing](#).

Pulldown

The process of converting a 24 fps film footage to a video [frame rate](#) (25 fps for [PAL/SECAM](#), 30 fps for [NTSC](#)) by adding extra [frames](#). DP projectors automatically carry out reverse pulldown whenever possible.

Resolution

The number of [pixels](#) in an image, usually represented by the number of pixels per line and the number of lines (for example, 1920 x 1200).

RGB (Red, Green and Blue)

An uncompressed [Component Video](#) standard.

Saturation

The amount of color in an image.

Scope

An [aspect ratio](#) of 2.35:1.

SDTV (Standard Definition Television)

An [interlaced](#) television system with a lower [resolution](#) than [HDTV](#). For [PAL](#) and [SECAM](#) signals, the resolution is 576i; for [NTSC](#) it is 480i.

SECAM (Sequential Color with Memory)

The television system used in France, Russia and some other countries - 625 lines transmitted at 50 [interlaced fields](#) per second.

SX+

A display [resolution](#) of 1400 x 1050 pixels with a 4:3 screen [aspect ratio](#). (Shortened from SXGA+, stands for *Super Extended Graphics Array Plus*.)

Notes

Synchronization

A timing signal used to coordinate an action.

Test pattern

A still image specially prepared for testing a projection system. It may contain various combinations of colors, lines and geometric shapes.

TheaterScope

An [aspect ratio](#) used in conjunction with a special [anamorphic lens](#) to display 2.35:1 images packed into a 16:9 [frame](#).

Throw distance

The distance between the screen and the projector.

Throw ratio

The ratio of the [throw distance](#) to the screen width.

TRC (Throw ratio correction)

A special number used in calculating [throw distances](#) and [throw ratios](#) when the image does not fill the width of the [DMD™](#).

TRC is the ratio of the [DMD™ aspect ratio](#) to the image source aspect ratio:

$$TRC = \frac{DMD^{\text{TM}} \text{ aspect ratio}}{\text{Source aspect ratio}}$$

TRC is only used in calculations if it is greater than 1.

UXGA

A display [resolution](#) of 1600 x 1200 [pixels](#) with a 4:3 screen [aspect ratio](#). (Stands for *Ultra Extended Graphics Array*.)

Notes

Vertical Scan Rate

The rate at which the [frames](#) of the incoming signal are refreshed. The rate is set by the vertical [synchronization](#) from the source and measured in [Hertz](#).

Vignetting

Optical cropping of the image caused by the components in the projection lens. This can happen if too much offset is applied when positioning the image using the lens mount.

Vista

An [aspect ratio](#) of 1.66:1.

WUXGA

A display [resolution](#) of 1920 x 1200 [pixels](#) with a 16:10 screen [aspect ratio](#). (Stands for Widescreen *Ultra Extended Graphics Array*.)

Y

This is the [luminance](#) input ([brightness](#)) from a [Component Video](#) signal.

YUV

See [Pr](#), [Pb](#).

ZScreen

A special kind of light modulator which polarizes the projected image for 3D viewing. It normally requires that images are projected onto a silver screen. The ZScreen is placed between the projector lens and screen. It changes the polarization of the projected light and switches between left- and right-handed circularly polarized light at the field rate.

Notes



Contact Information:

Digital Projection Limited

Greenside Way, Middleton
Manchester M24 1XX, UK

*Registered in England No. 2207264
Registered Office: as above*

Tel (+44) 161 947 3300
Fax (+44) 161 684 7674

enquiries@digitalprojection.co.uk
service@digitalprojection.co.uk
www.digitalprojection.co.uk

Digital Projection Inc.

55 Chastain Road, Suite 115
Kennesaw, GA 30144, USA

Tel (+1) 770 420 1350
Fax (+1) 770 420 1360

powerinfo@digitalprojection.com
www.digitalprojection.com

Digital Projection China

中国 北京市 朝阳区 芍药居北里101号
世奥国际中心A座2006室(100029)

Rm A2006
ShaoYaoJu 101 North Lane
Shi Ao International Center
Chaoyang District
Beijing 100029, PR CHINA

Tel (+86) 10 84888566
Fax (+86) 10 84888566-805

techsupport@dp-china.com.cn
www.dp-china.com.cn

Digital Projection Asia

16 New Industrial Road
#02-10 Hudson Technocentre
Singapore 536204

Tel (+65) 6284-1138
Fax (+65) 6284-1238

www.digitalprojectionasia.com